


General Description

EXTERIOR/INTERIOR TRIM

1. General Description

A: COMPONENT

1. FRONT UNDER COVER

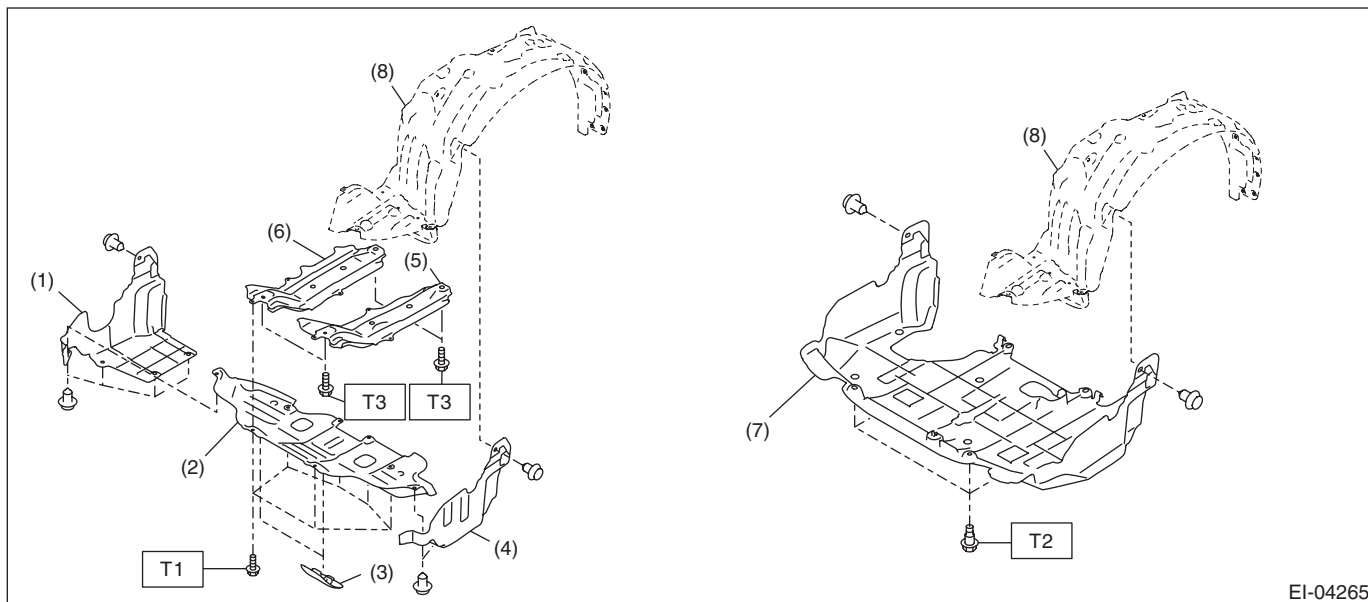

- | | |
|--|--|
| (1) Under cover COMPL - front RH (turbo model) | (5) Under cover - front guard LH (turbo model) |
| (2) Plate CTR - aluminum (turbo model) | (6) Under cover - front guard RH (turbo model) |
| (3) Cover - plate (turbo model) | (7) Under cover - front (non-turbo model) |
| (4) Under cover COMPL - front LH (turbo model) | (8) Mud guard - front |


Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 18 (1.84, 13.3)


T3: 32 (3.26, 23.6)

2. MUD GUARD

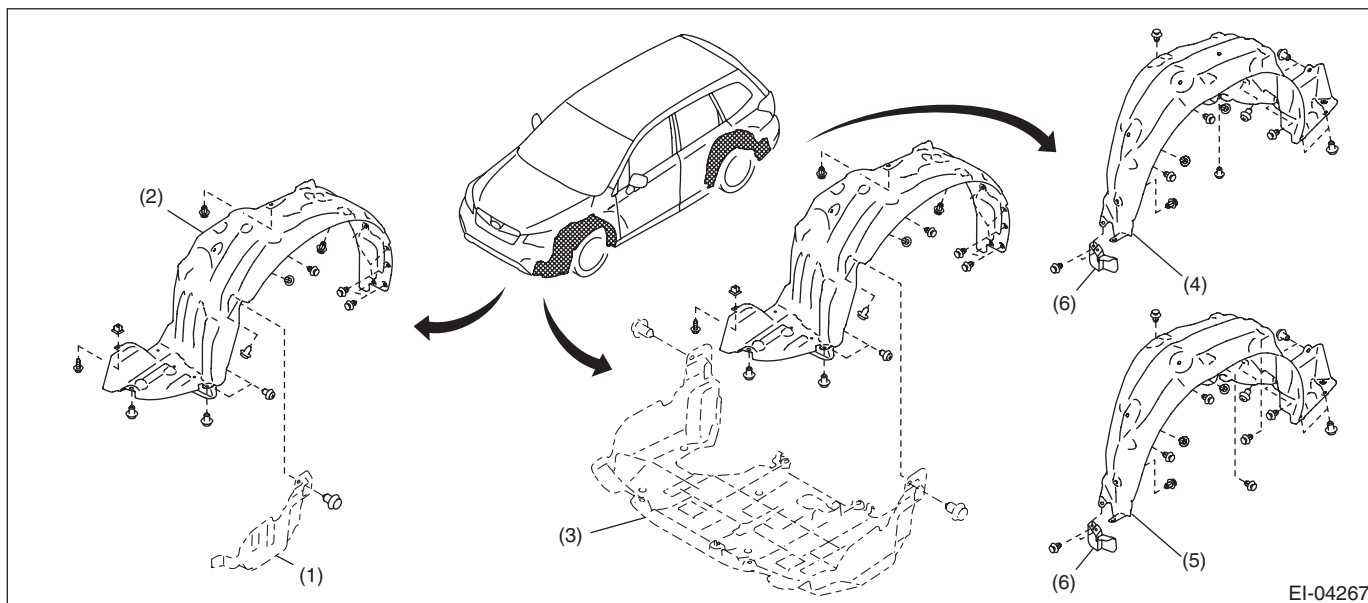

- | | | |
|--|---|---------------------------|
| (1) Under cover COMPL - front LH (turbo model) | (3) Under cover - front (non-turbo model) | (5) Mud guard - rear LH |
| (2) Mud guard - front | (4) Mud guard - rear RH | (6) Plate - air flap rear |

3. FLOOR UNDER PROTECTOR

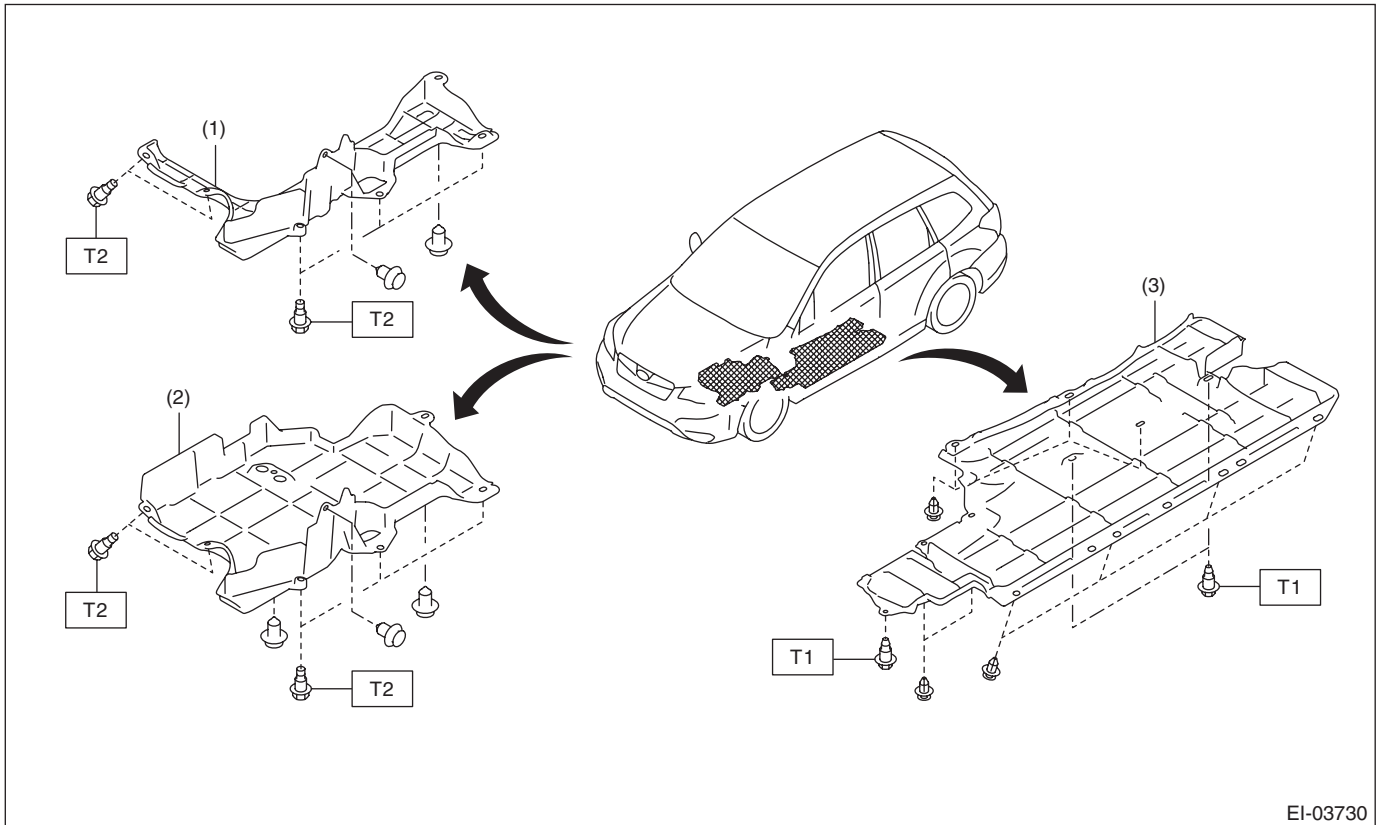

EI-03730

- (1) Under cover front - transmission
(CVT non-turbo model)
- (2) Under cover front - transmission
(MT non-turbo model)

- (3) Under cover - rear (turbo model)

Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 18 (1.84, 13.3)


4. FUEL TANK PROTECTOR

For exploded view of the fuel tank protector, refer to “FUEL TANK” of “FUEL INJECTION” section. <Ref. to FU(H4DO)-7, FUEL TANK, COMPONENT, General Description.>

General Description

EXTERIOR/INTERIOR TRIM

5. PROTECTOR OIL COVER

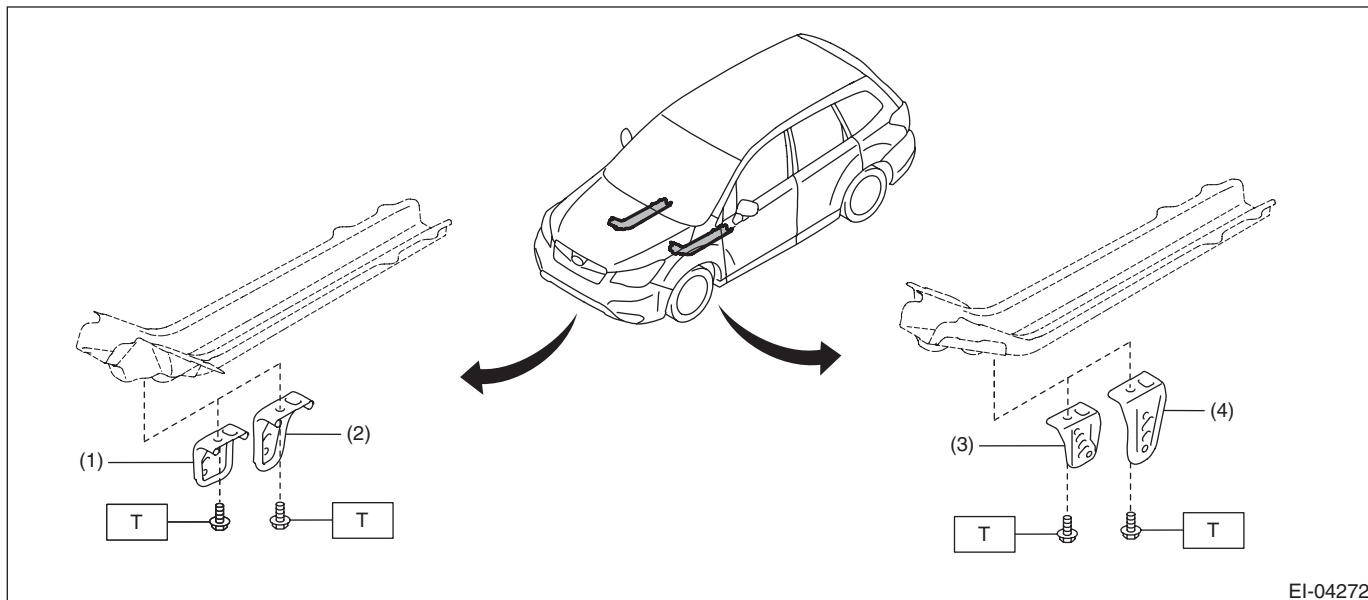

EI-04272

(1) Protector oil cover RH (CVT, turbo model)

(2) Protector oil cover RH (CVT, non-turbo model)

(3) Protector oil cover LH (CVT, turbo model)

(4) Protector oil cover LH (CVT, non-turbo model)


Tightening torque: N·m (kgf-m, ft-lb)

T: 100 (10.2, 73.3)

6. FRONT HOOD GRILLE

For exploded view of the front hood grille, refer to “Front hood” of “EXTERIOR BODY PANELS” section.
<Ref. to EB-3, FRONT HOOD, COMPONENT, General Description.>

7. FRONT BUMPER

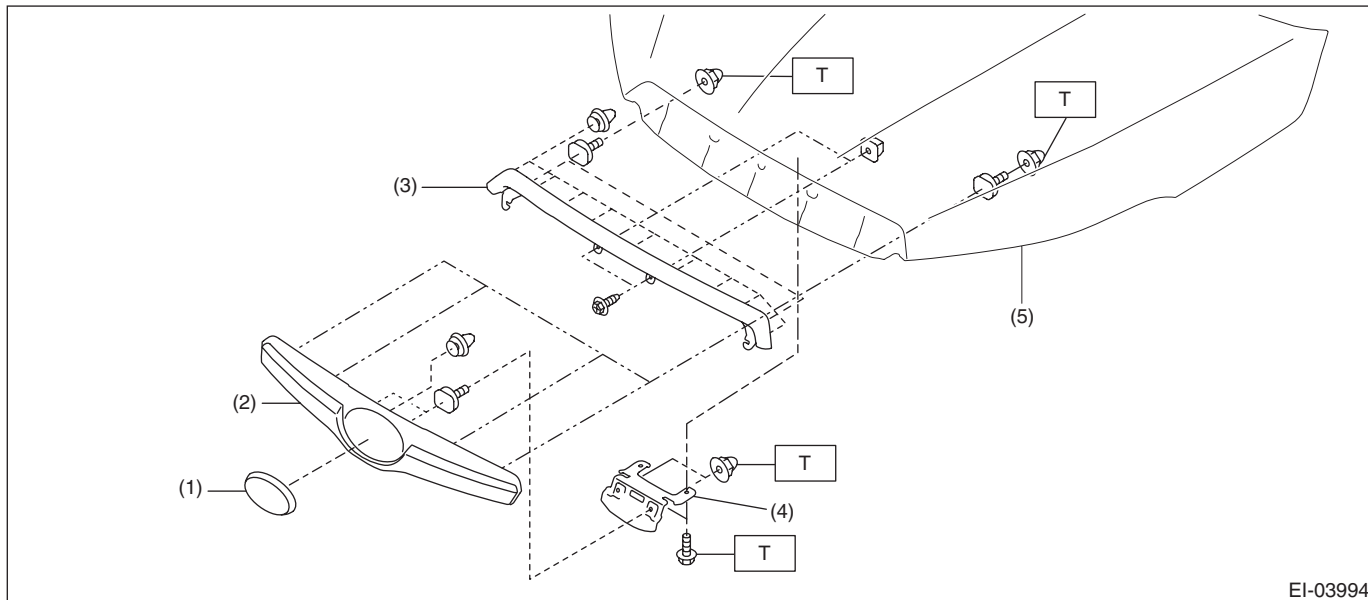

EI-03994

(1) Ornament front

(2) Grille ASSY - front CTR


(3) Grille ASSY - front UPR

(4) Bracket - grille UPR

(5) Hood COMPL - front

Tightening torque: N·m (kgf-m, ft-lb)

T: 4.5 (0.46, 3.3)

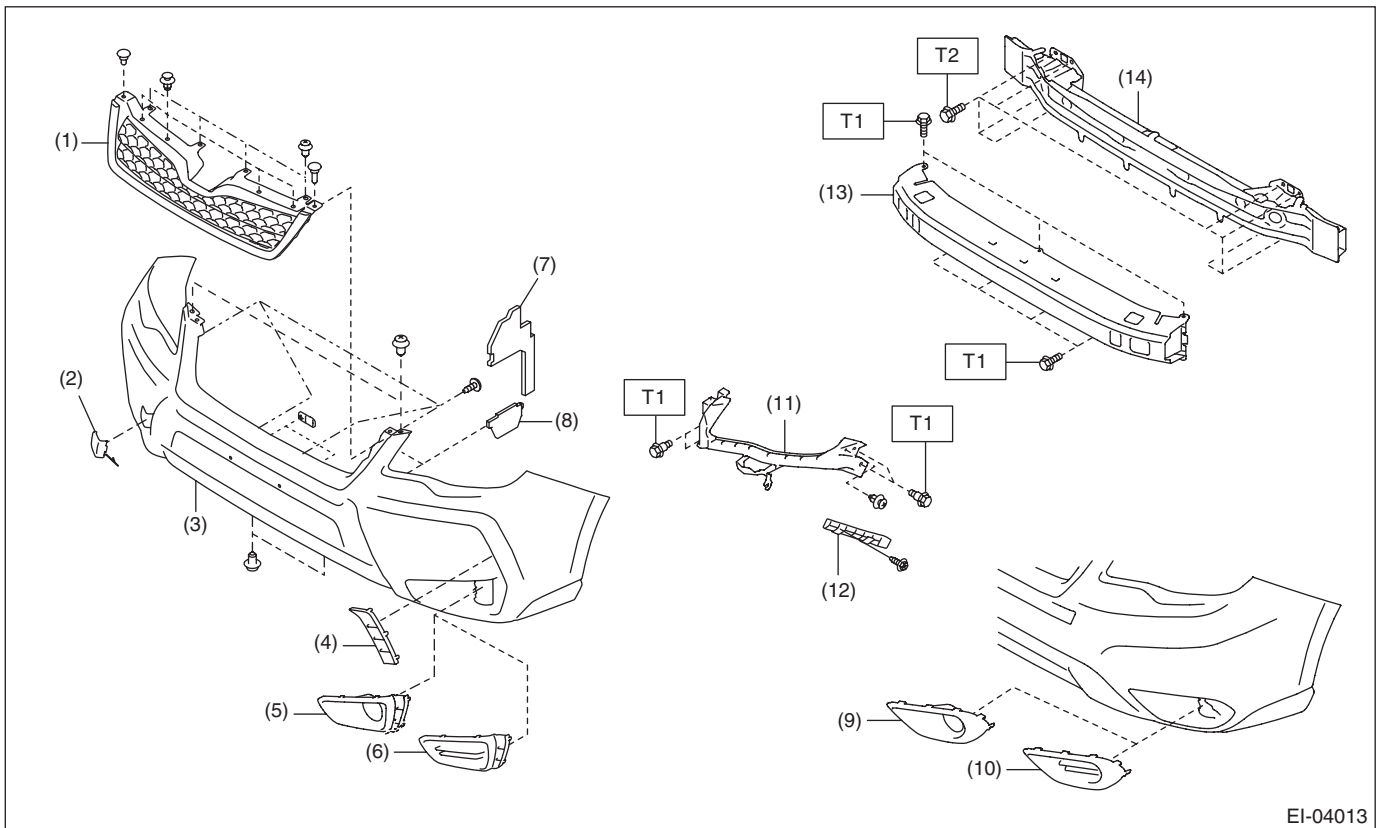

EI-04013

(1) Grille ASSY - front LWR

(2) Cover hook - front

(3) Bumper face - front

(4) Cover side - front

(5) Cover - fog light (turbo model)

(6) Cover bumper - front (turbo model)

(7) Radiator gasket UPR

(8) Radiator gasket LWR

(9) Cover - fog light (non-turbo model)

(10) Cover bumper - front (non-turbo model)

(11) Bracket - front bumper corner

(12) Bracket - front bumper side

(13) Energy absorber - front bumper

(14) Bumper beam COMPL - front

Tightening torque: N-m (kgf-m, ft-lb)


T1: 7.5 (0.76, 5.5)

T2: 32 (3.26, 23.6)

General Description

EXTERIOR/INTERIOR TRIM

8. REAR BUMPER

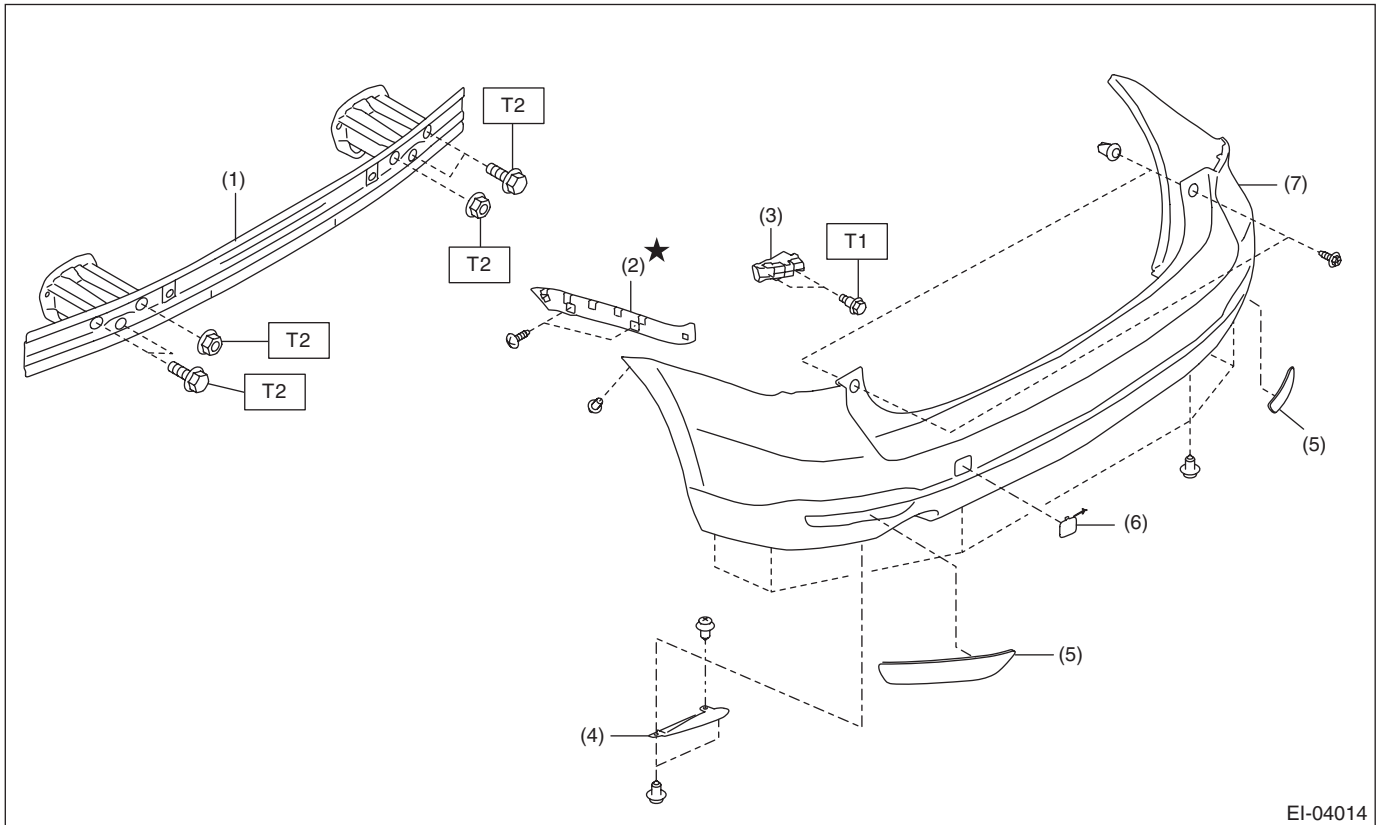

EI-04014


- | | |
|----------------------------------|------------------------|
| (1) Beam COMPL - rear | (5) Reflex reflector |
| (2) Bracket - rear bumper side | (6) Cover - hook rear |
| (3) Bracket - rear bumper corner | (7) Bumper face - rear |
| (4) Cover - rear bumper | |

Tightening torque: N-m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 70 (7.14, 51.6)


9. COWL PANEL

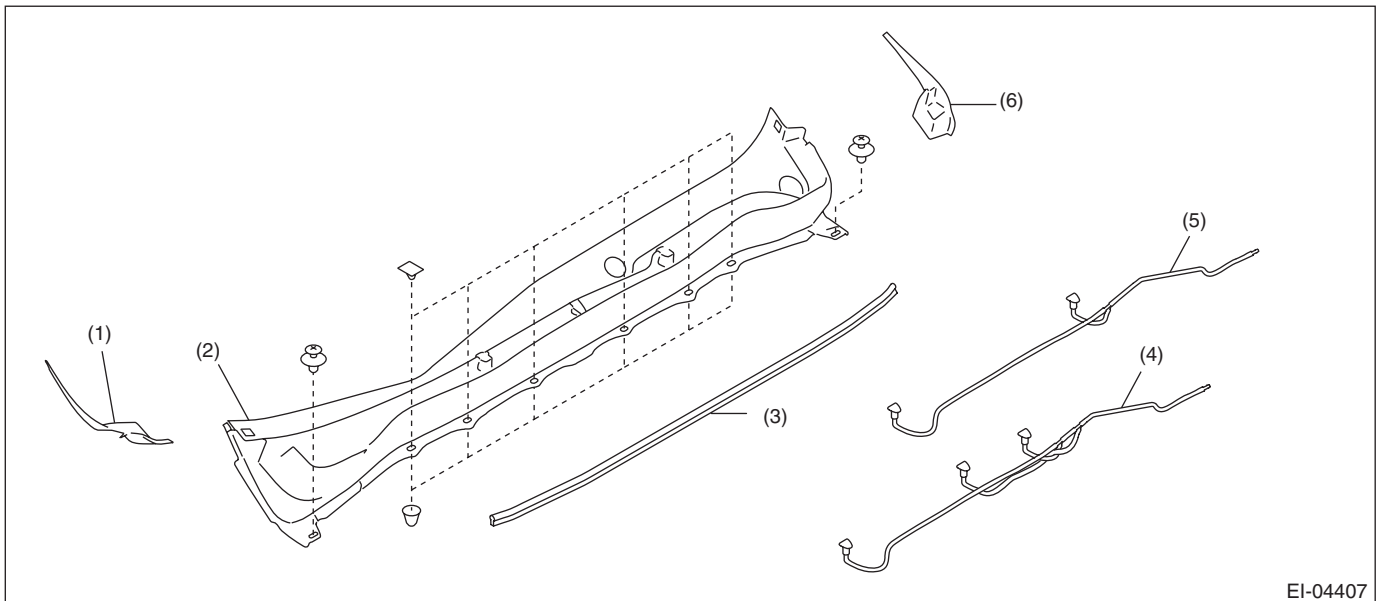

EI-04407

- | | | |
|--------------------------|--|----------------------------|
| (1) Cowl panel - side RH | (3) Seal - front panel | (5) Hose ASSY - washer UPR |
| (2) Cowl panel ASSY | (4) Hose ASSY - washer UPR (model with EyeSight) | (6) Cowl panel - side LH |

10.ROOF SPOILER

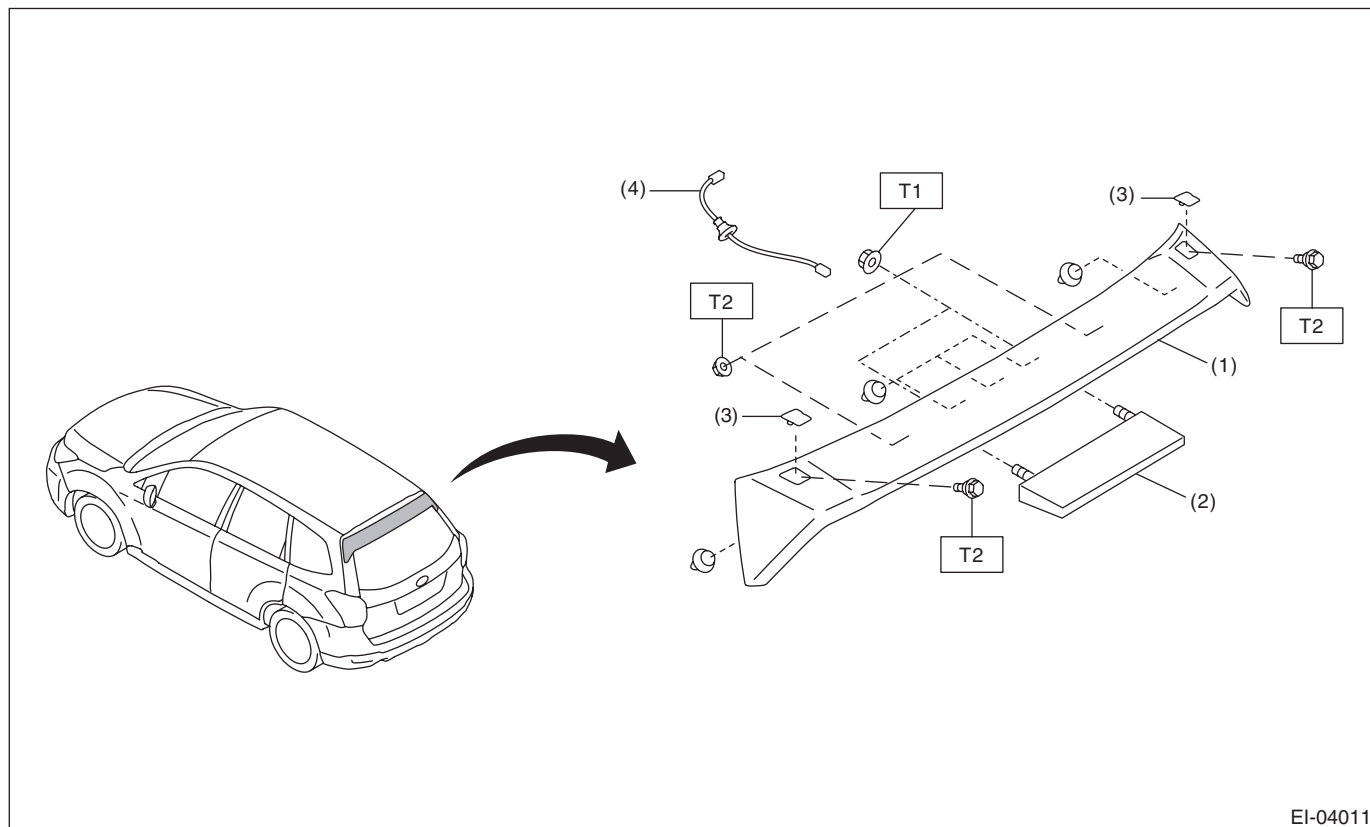

(1) Roof spoiler

(2) Light ASSY - high-mounted

(3) Cap

(4) Harness ASSY - high-mounted stop light

Tightening torque: N·m (kgf·m, ft·lb)


T1: 4.5 (0.46, 3.3)

T2: 7.5 (0.76, 5.5)

General Description

EXTERIOR/INTERIOR TRIM


11.SIDE GARNISH

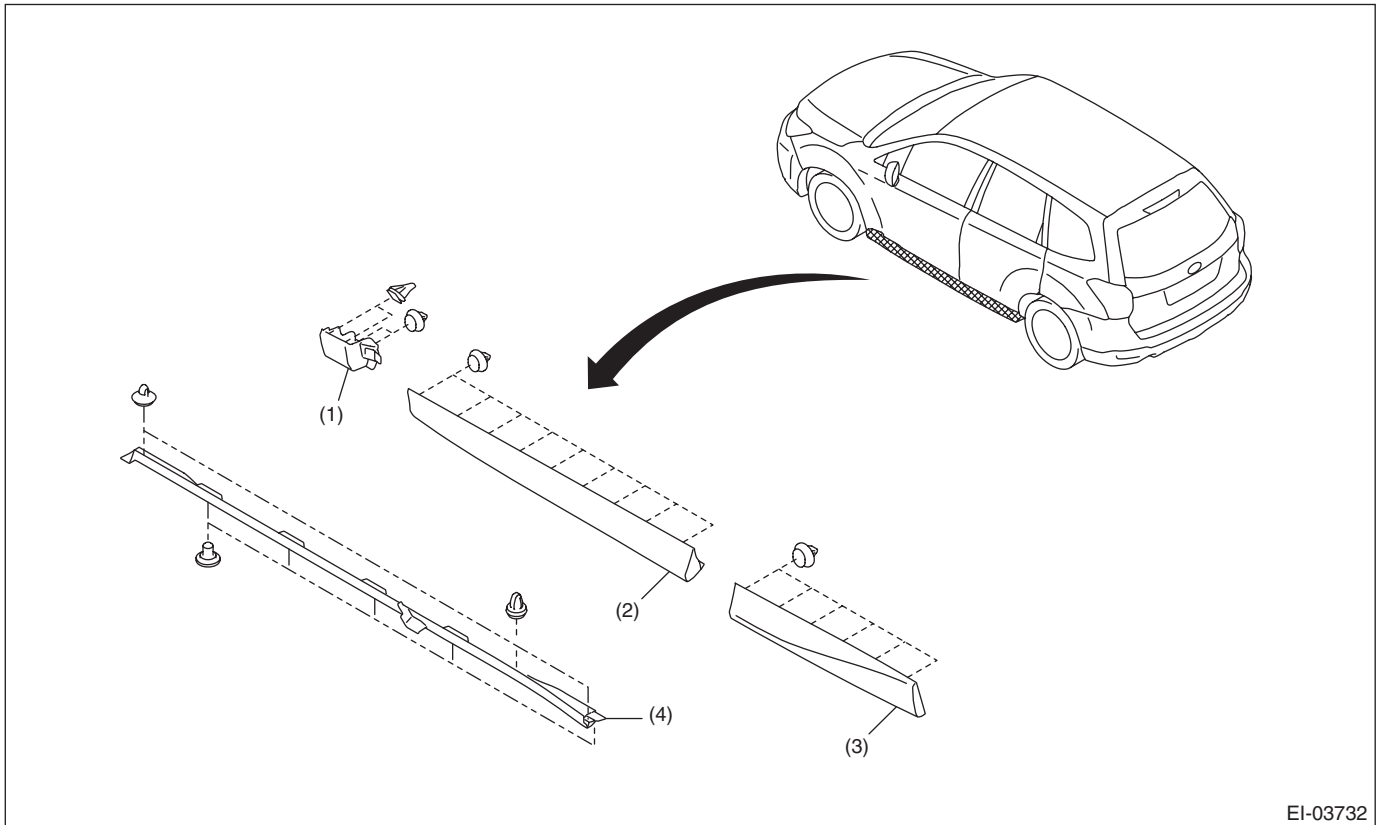

EI-03732

- | | | |
|-------------------------------|------------------------------|------------------------------|
| (1) Garnish ASSY - fender | (3) Garnish ASSY - door rear | (4) Garnish ASSY - side sill |
| (2) Garnish ASSY - door front | | |

12.ROOF MOLDING

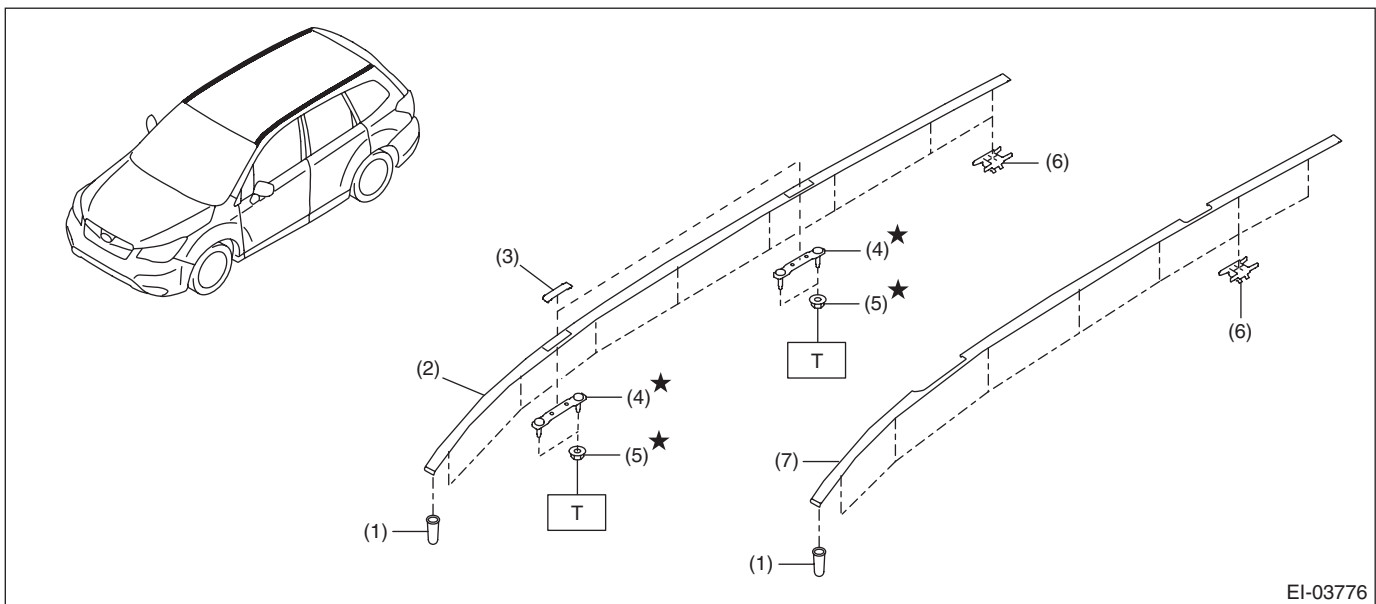


EI-03776

- | | |
|----------------------------|---|
| (1) Rivet | (5) Flange nut |
| (2) Molding - roof | (6) Fastener |
| (3) Cap - molding | (7) Molding - roof (model with roof rail) |
| (4) Bracket - molding roof | |

Tightening torque: N-m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

13.ROOF RAIL

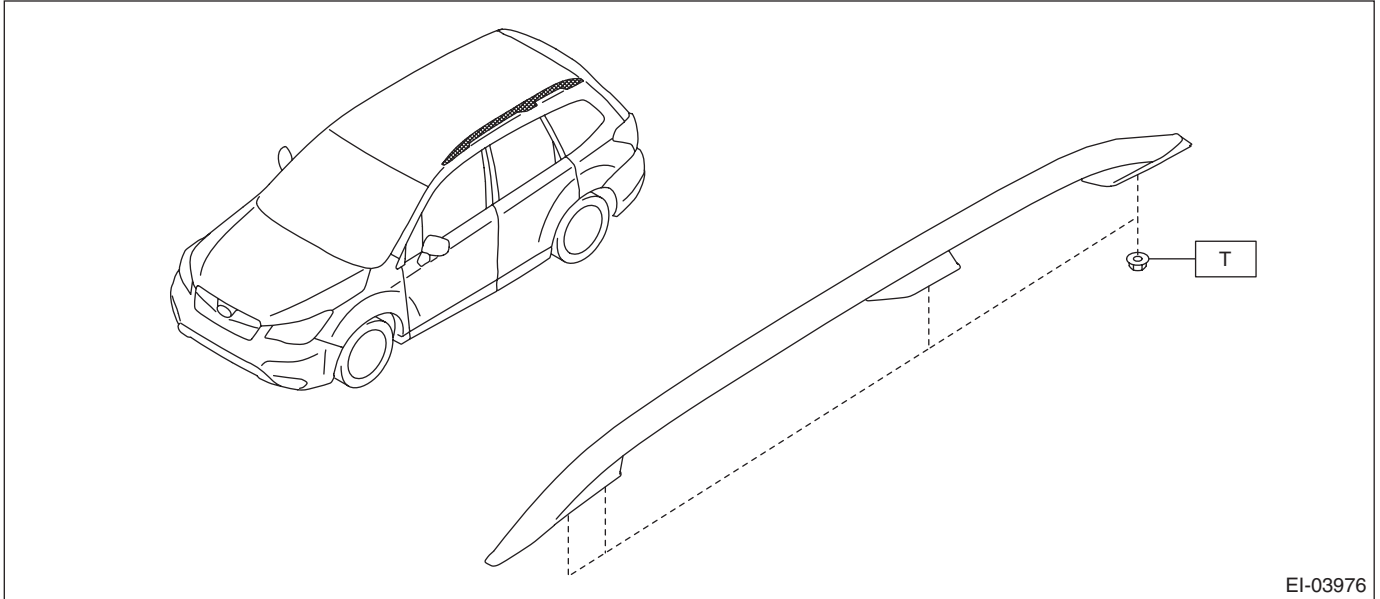


Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

General Description

EXTERIOR/INTERIOR TRIM


14.DOOR TRIM

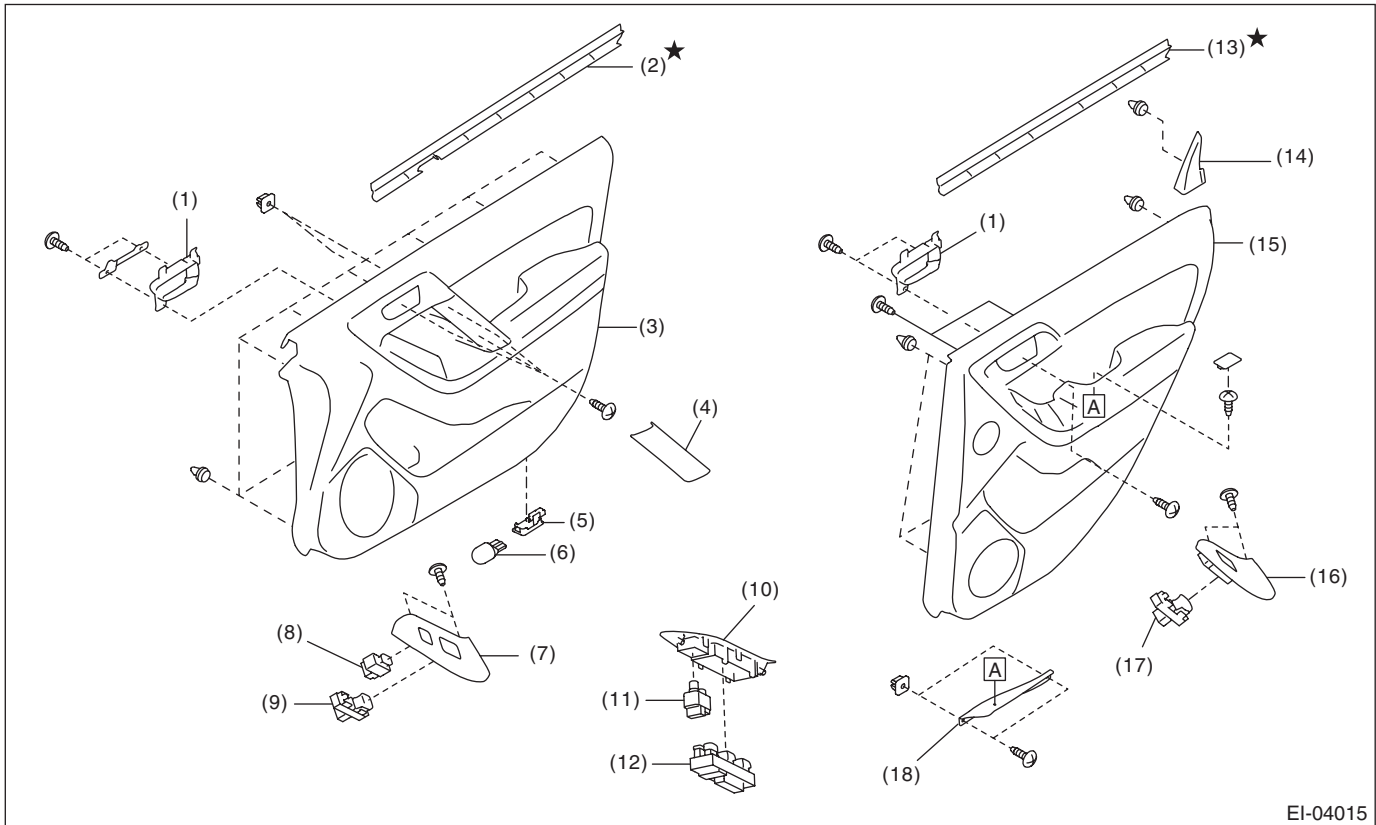

EI-04015

- | | | |
|------------------------------------|---|---|
| (1) Remote ASSY - door | (7) Panel - power window sub-switch front | (13) Weather strip - door rear INN |
| (2) Weather strip - door front INN | (8) Switch - door lock | (14) Cover - gusset rear |
| (3) Trim panel - front door | (9) Switch - power window sub front | (15) Trim panel - rear door |
| (4) Grip - door front | (10) Panel - power window main switch | (16) Panel - power window sub-switch rear |
| (5) Holder - door step light | (11) Switch - door mirror | (17) Switch - power window sub rear |
| (6) Valve | (12) Switch - power window main | (18) Bracket - door trim rear |

15.CONSOLE BOX

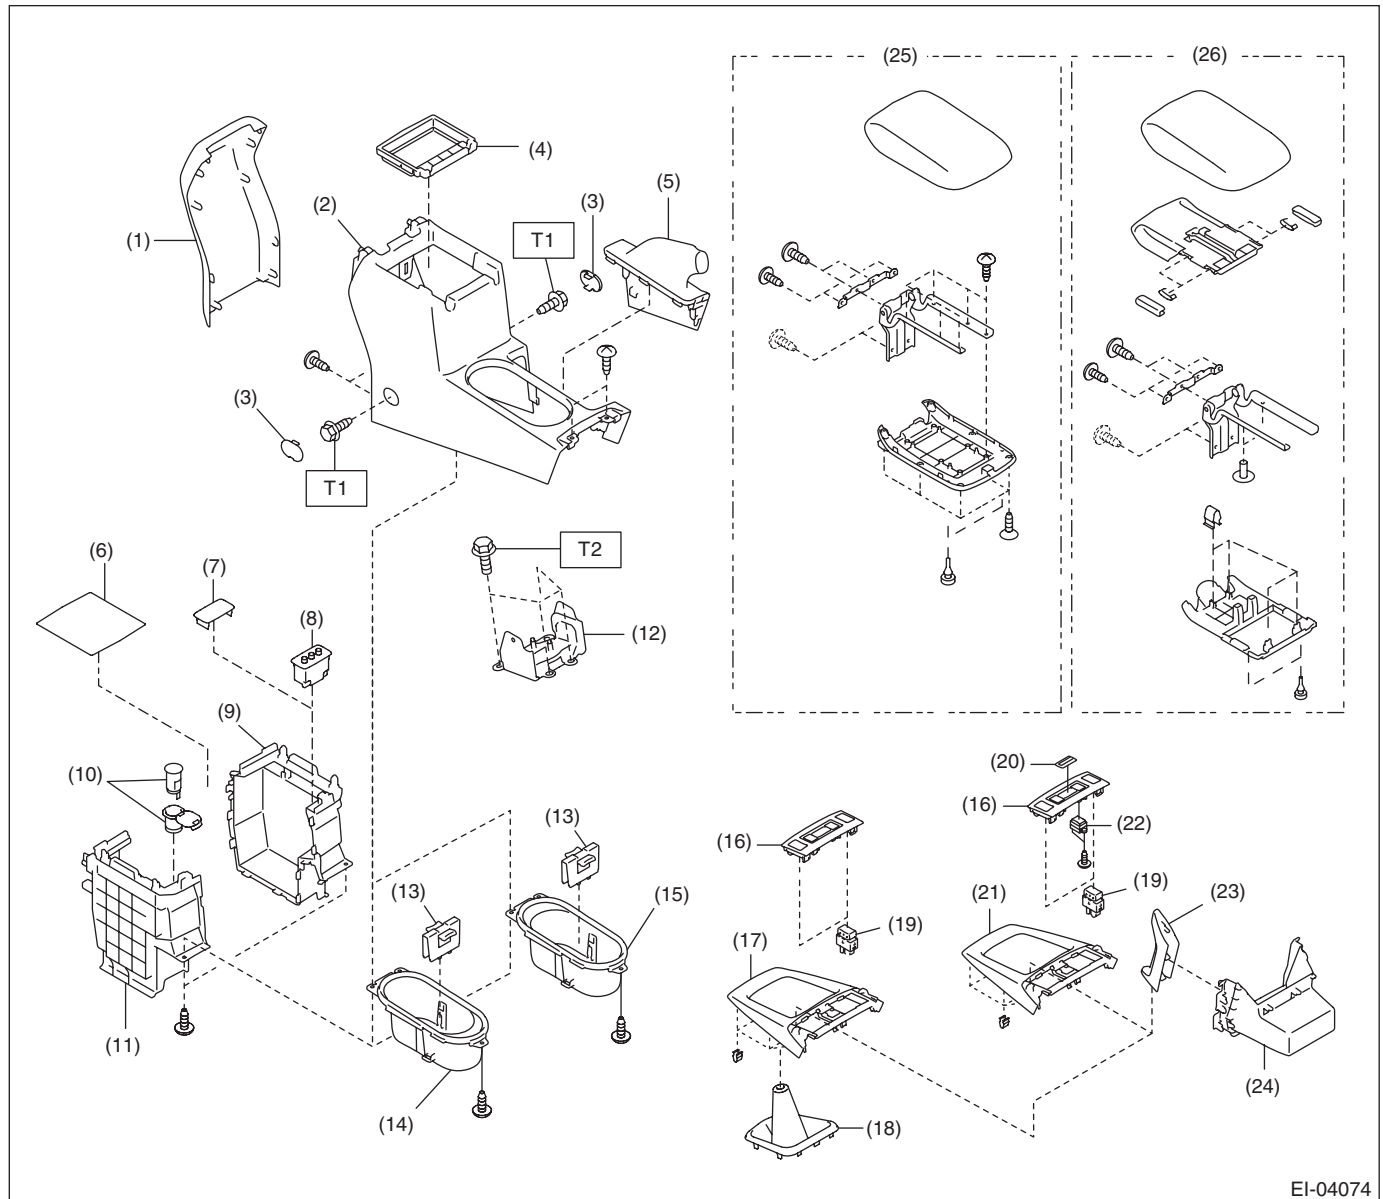

EI-04074

- | | | |
|---------------------------|-------------------------------------|--|
| (1) Console box, rear | (11) Pocket console box RH | (21) Cover - shift lever (CVT model) |
| (2) Console box | (12) Bracket - console box | (22) X MODE switch |
| (3) Cap | (13) Partition - cup holder | (23) Ornament panel - console |
| (4) Tray - console box | (14) Cup holder (MT model) | (24) Tray ASSY - CTR LWR |
| (5) Boot - parking brake | (15) Cup holder (CVT model) | (25) Lid ASSY - console box (fixed type) |
| (6) Mat | (16) Switch case | (26) Lid ASSY - console box (sliding type) |
| (7) Cap - AUX | (17) Cover - shift lever (MT model) | |
| (8) AUX unit | (18) Boot - shift lever (MT model) | |
| (9) Pocket console box LH | (19) Switch - seat heater | |
| (10) Accessory socket | (20) Plate - X MODE | |

Tightening torque: N·m (kgf·m, ft·lb)


T1: 6.5 (0.66, 4.8)

T2: 18 (1.84, 13.3)

General Description


EXTERIOR/INTERIOR TRIM

16.INSTRUMENT PANEL

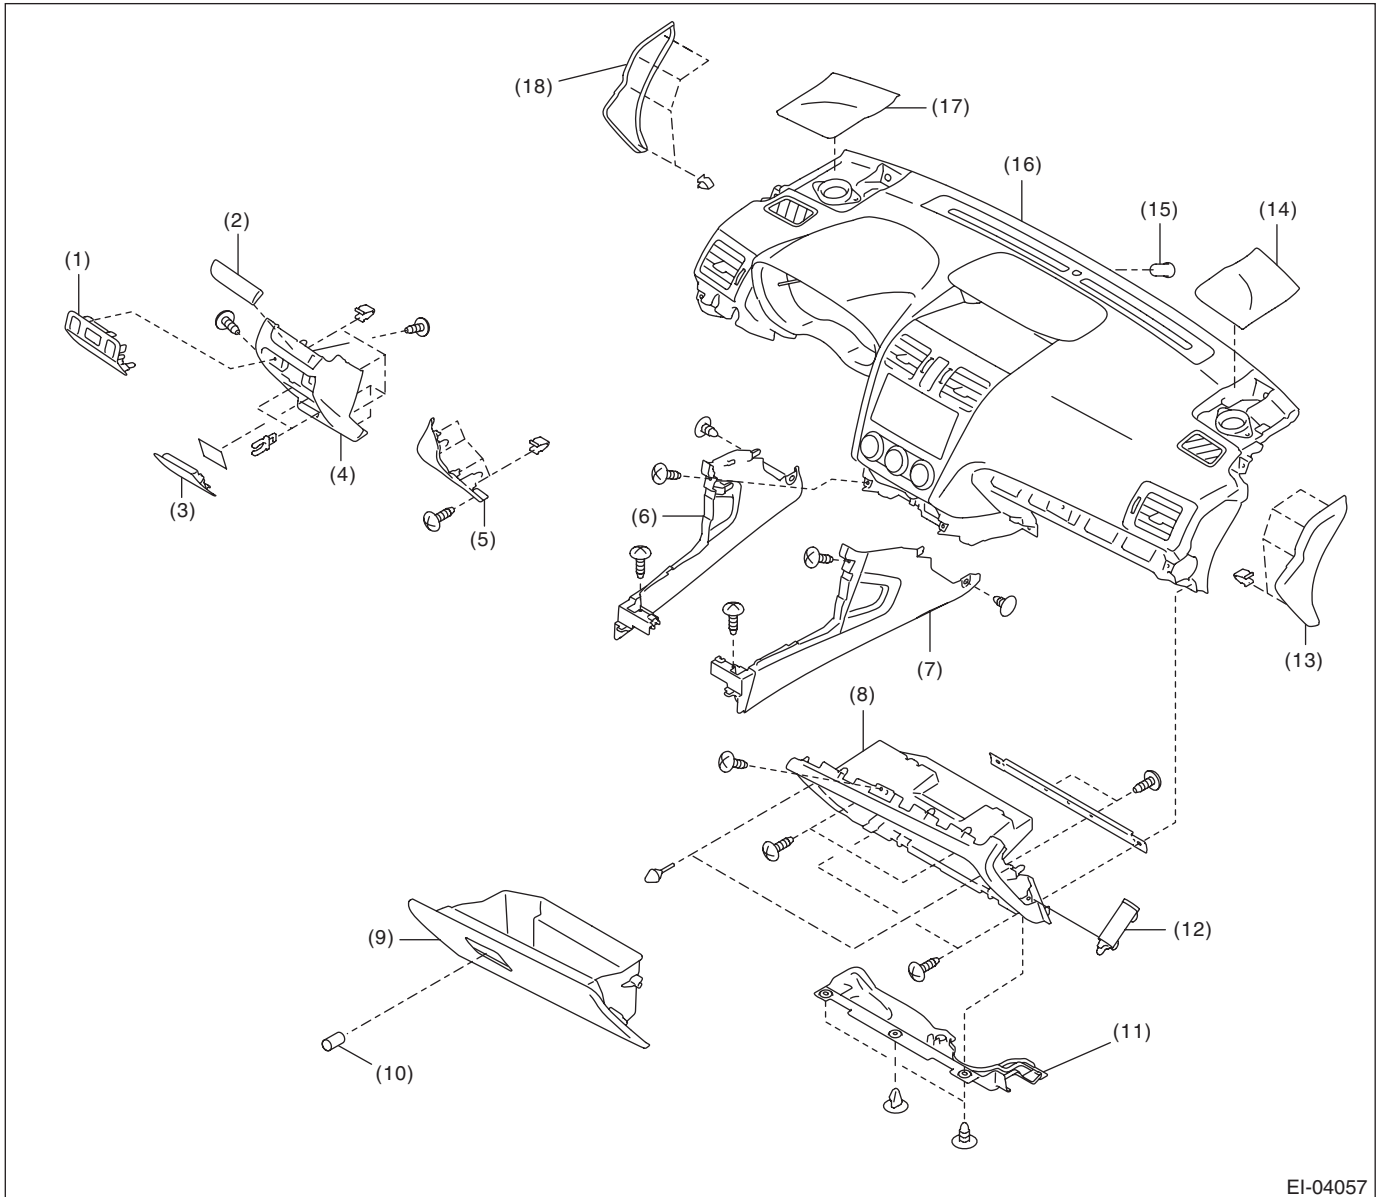

EI-04057

- | | | |
|--|-----------------------------------|---------------------------------------|
| (1) Panel - switch | (7) Panel center LWR RH | (13) Cover - instrument panel side RH |
| (2) Ornament panel ASSY driver | (8) Back panel - pocket | (14) Grille speaker side RH |
| (3) Lid ASSY - fuse box | (9) Pocket ASSY | (15) Cap - guide pin |
| (4) Cover ASSY - instrument panel LWR driver OUT | (10) Key cylinder - pocket | (16) Panel COMPL - instrument |
| (5) Cover ASSY - instrument panel LWR driver INN | (11) Under cover ASSY - passenger | (17) Grille speaker side LH |
| (6) Panel center LWR LH | (12) Damper COMPL - pocket | (18) Cover - instrument panel side LH |

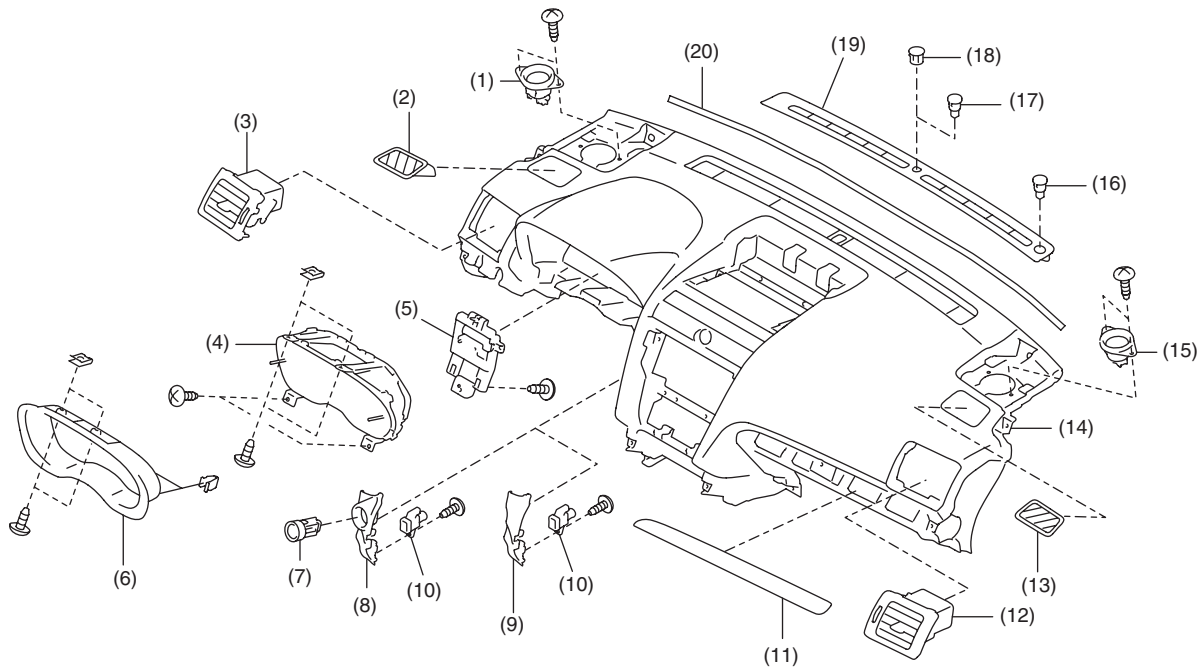


EI-04091

- | | | |
|---------------------------------------|------------------------------------|--------------------------------|
| (1) Speaker ASSY - tweeter LH | (8) Panel - switch | (15) Speaker ASSY - tweeter RH |
| (2) Grille defroster - front LH | (9) Cover - switch starter | (16) Sensor - automatic light |
| (3) Grille ASSY - ventilation LH | (10) Case - sensor | (17) Sensor - sunload |
| (4) Combination meter ASSY | (11) Ornament panel ASSY passenger | (18) Cap |
| (5) Reinforcement - combination meter | (12) Grille ASSY - ventilation RH | (19) Grille - front defroster |
| (6) Visor - combination meter ASSY | (13) Grille defroster - front RH | (20) Cushion |
| (7) Push button ignition switch | (14) Panel COMPL - instrument | |

General Description

EXTERIOR/INTERIOR TRIM

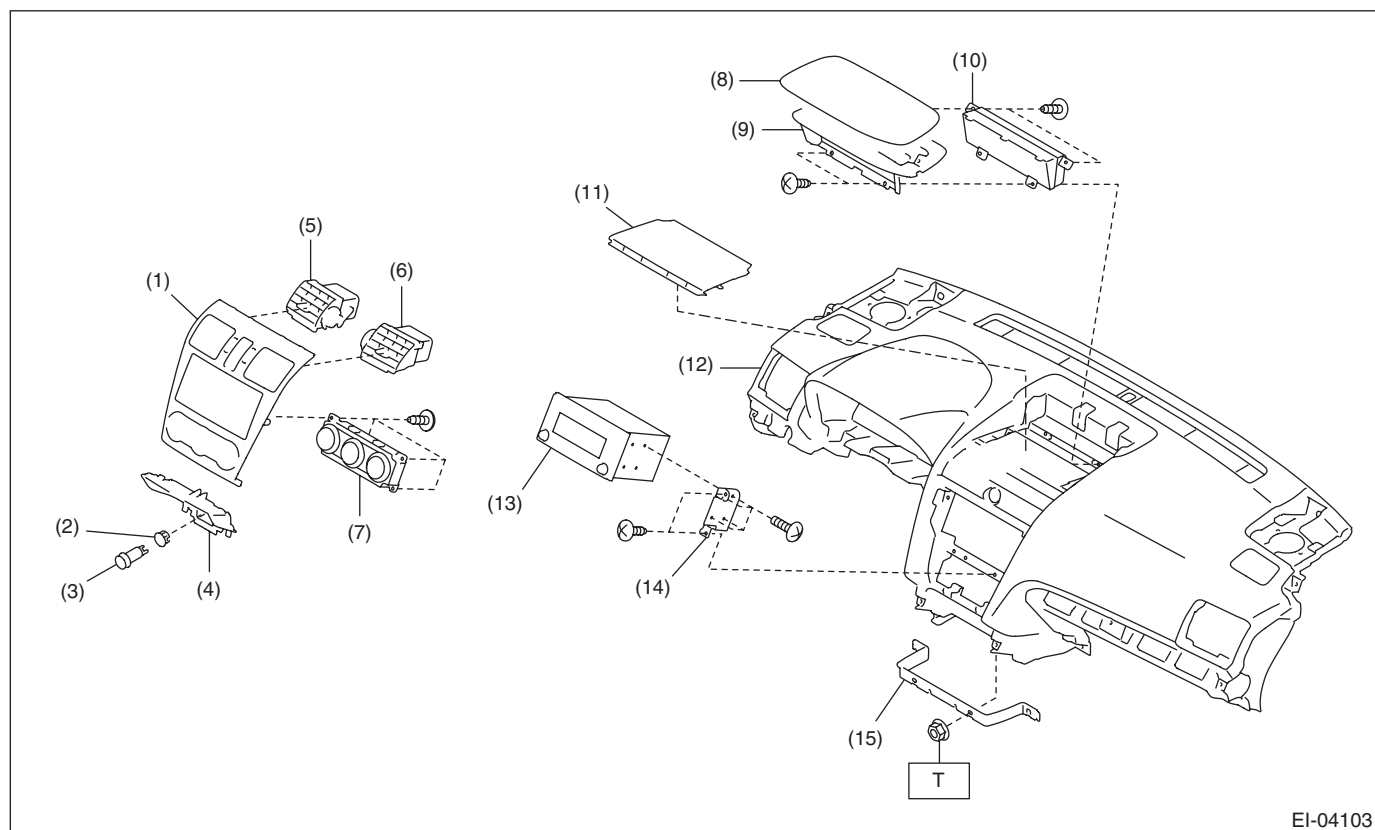


- (1) Panel center ASSY
- (2) Cap
- (3) Socket ASSY
- (4) Back panel - center pocket
- (5) Grille ASSY - CTR ventilation LH
- (6) Grille ASSY - CTR ventilation RH

- (7) Heater control ASSY
- (8) Panel - display UPR
- (9) Panel - display LWR
- (10) Multi-function display ASSY
- (11) Cover center UPR
- (12) Panel COMPL - instrument

- (13) Audio ASSY
- (14) Bracket - audio
- (15) Reinforcement - center lower

Tightening torque: N·m (kgf-m, ft-lb)
T: 7 (0.71, 5.2)

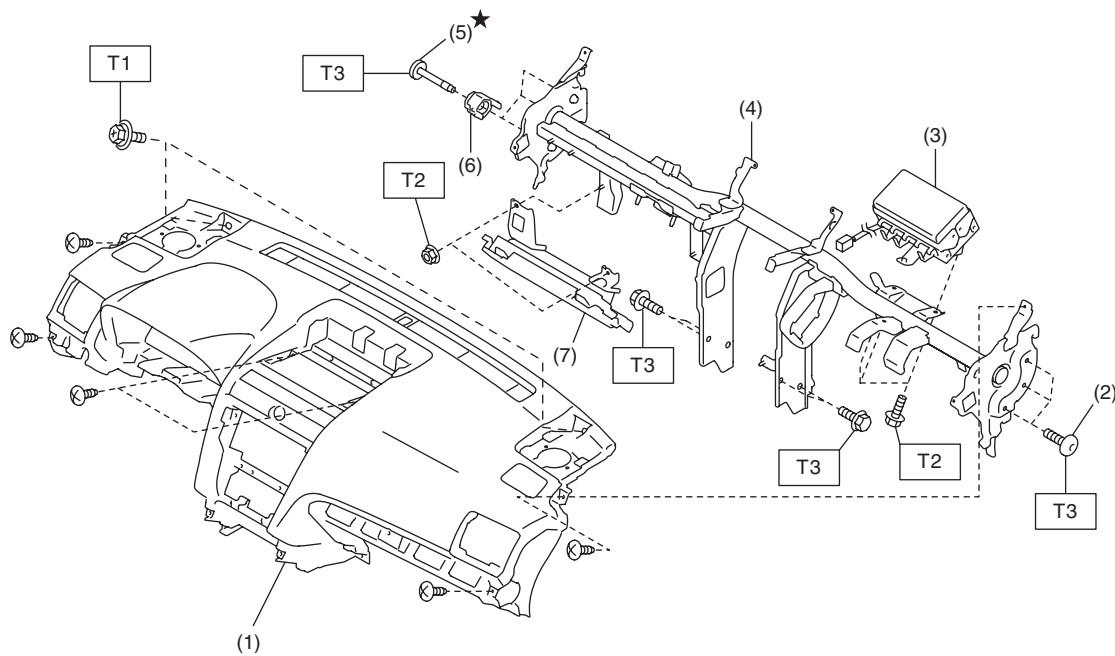

EI-04090

- | | |
|------------------------------------|-----------------------------|
| (1) Panel COMPL - instrument | (5) TORX® bolt (M8×57) |
| (2) TORX® bolt (M8×37) | (6) Adjuster - clip space |
| (3) Passenger's airbag module ASSY | (7) Knee airbag module ASSY |
| (4) Beam COMPL - steering | |

Tightening torque: N·m (kgf-m, ft-lb)


T1: 7 (0.71, 5.2)

T2: 7.5 (0.76, 5.5)

T3: 25 (2.55, 18.4)

General Description

EXTERIOR/INTERIOR TRIM

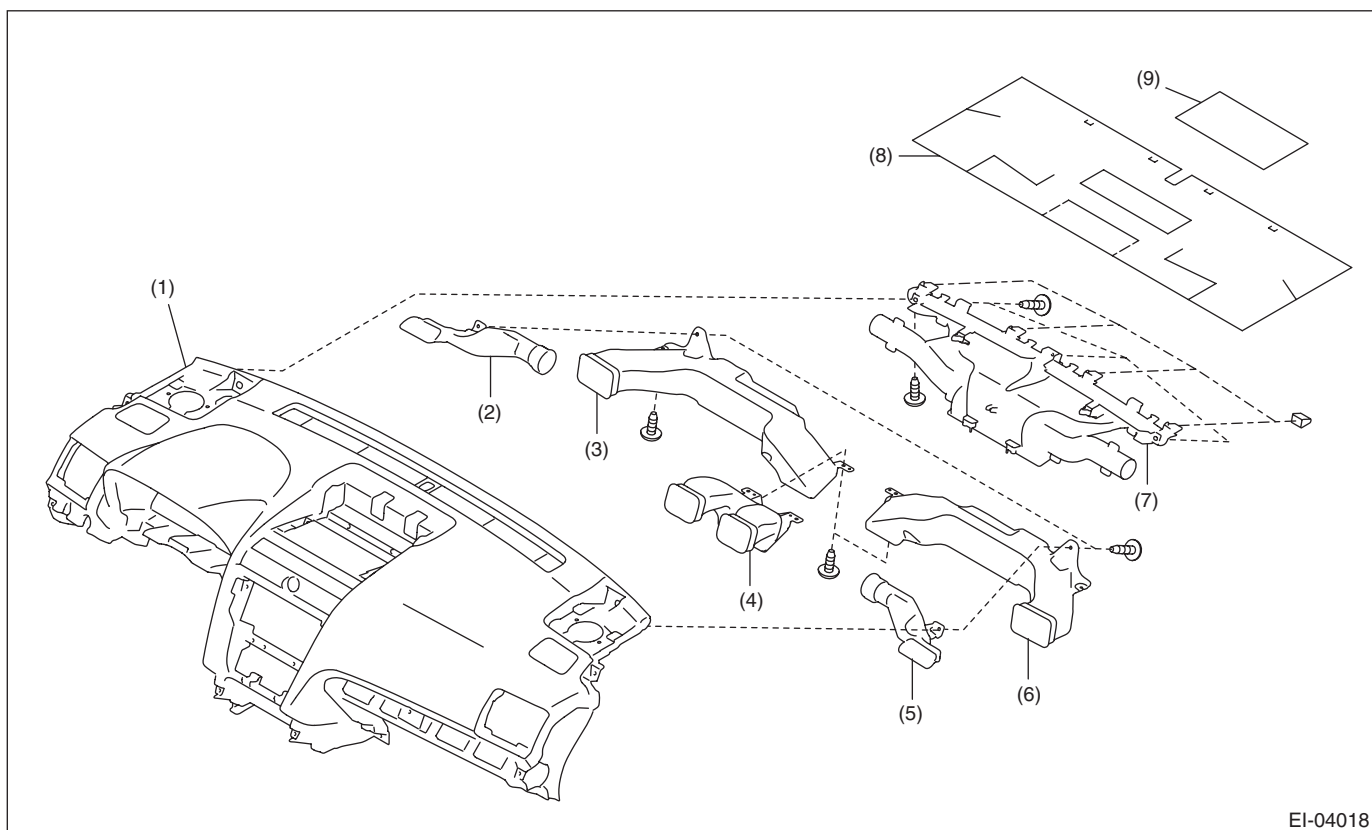


EI-04018

- (1) Panel COMPL - instrument
- (2) Duct - side defroster LH
- (3) Duct - side ventilation LH

- (4) Duct - center vent
- (5) Duct - side defroster RH
- (6) Duct - side ventilation RH

- (7) Nozzle - front defroster
- (8) Insulator - instrument
- (9) Insulator - airbag

17.INNER TRIM

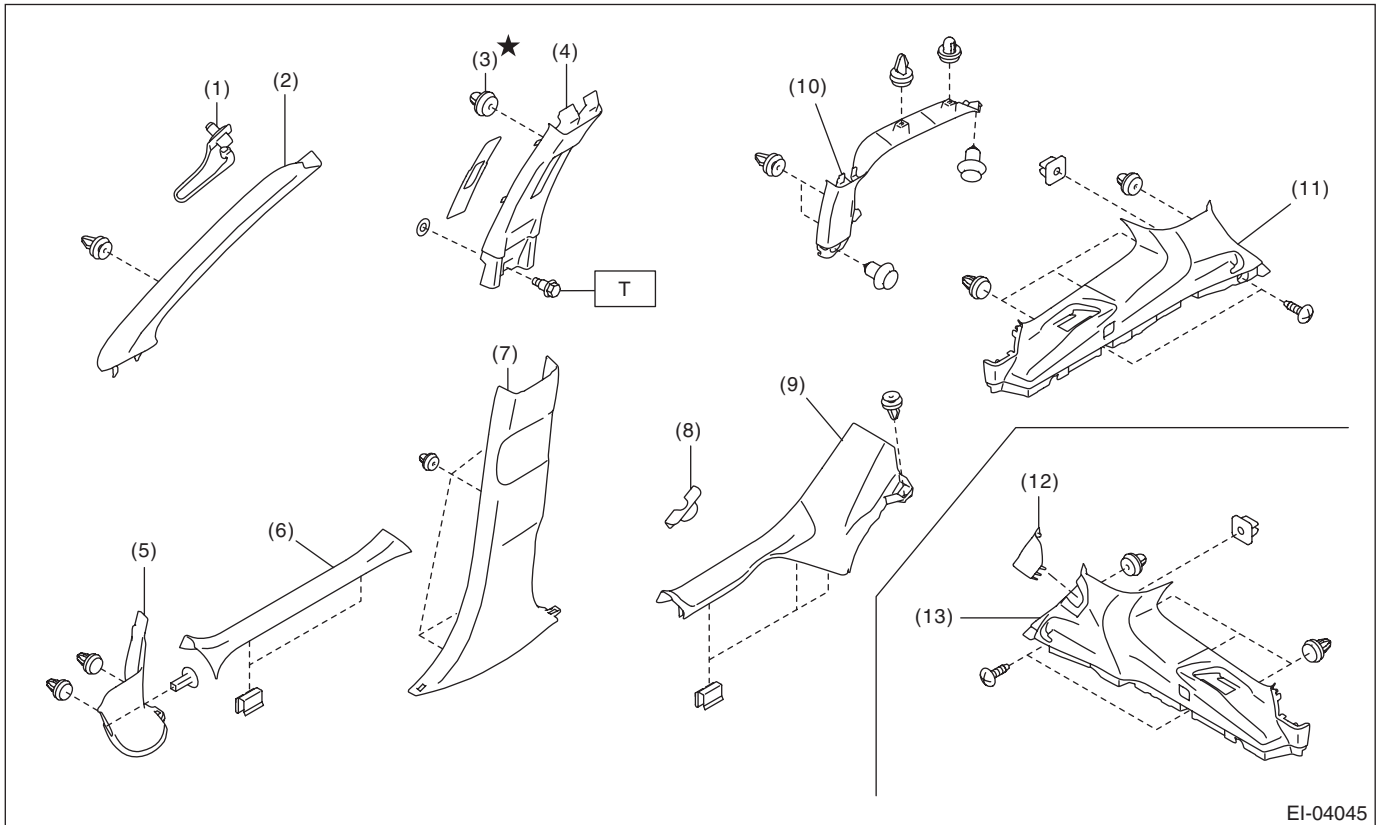

EI-04045


- | | | |
|------------------------------------|--|--|
| (1) Tether clip | (7) Trim panel - center pillar LWR | (13) Trim panel - rear quarter pillar UPR LH |
| (2) Trim panel - front pillar UPR | (8) Cover - catcher | |
| (3) Clip | (9) Cover side sill - rear INN | |
| (4) Trim panel - center pillar UPR | (10) Trim panel - rear pillar UPR | |
| (5) Cover side sill - front | (11) Trim panel - rear quarter pillar UPR RH | |
| (6) Cover side sill - front INN | (12) Cap - rear quarter pillar UPR LH (model with power rear gate) | |

Tightening torque: N-m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

General Description

EXTERIOR/INTERIOR TRIM

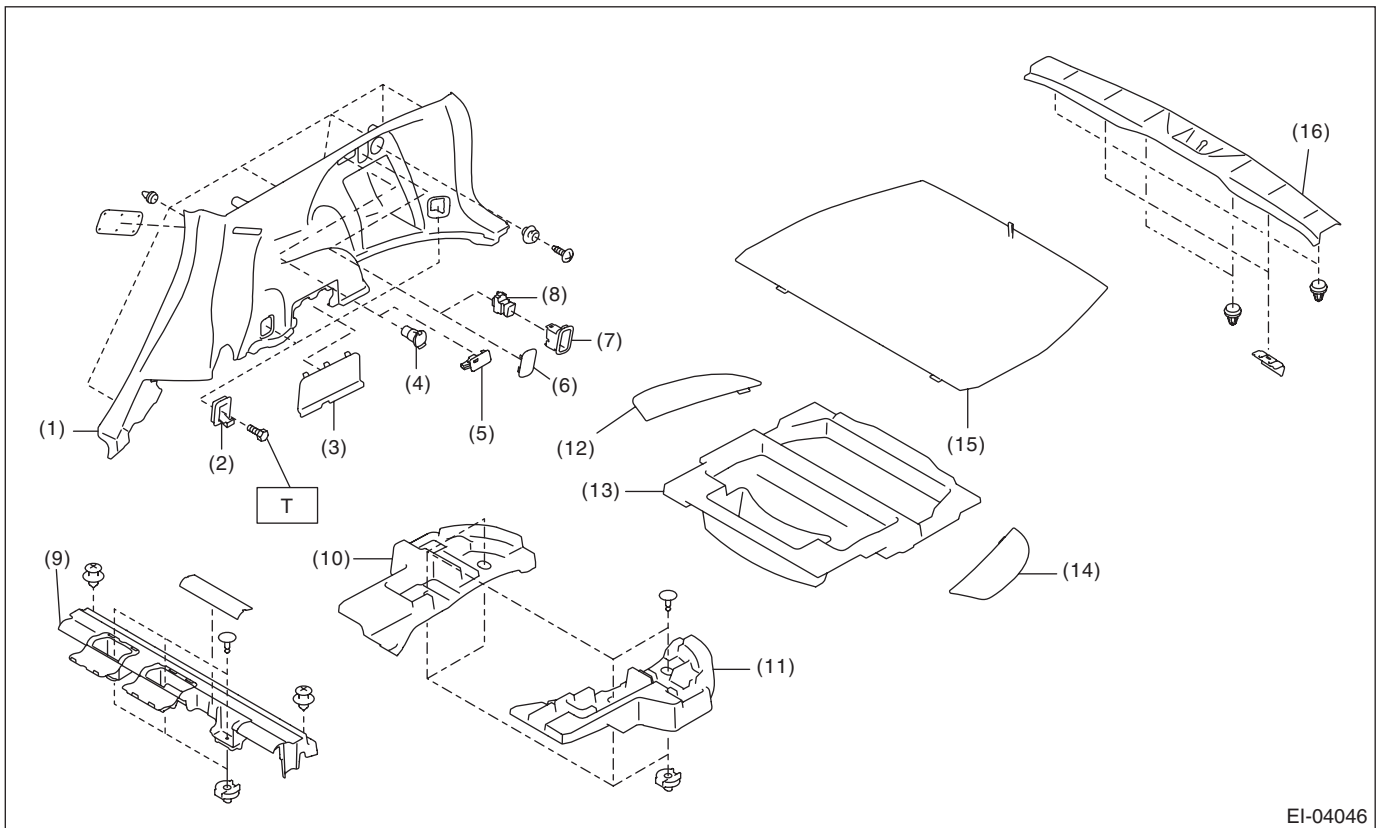

EI-04046


- (1) Trim panel - rear apron
- (2) Hook - luggage
- (3) Cap - rear strut
- (4) Socket ASSY
- (5) Light ASSY - luggage
- (6) Cap
- (7) Switch holder

- (8) Switch ASSY - cargo
- (9) Spacer - rear floor
- (10) Spacer - rear floor side RH
- (11) Spacer - rear floor side LH
- (12) Mat - rear floor RH
- (13) Cover - trunk
- (14) Mat - rear floor LH

- (15) Mat - rear floor CTR
- (16) Trim panel - rear skirt

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

18.REAR GATE TRIM

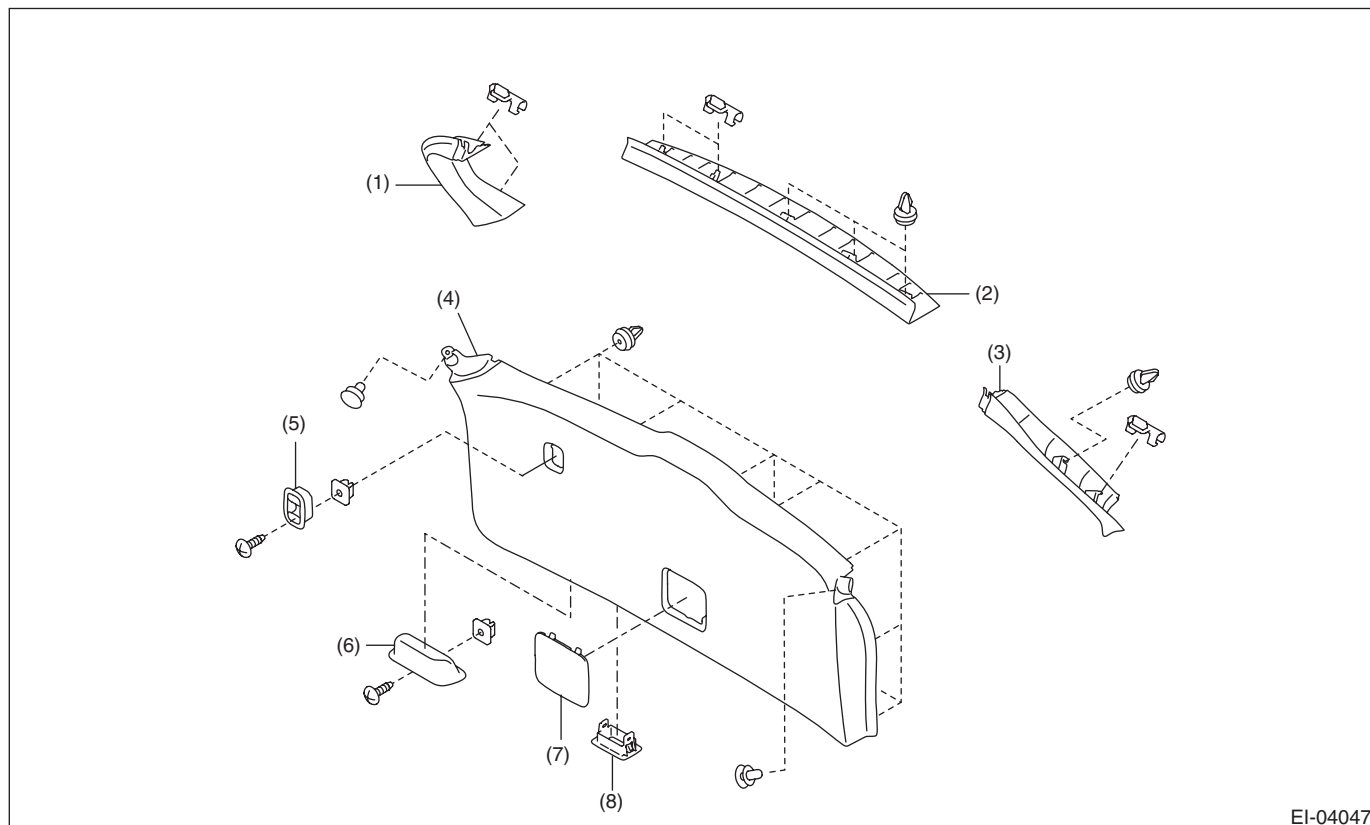


EI-04047

- | | | |
|---|--------------------------------|----------------------------------|
| (1) Trim panel - rear gate pillar side RH | (4) Trim panel - rear gate LWR | (7) Cap |
| (2) Trim panel - rear gate UPR | (5) Hook ASSY | (8) Power rear gate inner switch |
| (3) Trim panel - rear gate pillar side LH | (6) Rear gate handle | |

General Description

EXTERIOR/INTERIOR TRIM

19.ROOF TRIM

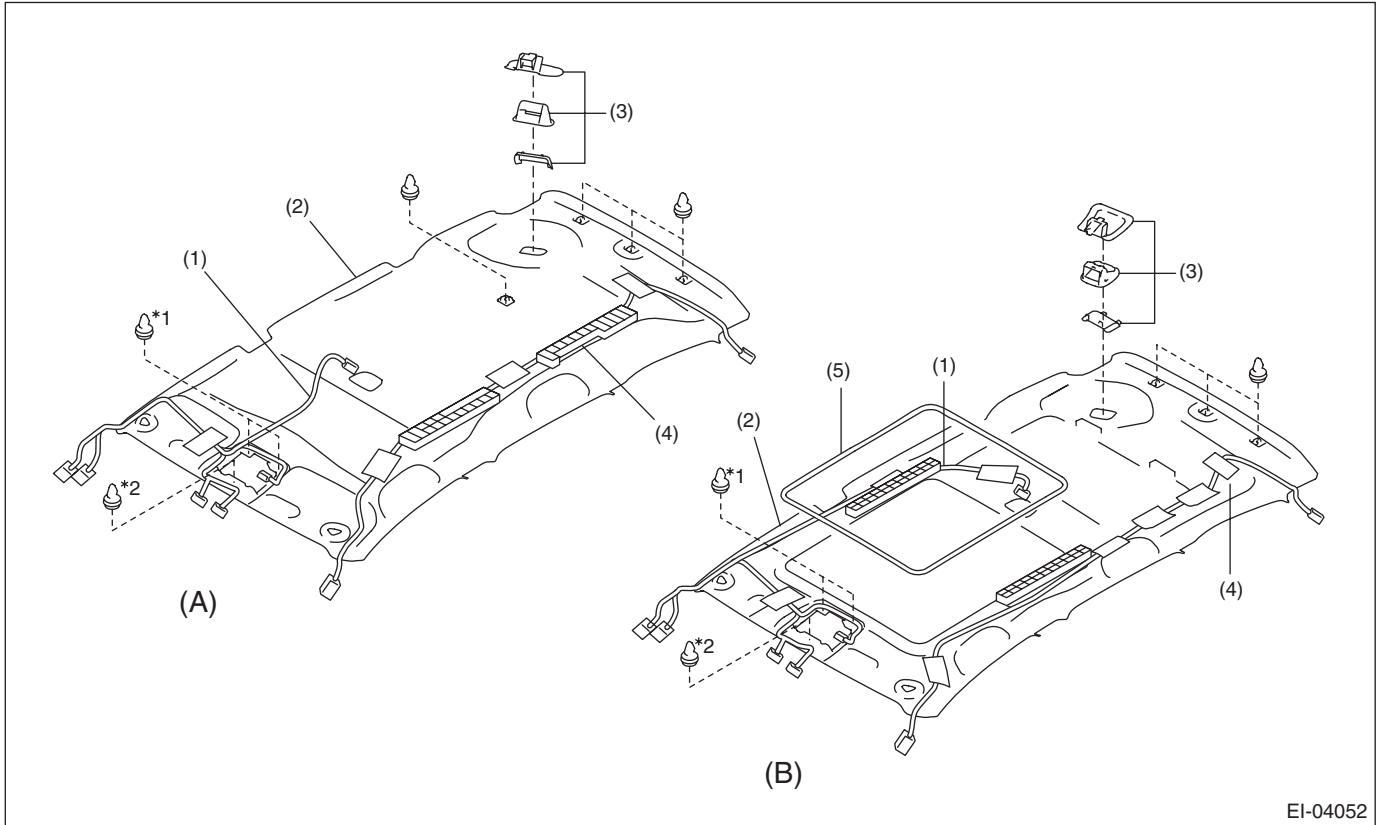

EI-04052

(A) Normal roof type

(B) Sunroof type

(1) Cord - roof

(3) Holder - seat belt

(5) Garnish - roof


(2) Trim panel - roof ASSY

(4) Cord ASSY - antenna feeder

*1 Models with EyeSight

*2 Models without EyeSight

20.ROOM INNER PARTS

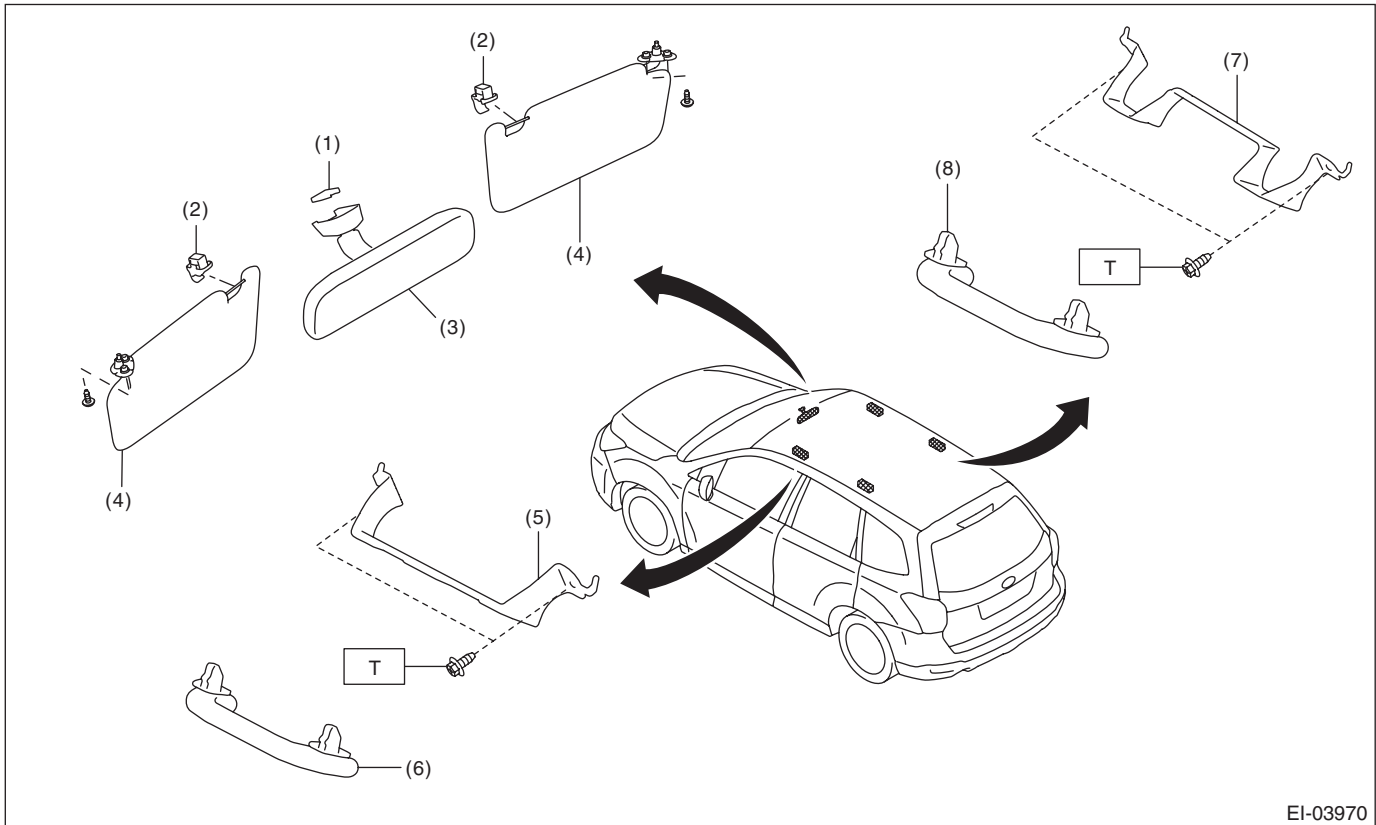

EI-03970

- | | |
|--------------------------------|---------------------------------|
| (1) Base - inner mirror | (5) Bracket - assist rail front |
| (2) Hook - sun visor | (6) Assist rail - front |
| (3) Mirror ASSY rearview inner | (7) Bracket - assist rail rear |
| (4) Sun visor ASSY | (8) Assist rail - rear |


Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

General Description

EXTERIOR/INTERIOR TRIM

21.REAR GATE GARNISH

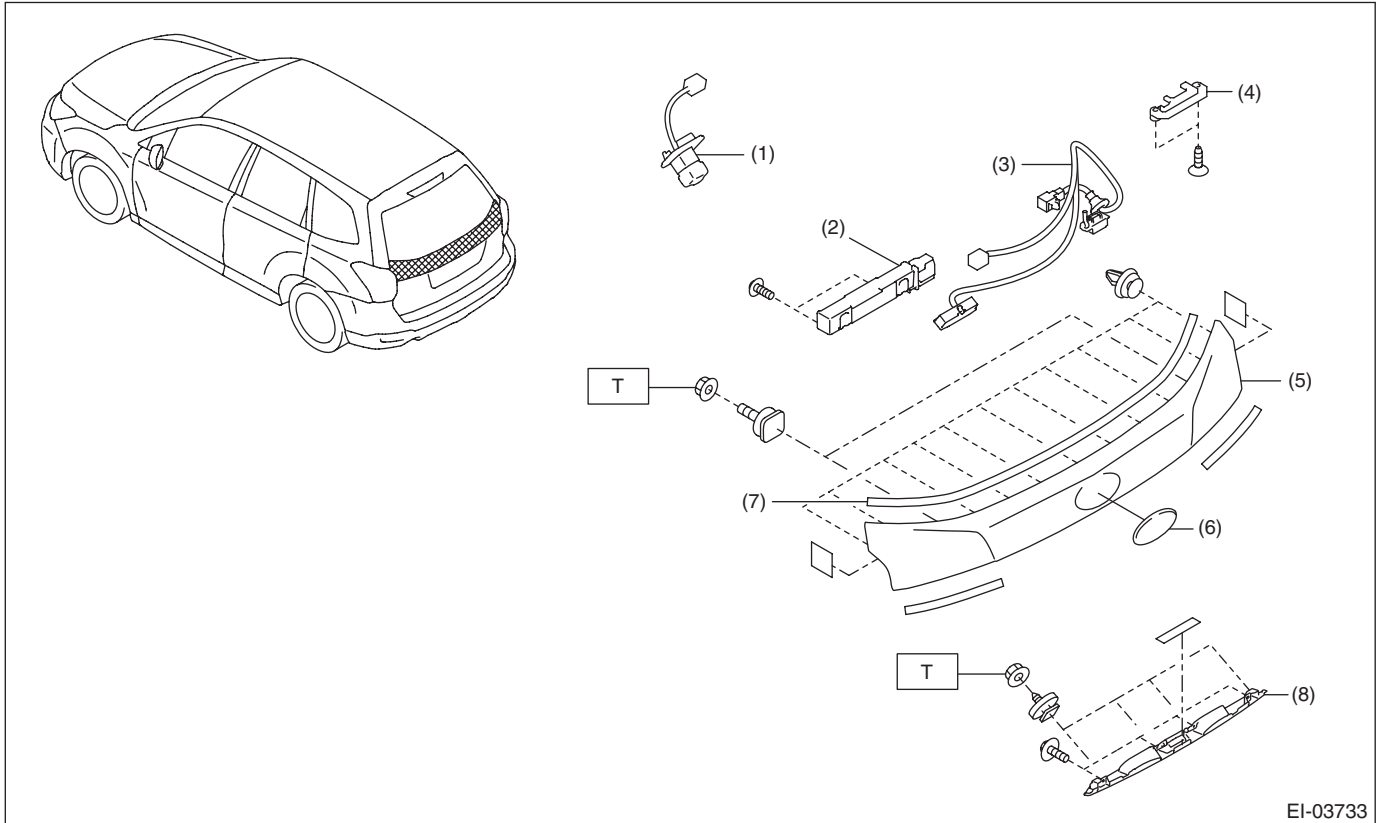

EI-03733

- | | |
|---|------------------------------|
| (1) Camera ASSY - rearview | (5) Garnish ASSY - rear gate |
| (2) Rear exterior antenna | (6) Ornament rear |
| (3) Switch - opener rear gate (model with keyless access) | (7) Packing |
| (4) Bracket - request switch | (8) Garnish switch bracket |

Tightening torque: N·m (kgf·m, ft·lb)

T: 4.5 (0.46, 3.3)

B: PREPARATION TOOL

TOOL NAME	REMARKS
Clip remover	Used for removing trim. • KTC AP201-10A • KTC AP201-N • KTC AP203-10A • KTC AP20L-10B or equivalent
Clip clamp pliers	Used for removal of various clips and clamps. • KTC CCP-190 or equivalent