


12. Roof Spoiler

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trim panel - rear gate UPR.
 - (1) Remove the claws on the trim edge.
 - (2) Release the claws in the center of trim, and remove the trim panel - rear gate UPR.

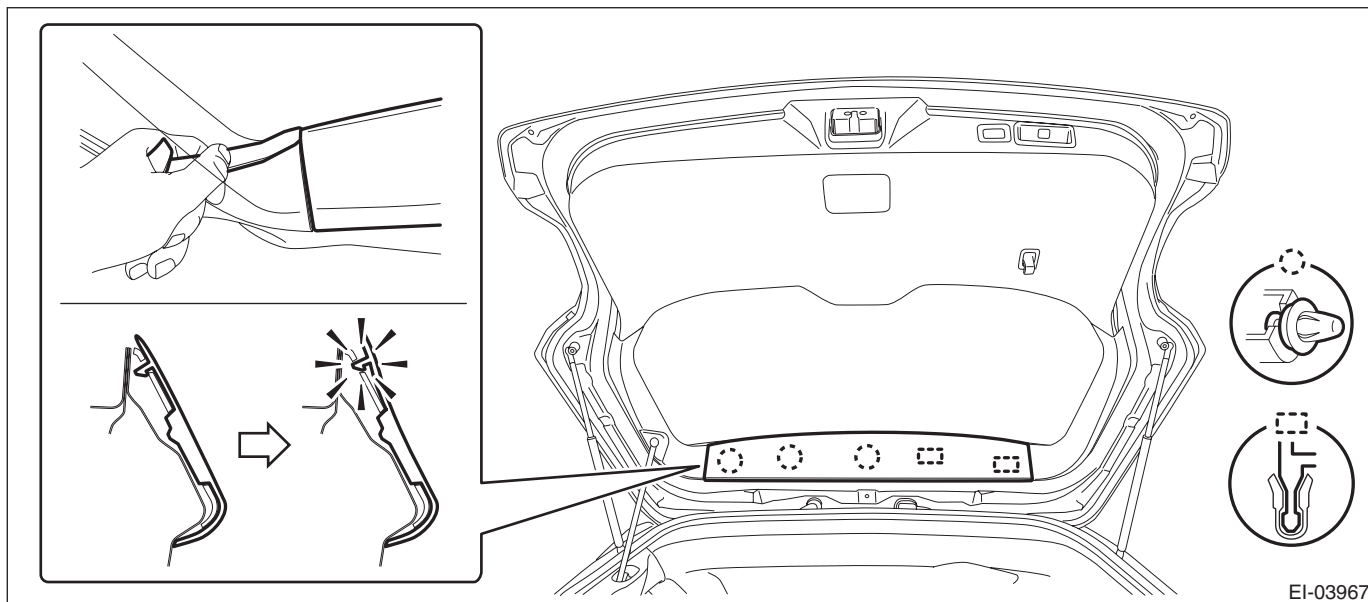


- 3) Remove the trim panel - rear gate pillar side.
 - (1) Disconnect the rod - power rear gate before removing the trim panel - rear gate pillar side LH. (Only for models with power rear gate)

CAUTION:

For the disconnection procedure of the rod - power rear gate, refer to “REMOVAL”, “Power Rear Gate Rod” in the “POWER REAR GATE” section and observe the precautions for removal. <Ref. to PRG-15, REMOVAL, Power Rear Gate Rod.>


- (2) Release the claws.
- (3) Remove the claws on the bottom of trim, and remove the trim panel - rear gate pillar side.

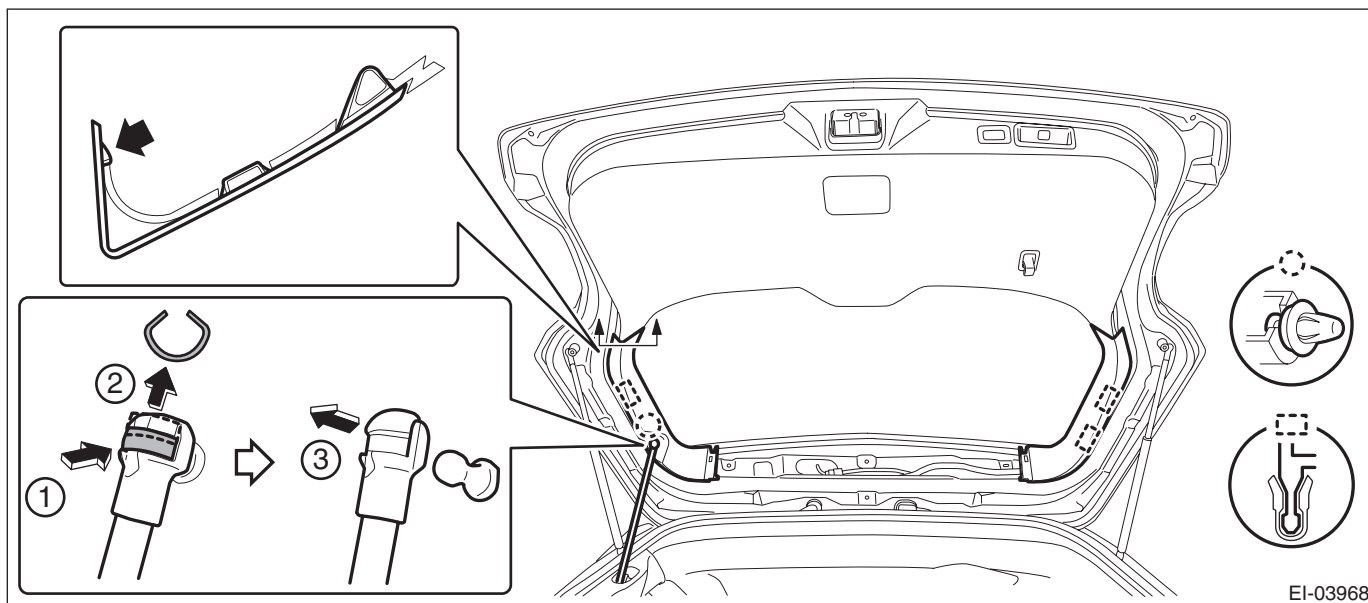

Roof Spoiler

EXTERIOR/INTERIOR TRIM

- 4) Remove the spoiler assembly - roof.
- (1) Disconnect the connector and remove the nut.
 - (2) Open the caps (a), and remove the bolt inside.
 - (3) Remove the clips and remove the spoiler assembly - roof.

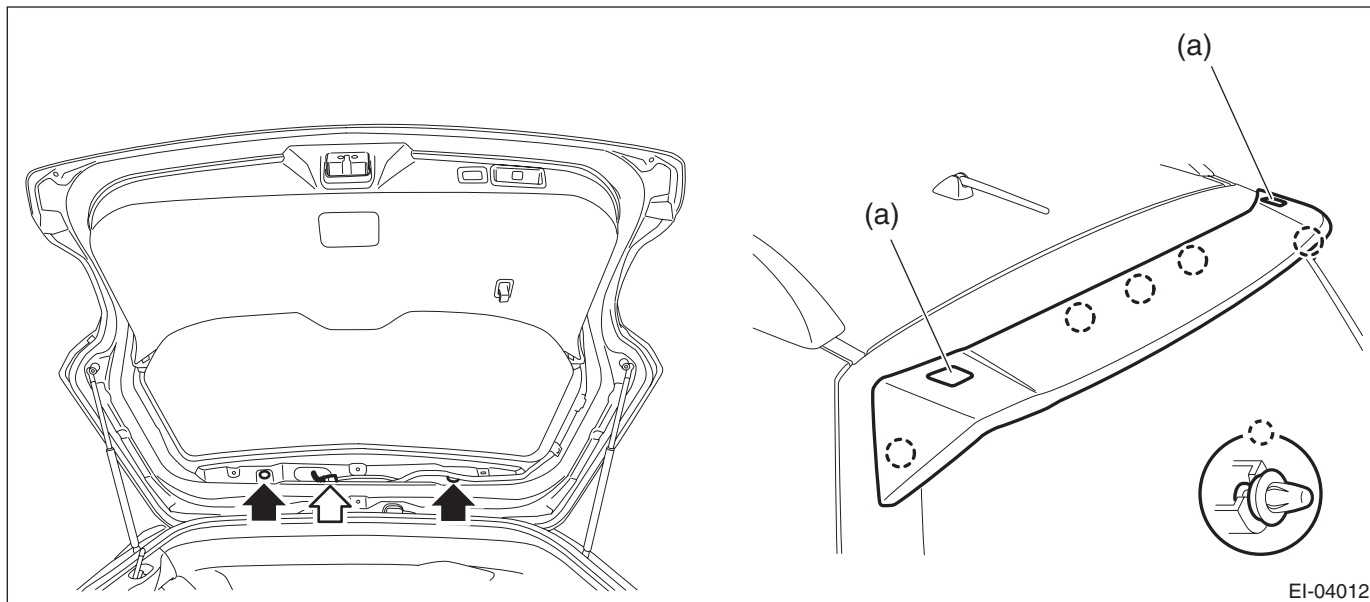

EI-04012

- 5) Remove the high-mounted stop light. <Ref. to LI-60, REMOVAL, High-mounted Stop Light.>

B: INSTALLATION

CAUTION:

- Make sure the bolt is tightened securely because improper installation may cause the water leakage.
- For installation of the rod - power rear gate, refer to “INSTALLATION”, “Power Rear Gate Rod” in the “POWER REAR GATE” section and observe the precautions for installation. <Ref. to PRG-16, INSTALLATION, Power Rear Gate Rod.>

Install each part in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)