


15. Door Trim

A: REMOVAL

1. FRONT DOOR


- 1) Disconnect the ground cable from battery.
- 2) Remove the trim panel - front door.
 - (1) Attach the protective tape (a).
 - (2) Remove the cover - door handle by using a plastic remover.
 - (3) Remove the screws and clips, and remove the trim panel - front door from the panel assembly - front door.

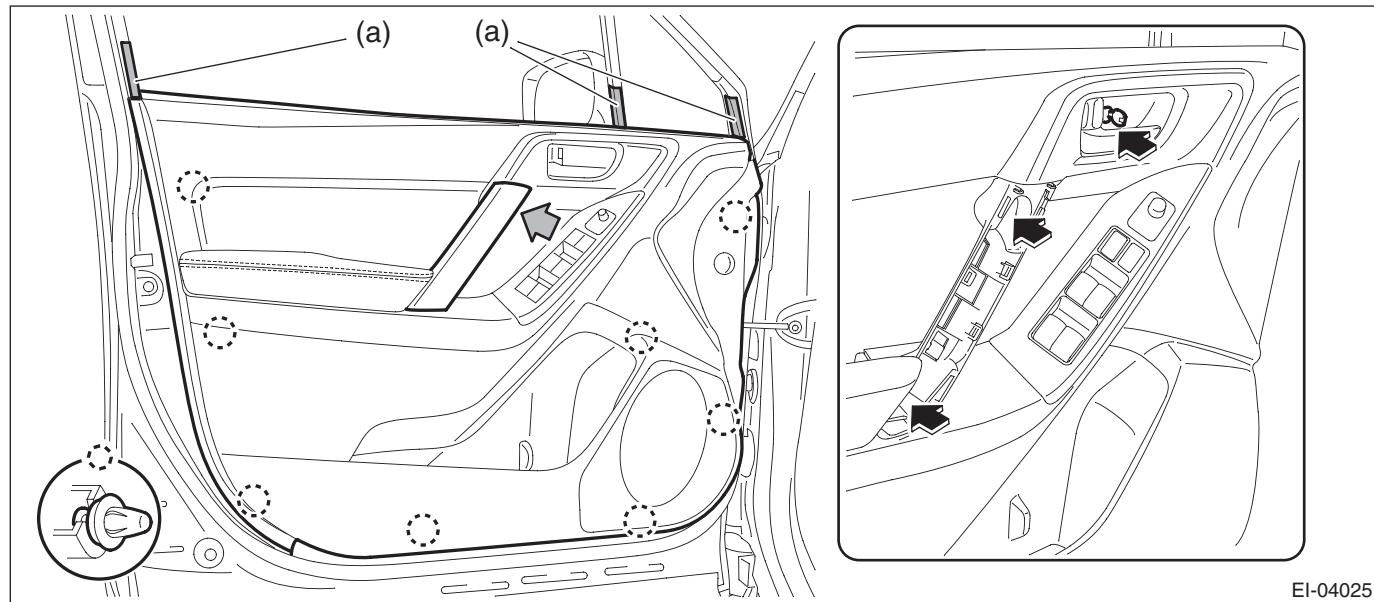

NOTE:

It is easier to remove the cover - door handle if the removal is performed from the gray arrow section.

- (4) Detach the door lock cable (a) and door open cable (b) from the remote assembly - door.

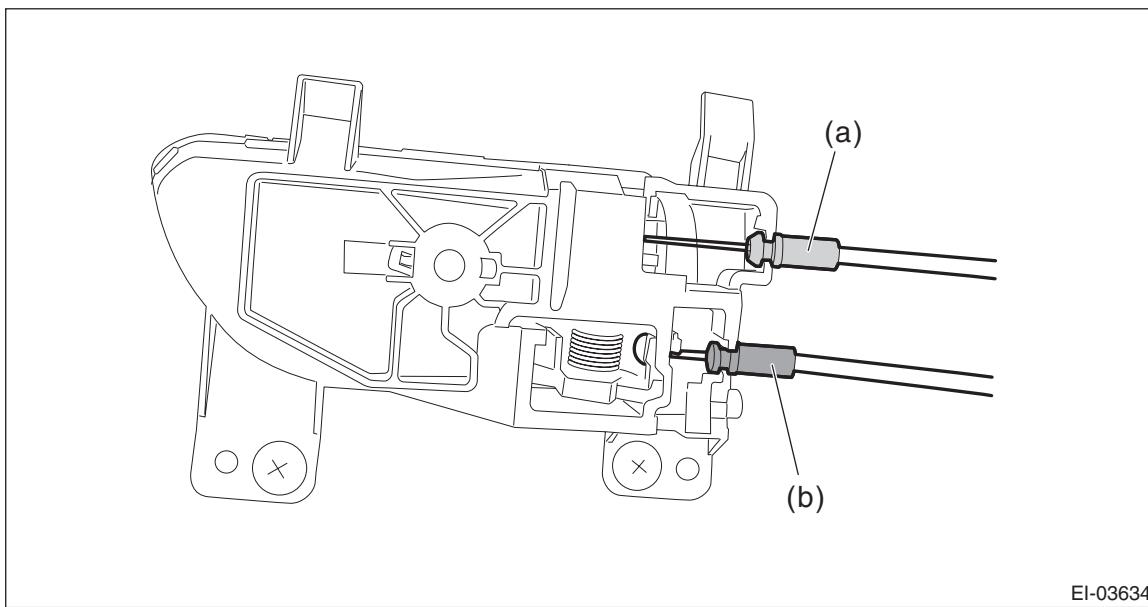

(5) Disconnect the harness connector and remove the trim panel - front door.

CAUTION:

Pulling the door trim excessively may damage the harness.

3) Remove each part as required.


- Remote assembly - door: <Ref. to SL-34, REMOVAL, Front Inner Remote.>
- Switch - power window main: <Ref. to GW-11, MAIN SWITCH, REMOVAL, Power Window Control Switch.>
- Weather strip - door INN: <Ref. to EI-57, DISASSEMBLY, Door Trim.>

2. REAR DOOR

1) Disconnect the ground cable from battery.


2) Remove the trim panel - rear door.

- (1) Attach the protective tape (a) to the door sash.
- (2) Remove the clip, and remove the cover - gusset door (b).
- (3) Open the cover and remove the screw.
- (4) Remove the clips, and remove the trim panel - rear door from the panel assembly - rear door.

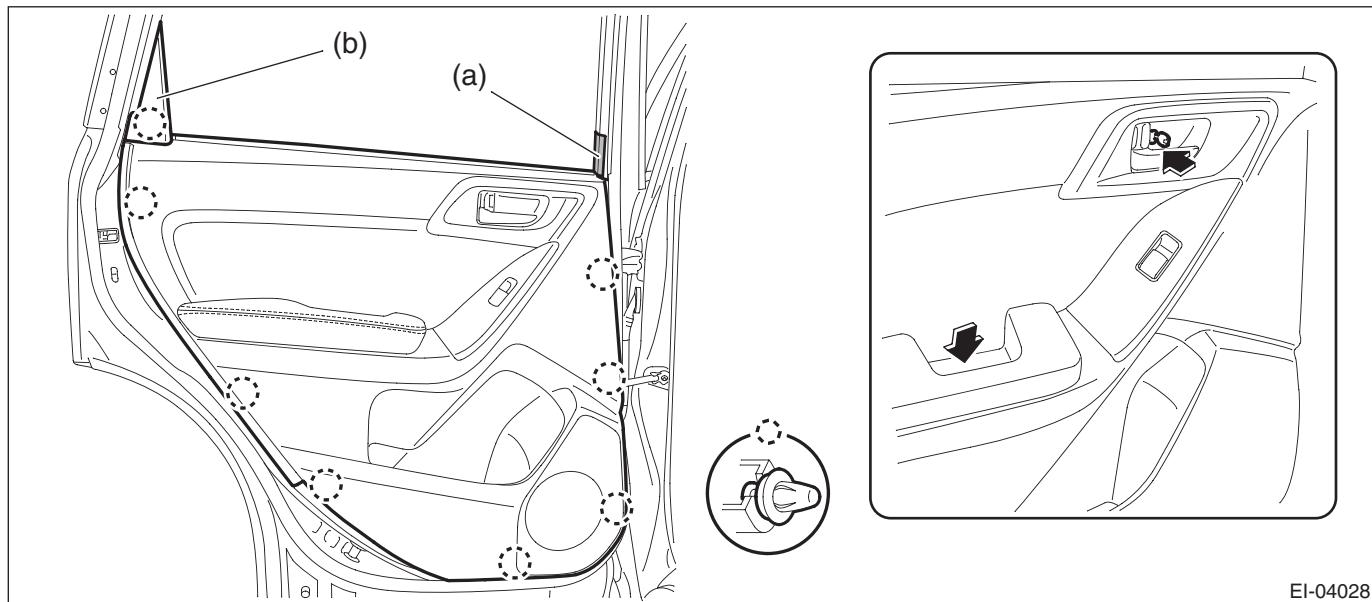

EI-04028

(5) Detach the door lock cable (a) and door open cable (b) from the remote assembly - door.

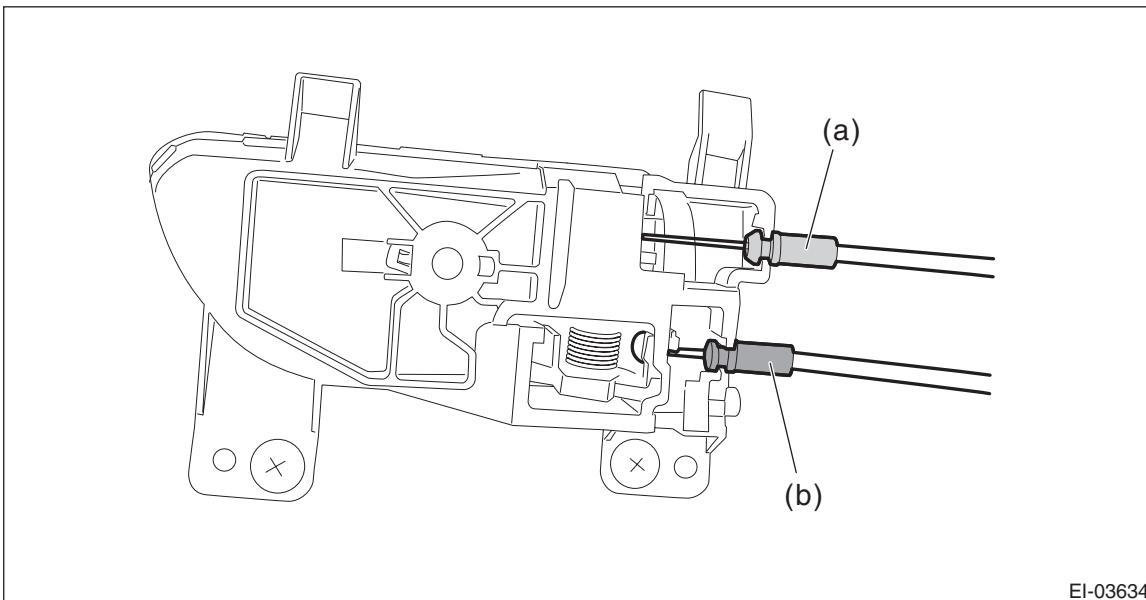

EI-03634

Door Trim

EXTERIOR/INTERIOR TRIM

(6) Disconnect the harness connector and remove the trim panel - rear door.

CAUTION:

Pulling the door trim excessively may damage the harness.

3) Remove each part as required.

- Remote assembly - door: <Ref. to SL-42, REMOVAL, Rear Inner Remote.>
- Switch - power window sub: <Ref. to GW-12, SUB-SWITCH, REMOVAL, Power Window Control Switch.>
- Weather strip - door INN: <Ref. to EI-57, DISASSEMBLY, Door Trim.>

B: INSTALLATION


1) Before installation, check the following items.

- Cable is free from deformation such as fray.
- Grease is applied sufficiently to cable joints.
- If grease is insufficient, add it as necessary before assembling the cable.

2) Install each part in the reverse order of removal.


NOTE:

Attach the door lock cable (a - end ball: small) to the upper side, and attach the door open cable (b - end ball: large) to the lower side.

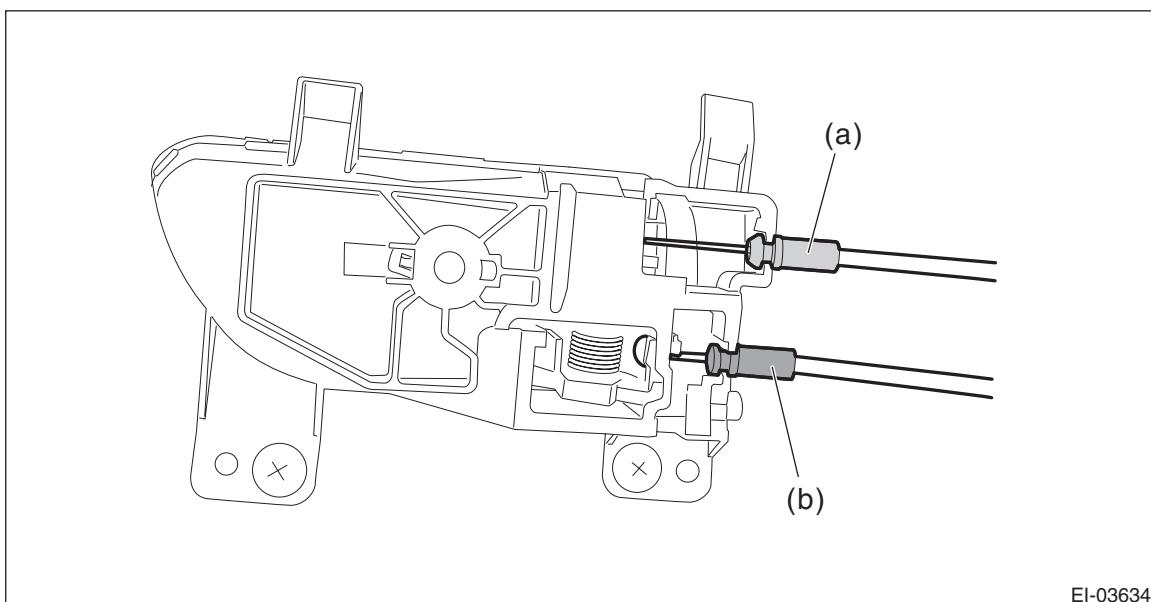

C: DISASSEMBLY

- 1) Remove the door trim.
- 2) Remove the rivets and claws, and remove the weather strip - door INN from the door trim.

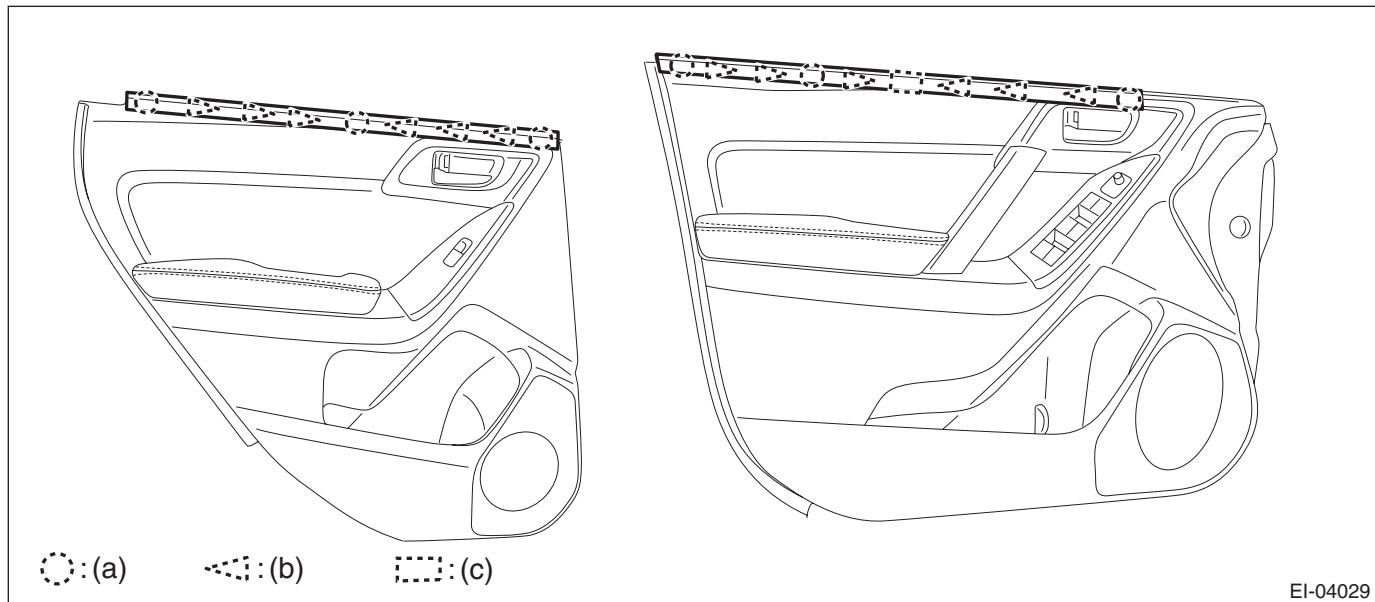

EI-04029

(a) Rivet

(b) Claw

(c) Claw

NOTE:

Remove the rivets with a rivet cutter or nipper, etc.

D: ASSEMBLY

1) Bend the claws while pushing the weather strip - door INN against the door trim.

CAUTION:

Beware of the direction of folding the claws.

2) Install the rivet, and attach unwoven cloth to the rivet crimped section.

CAUTION:


Set the height of rivet crimped section as 3 mm (0.12 in). If the crimp is not sufficient, press them with pliers, etc. in order not to interfere the door trim.

Preparation tool and item:

Hand riveter (corresponding to $\phi 3.2$ mm (0.13 in))

Rivet

Tape: 94029FG000/TAPE or unwoven cloth

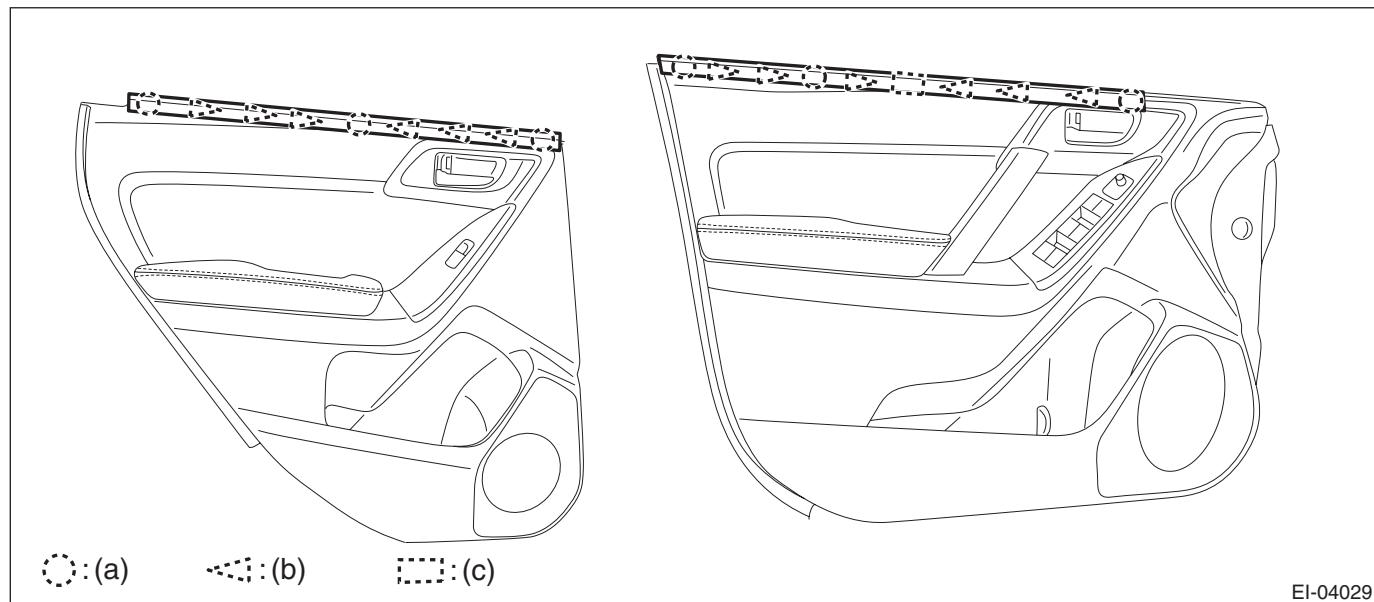

(a) Rivet

(b) Direction of folding claws

(c) Claw bending direction: bend forward for LH side, backward for RH side.

3) After installing the weather strip - door INN, perform the following checks.

- Make sure there are no gaps between the weather strip - door INN and the door trim.
- Make sure there are no looseness when pulling the weather strip - door INN lightly.