


2. Front Under Cover

A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the bolts and clips, and remove the under cover - front.

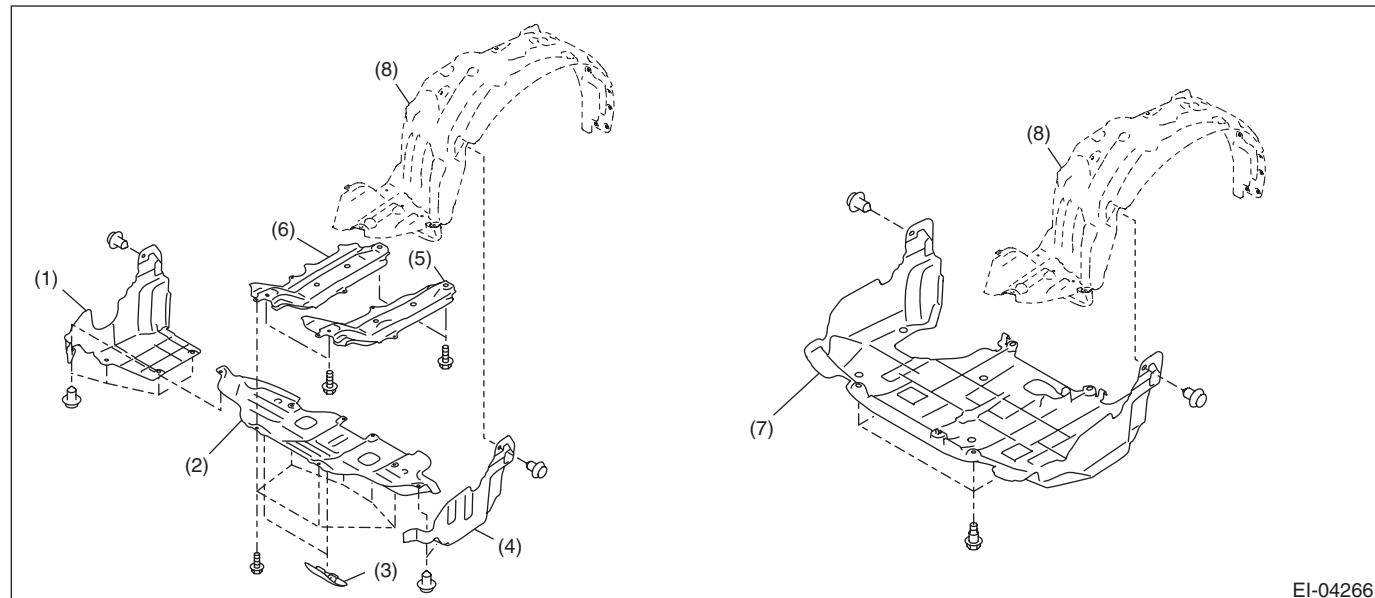

(1) Under cover COMPL - front RH (turbo model)	(4) Under cover COMPL - front LH (turbo model)	(7) Under cover - front (non-turbo model)
(2) Plate CTR - aluminum (turbo model)	(5) Under cover - front guard LH (turbo model)	(8) Mud guard - front
(3) Cover - plate (turbo model)	(6) Under cover - front guard RH (turbo model)	

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

***Refer to “COMPONENT” of “General Description”.<Ref. to EI-2, FRONT UNDER COVER, COMPO-
NENT, General Description.>***