


27. Rear Gate Trim

A: REMOVAL

- 1) Remove the trim panel - rear gate UPR.
 - (1) Remove the claws on the trim edge.
 - (2) Release the claws in the center of trim, and remove the trim panel - rear gate UPR.

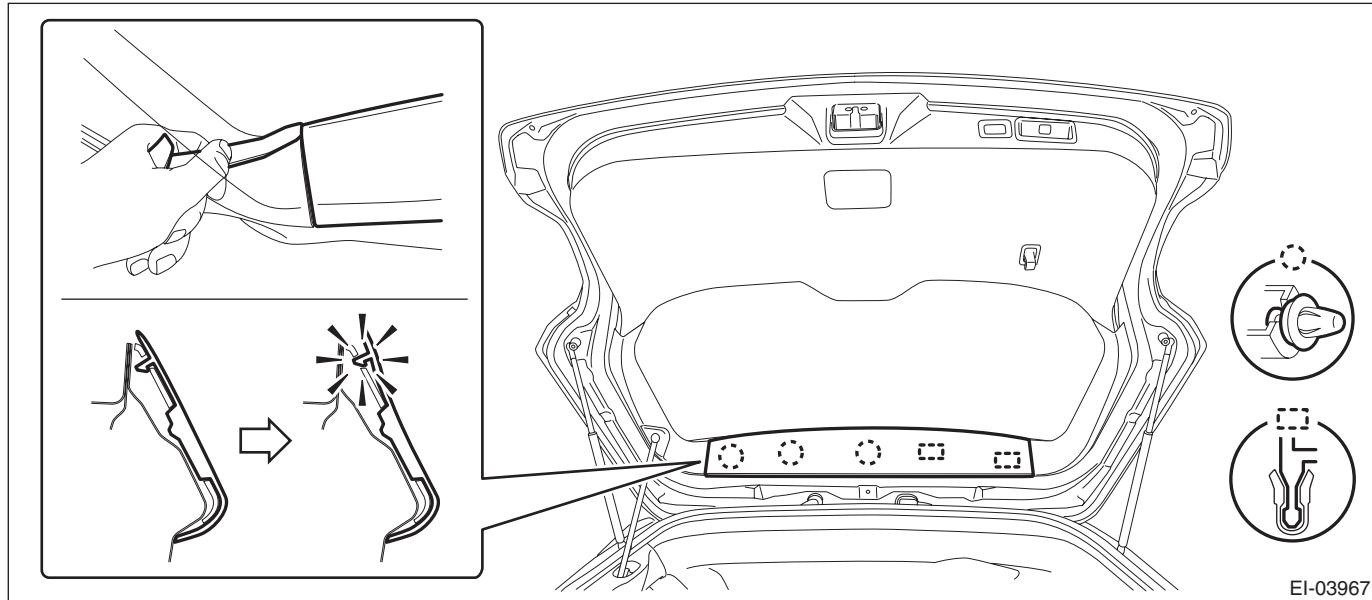

- 2) Remove the trim panel - rear gate pillar side.


(1) Disconnect the rod - power rear gate before removing the trim panel - rear gate pillar side LH. (Only for models with power rear gate)

CAUTION:

For the disconnection procedure of the rod - power rear gate, refer to “REMOVAL”, “Power Rear Gate Rod” in the “POWER REAR GATE” section and observe the precautions for removal. <Ref. to PRG-15, REMOVAL, Power Rear Gate Rod.>


(2) Release the claws.

(3) Remove the claws on the bottom of trim, and remove the trim panel - rear gate pillar side.

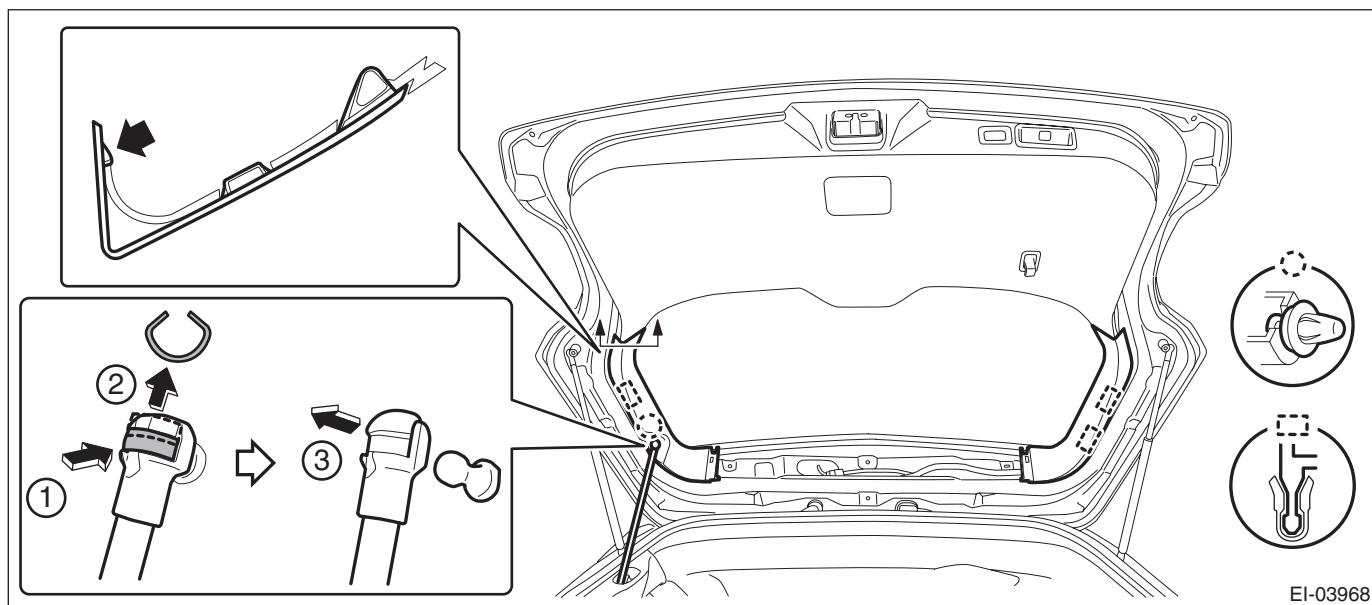

3) Remove the trim panel - rear gate LWR.

- (1) Remove the power rear gate inner switch and disconnect the connector. (Only for models with power rear gate)
- (2) Remove the screw and clips on both ends.
- (3) Release the clips, and remove the trim panel - rear gate LWR.

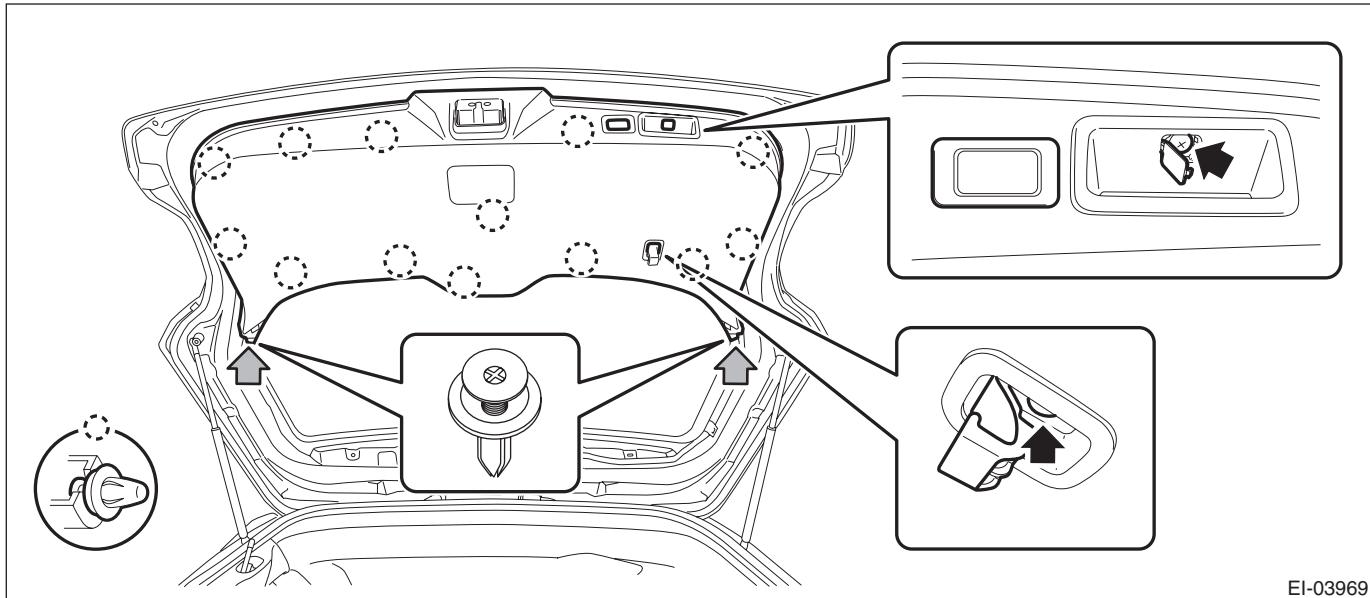

EI-03969

B: INSTALLATION

CAUTION:

For installation of the rod - power rear gate, refer to “INSTALLATION”, “Power Rear Gate Rod” in the “POWER REAR GATE” section and observe the precautions for installation. <Ref. to PRG-16, INSTALLATION, Power Rear Gate Rod.>

Install each part in the reverse order of removal.