


3. Mud Guard

A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the wheels.
- 3) Remove the screws and clips to remove the mud guard.

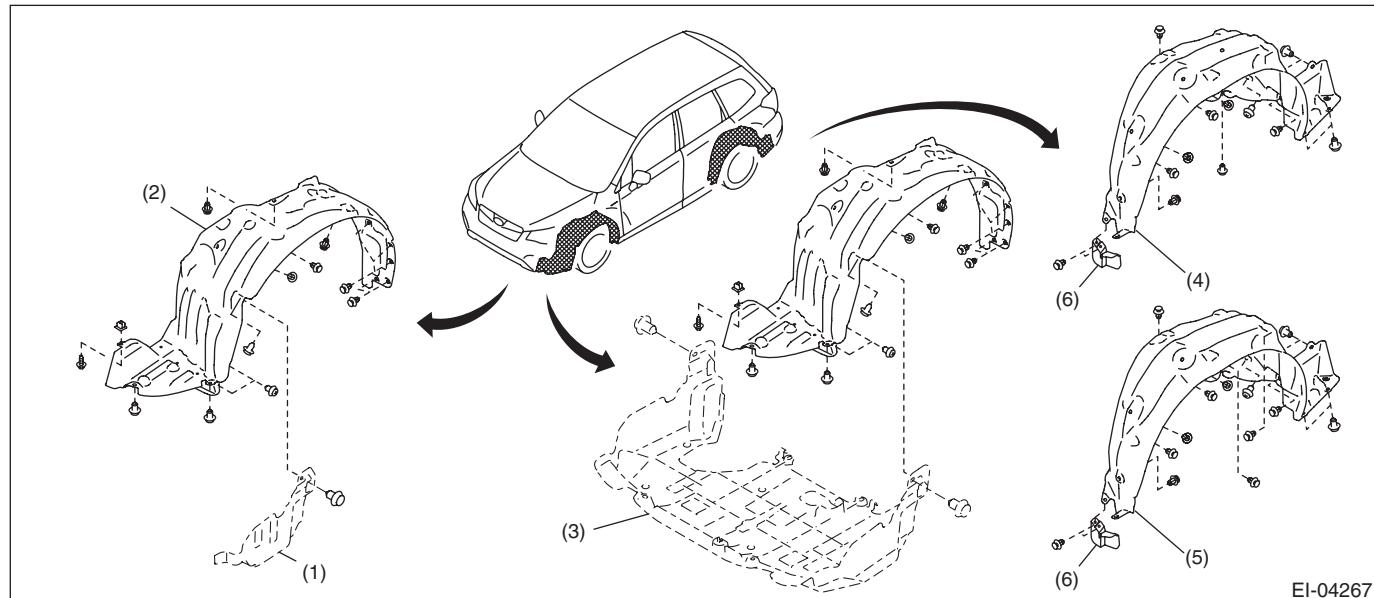

(1) Under cover COMPL - front LH (turbo model)	(3) Under cover - front (non-turbo model)	(5) Mud guard - rear LH
(2) Mud guard - front	(4) Mud guard - rear RH	(6) Plate - air flap rear

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Wheel nut: 120 N·m (12.24 kgf-m, 88.5 ft-lb)