

5. Fuel Tank Protector

A: NOTE

Refer to “FUEL INJECTION” section for removal and installation procedure of the fuel tank protector. <Ref. to FU(H4DO)-108, Fuel Tank Protector.>