

7. Front Hood Duct

A: NOTE

Refer to the "Front hood" section of "EXTERIOR BODY PANELS" for removal and installation procedure of the front hood duct. <Ref. to EB-11, FRONT HOOD INSULATOR, REMOVAL, Front Hood.>