


General Description

GLASS/WINDOWS/MIRRORS

1. General Description

A: COMPONENT


1. FIXED GLASS

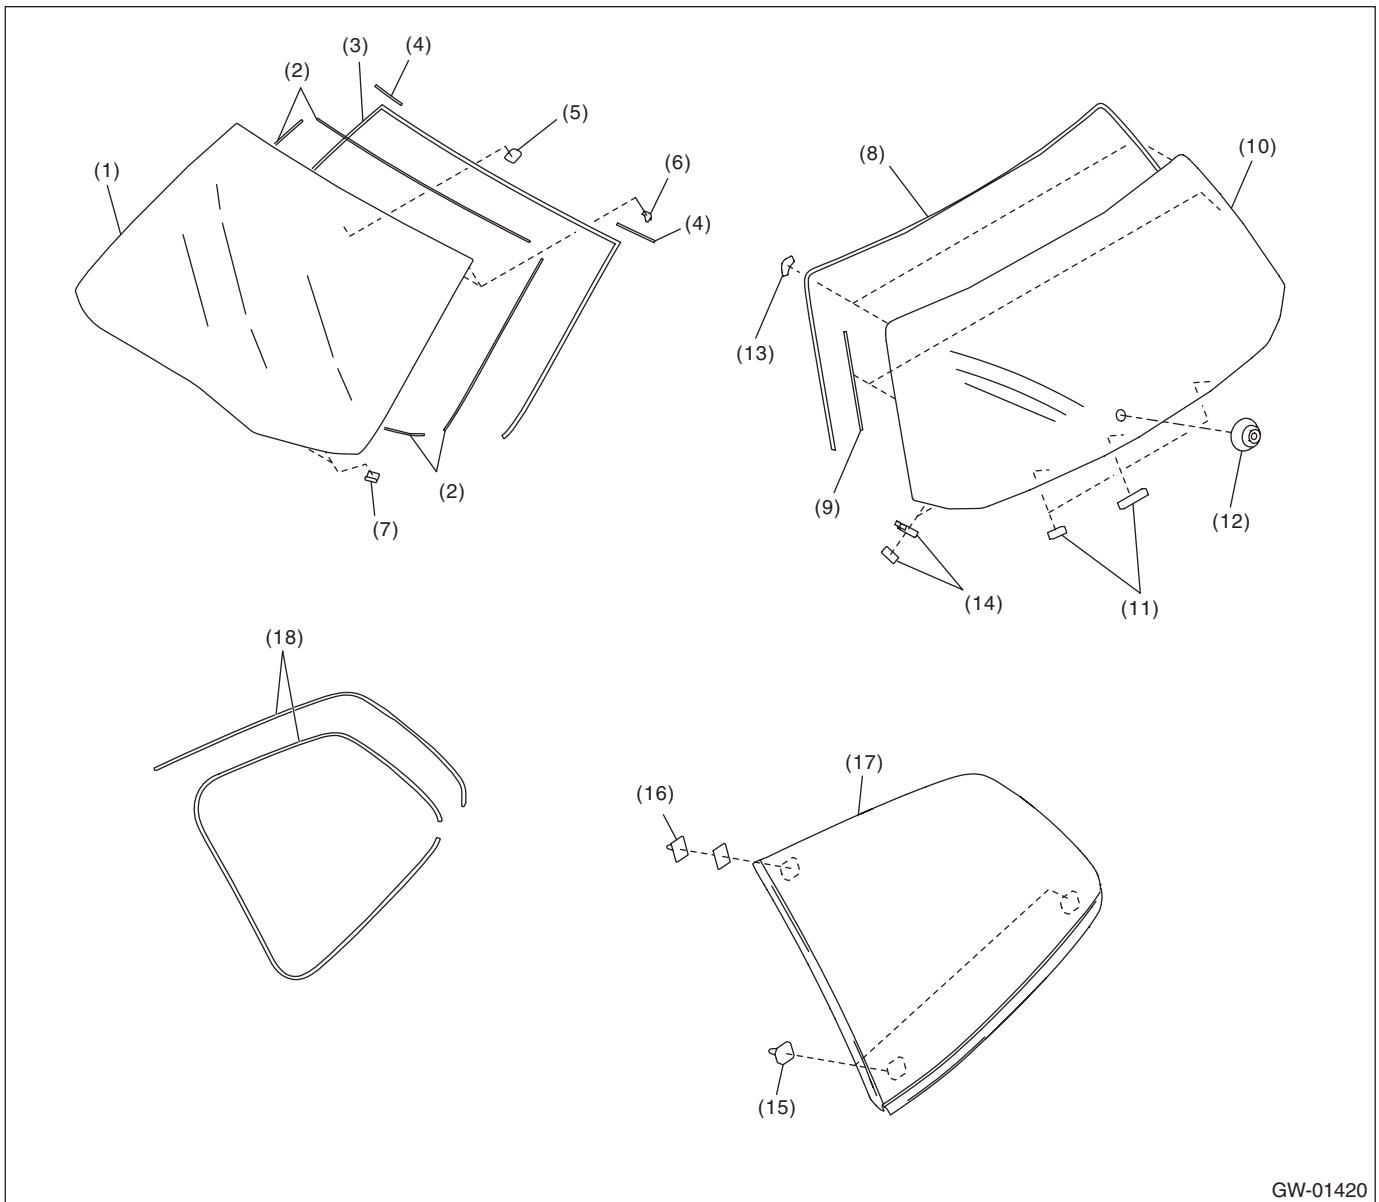

GW-01420

- | | | |
|---------------------------------|----------------------------|----------------------------------|
| (1) Glass - front window | (7) Seal - lower | (13) Locating pin - rear gate |
| (2) Dam rubber - front | (8) Rubber - rear gate | (14) Fastener - rear gate |
| (3) Molding - front window | (9) Dam rubber - rear gate | (15) Locating pin - rear quarter |
| (4) Seal - upper | (10) Glass - rear gate | (16) Fastener - rear quarter |
| (5) Base - inner mirror | (11) Spacer - rear gate | (17) Glass - rear quarter |
| (6) Locating pin - front window | (12) Cap - pivot | (18) Dam rubber - rear quarter |

2. FRONT DOOR GLASS

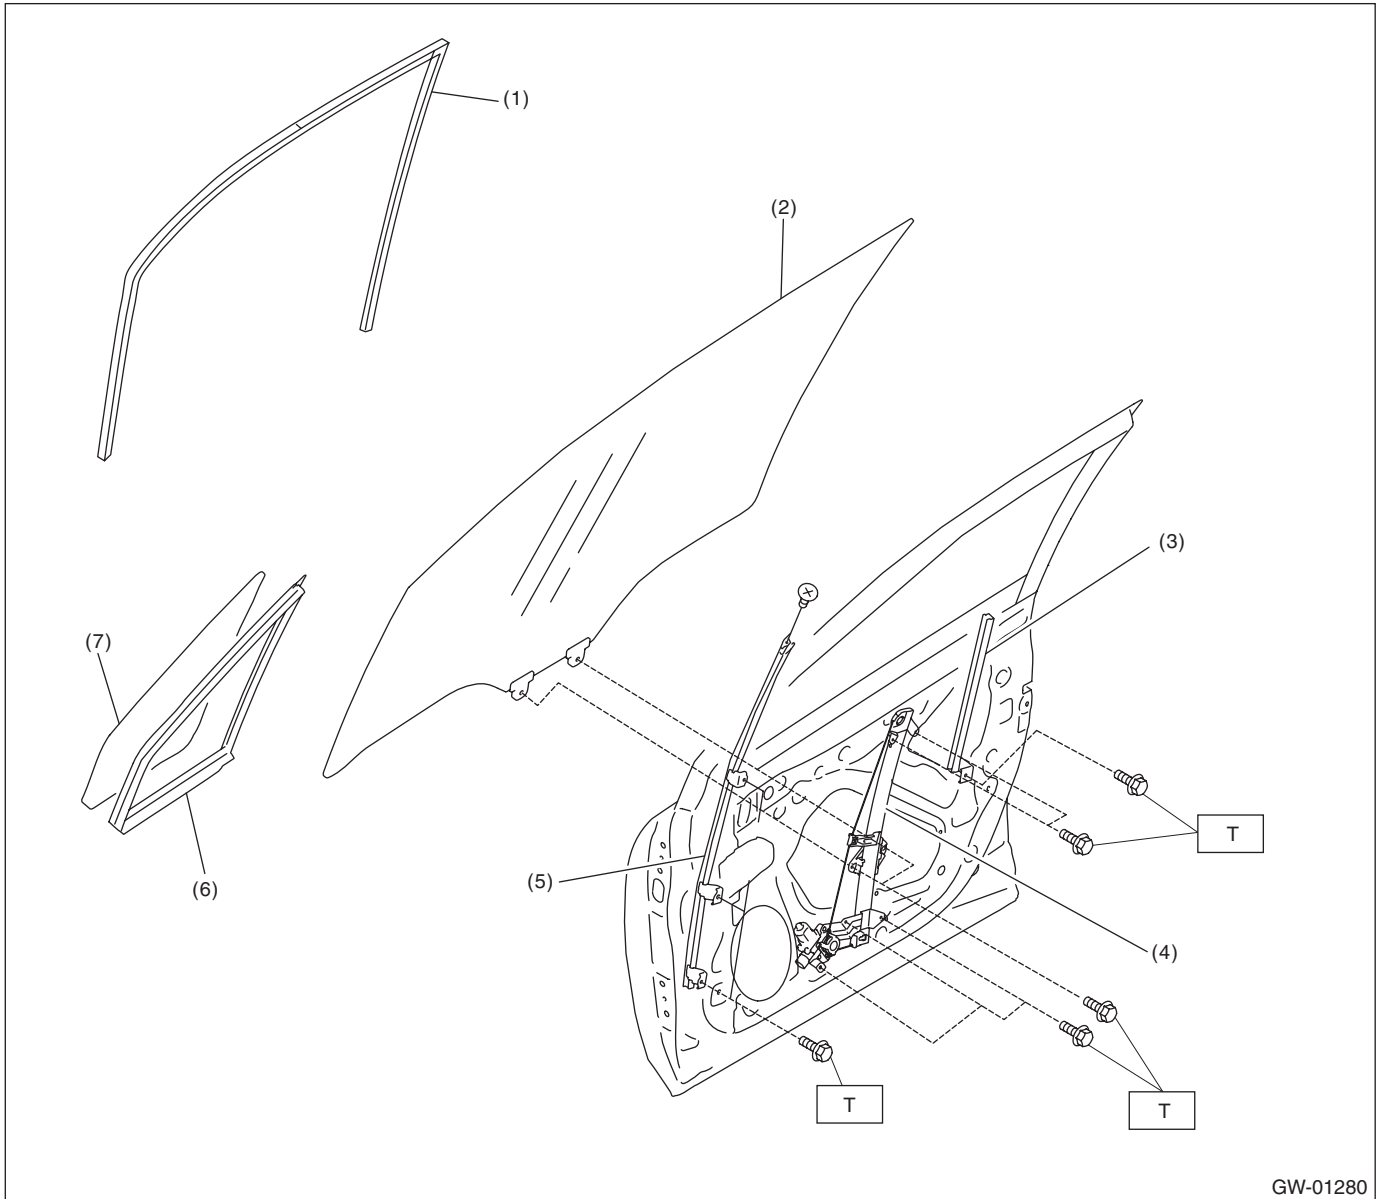

GW-01280

- | | |
|------------------------------------|--|
| (1) Running channel - front door | (5) Sash COMPL - partition |
| (2) Glass ASSY - front door | (6) Weather strip - front door partition |
| (3) Sash COMPL - lower | (7) Glass - front door partition |
| (4) Regulator & motor ASSY - front | |


Tightening torque: N-m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

General Description

GLASS/WINDOWS/MIRRORS

3. REAR DOOR GLASS

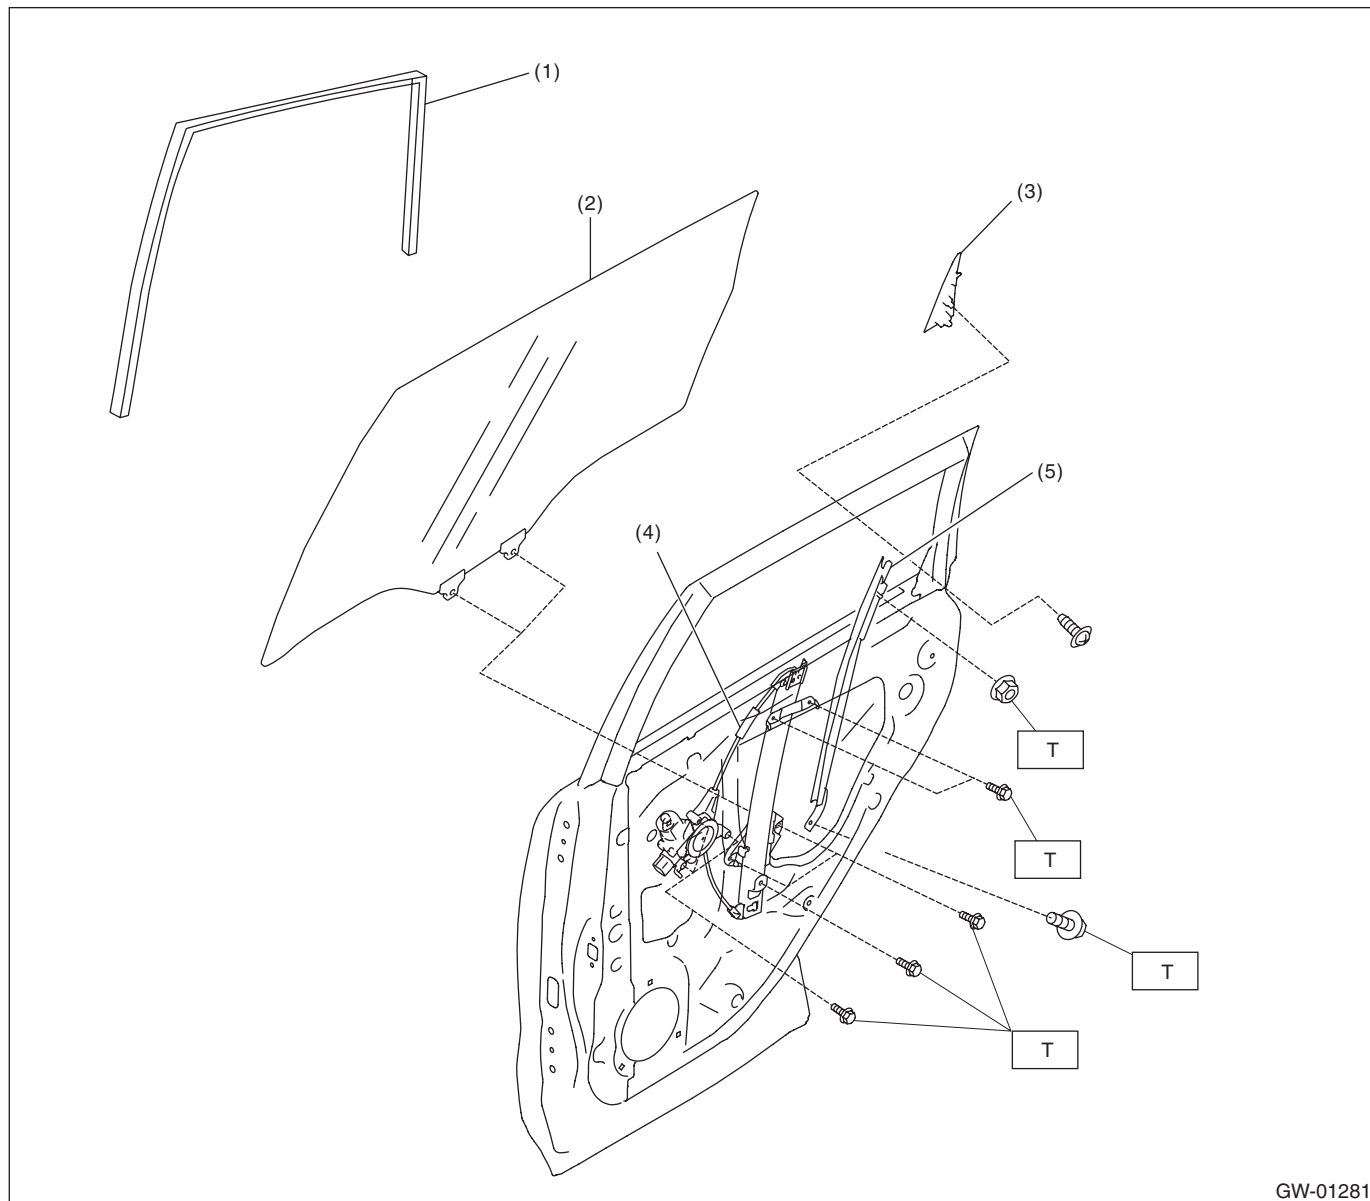

GW-01281


- (1) Running channel - rear door
- (2) Glass ASSY - rear door
- (3) Rear outer gusset cover

- (4) Regulator & motor ASSY - front
- (5) Sash ASSY - rear door lower

Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

4. MIRROR

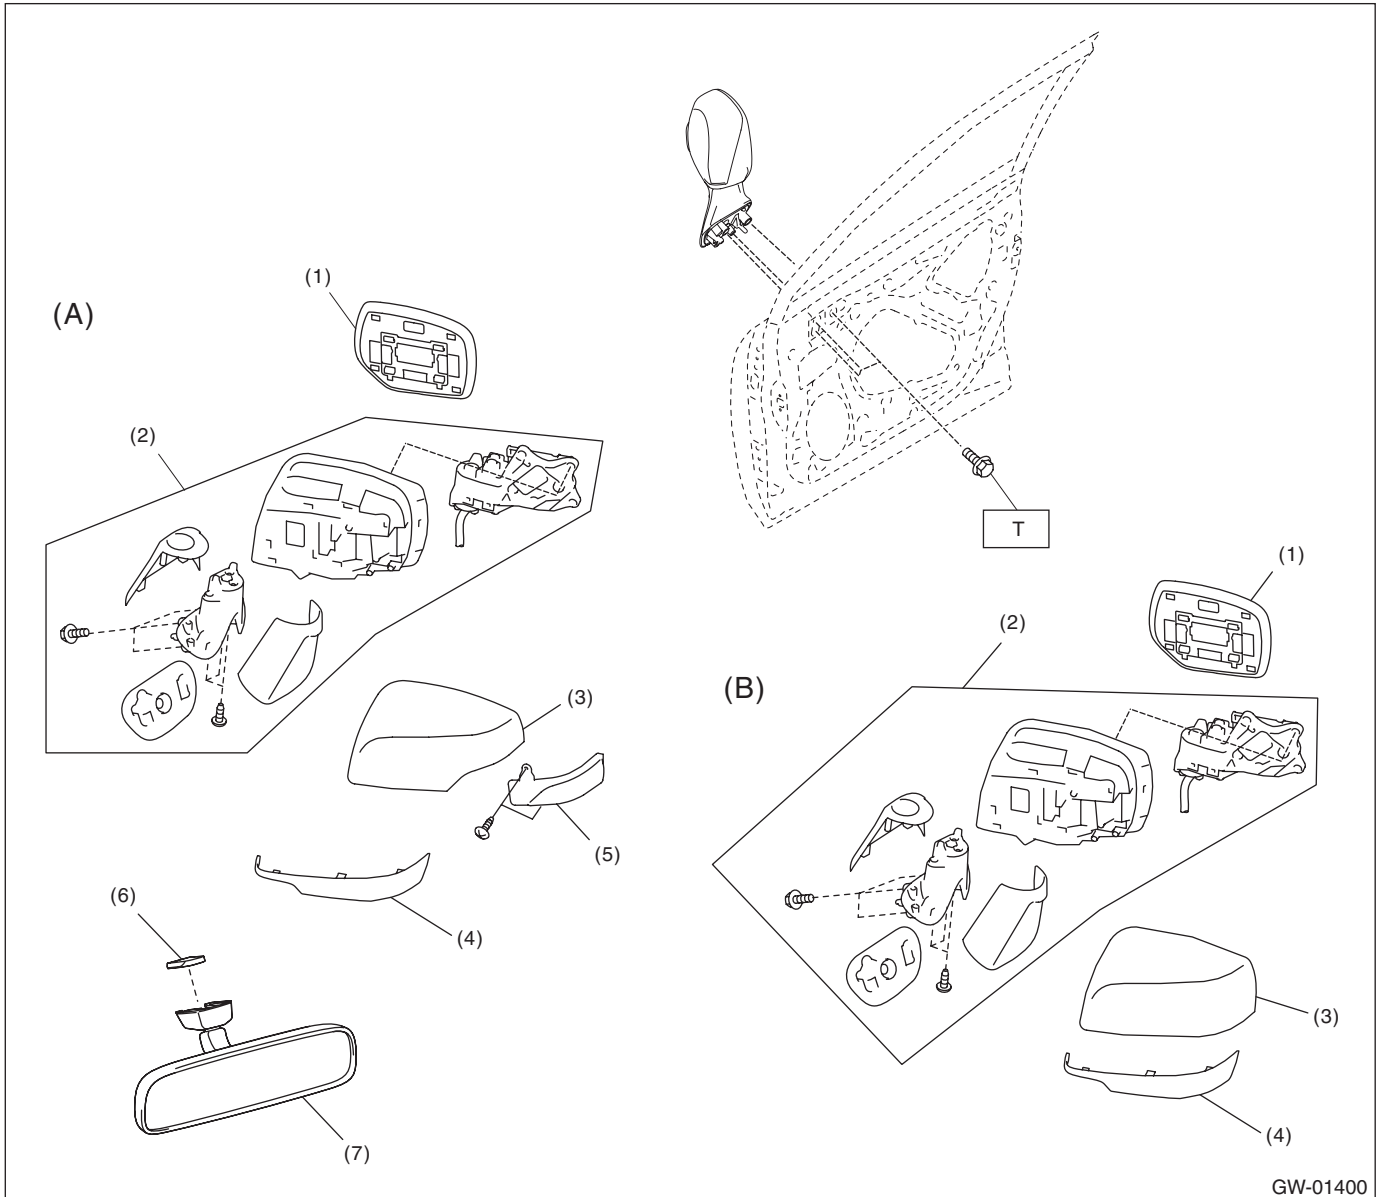

(A) Model with side turn

(B) Model without side turn

- | | |
|------------------------------------|-----------------------------------|
| (1) Mirror - repair | (5) Light ASSY - side turn mirror |
| (2) Mirror unit - door | (6) Base - inner mirror |
| (3) Cover - cap outer mirror | (7) Mirror ASSY - inner rearview |
| (4) Cover - cap outer mirror lower | |

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

B: CAUTION


- Before disassembling or reassembling parts, always disconnect the battery ground cable from battery. When replacing the audio, control module and other parts provided with memory functions, record the memory contents before disconnecting the battery ground cable. Otherwise, the memory is cleared.
- Avoid impact and damage to the glass.
- Reassemble the parts in the reverse order of disassembly procedure unless otherwise indicated.
- Connect the connectors securely during reassembly.
- After reassembly, make sure that the each component operates normally.

General Description

GLASS/WINDOWS/MIRRORS

C: PREPARATION TOOL

1. SPECIAL TOOL

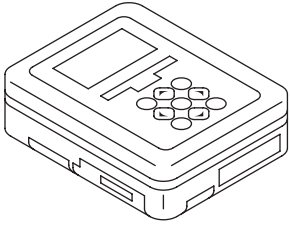ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for setting of each function and trouble-shooting for electrical system.

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.
Piano wire	Used for removing the window glass.
Cutter knife	Used for removing the window glass.
Windshield glass knife	Used for removing the window glass.