


### 10. Rearview Mirror

#### A: REMOVAL


**CAUTION:**

Be careful not to damage the mirror surface and the glass - front window.

- 1) Release the claws, and then remove the cover.

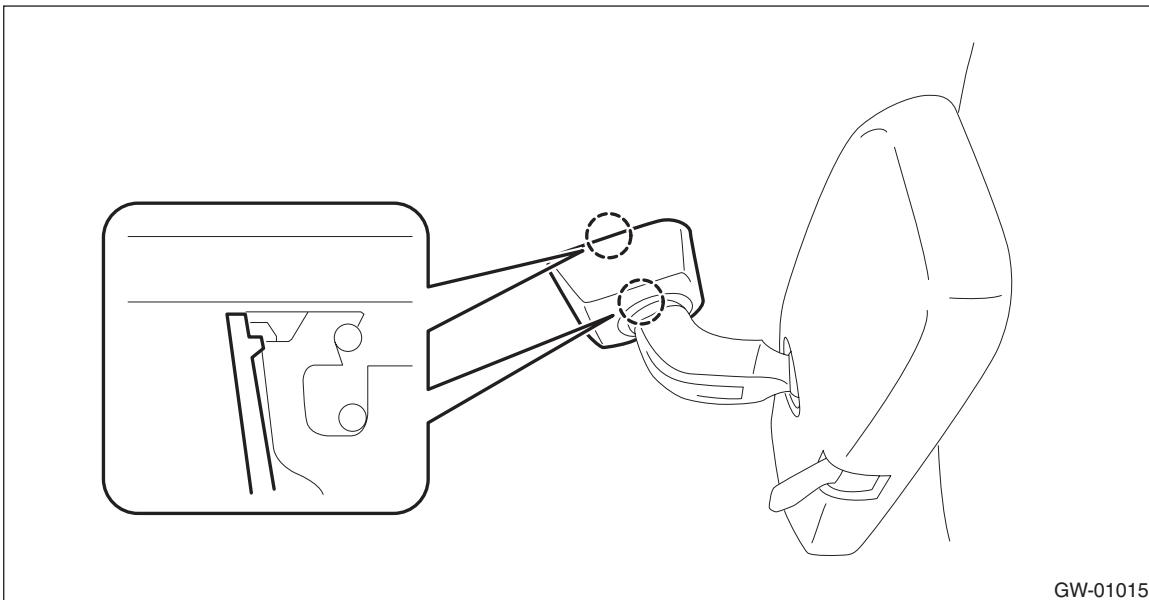

- 2) Release the lock lever, and slide the mirror assembly - inner rearview to remove.

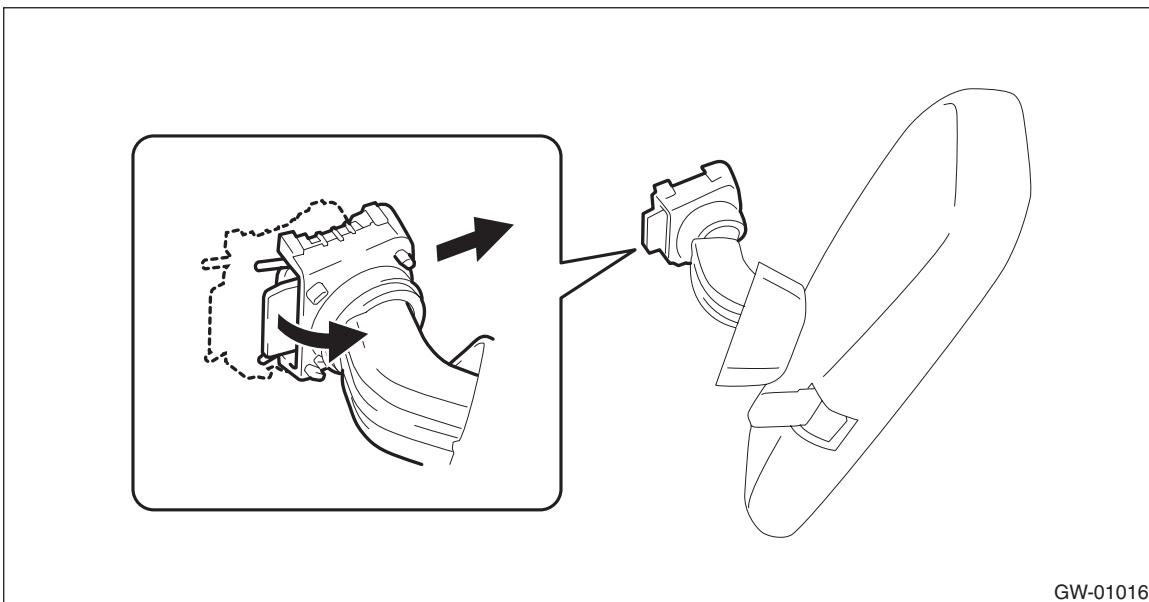

- 3) When the mirror mount is damaged, use something like piano wire or a spatula to remove.

#### B: INSTALLATION

Install each part in the reverse order of removal.

#### C: INSPECTION

Check the mirror and mirror mount for damage.