

8. Outer Mirror Assembly


A: REMOVAL

- 1) Remove the trim panel - front door.<Ref. to EI-54, FRONT DOOR, REMOVAL, Door Trim.>
- 2) Turn over the sealing cover - front door.

CAUTION:


- Carefully remove the butyl tape. Excessive force will easily break the sealing cover - front door.
- If the sealing cover - front door gets broken, replace it with a new part.
- Be careful not to allow the butyl tape to contact any trims and seats because the butyl tape, which has a strong adhesive force, is difficult to remove once it adhered.

- (1) Disconnect each connector.
- (2) Carefully remove the butyl tape and turn over the sealing cover - front door within the area where the operation can be performed.

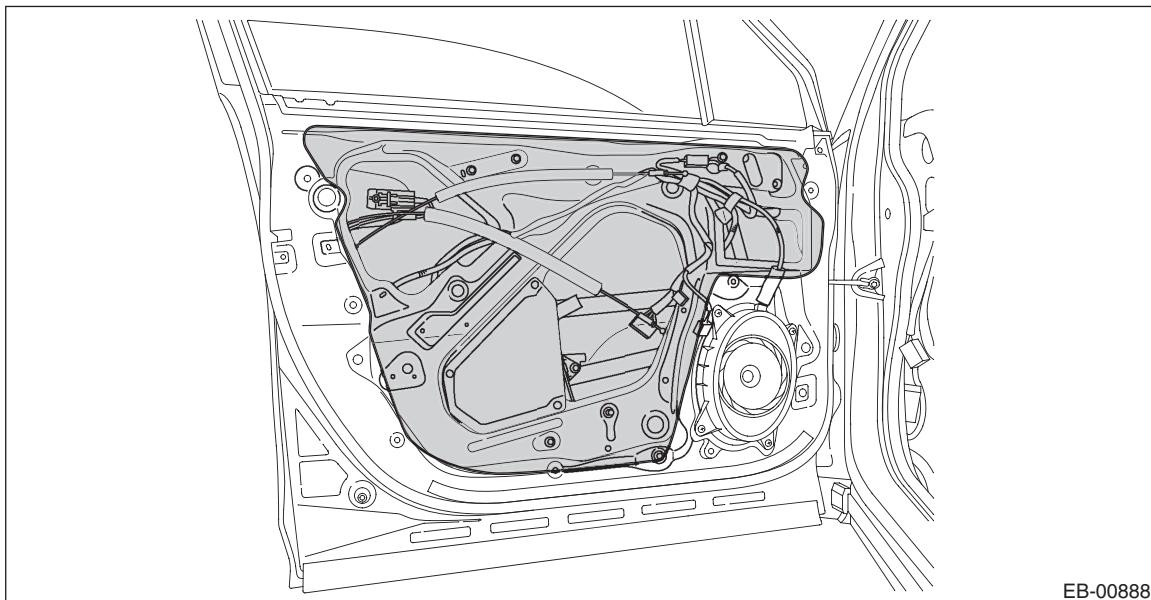

- 3) Remove the outer mirror assembly.

- (1) Disconnect the connector.
- (2) Remove the bolts to remove outer mirror assembly.

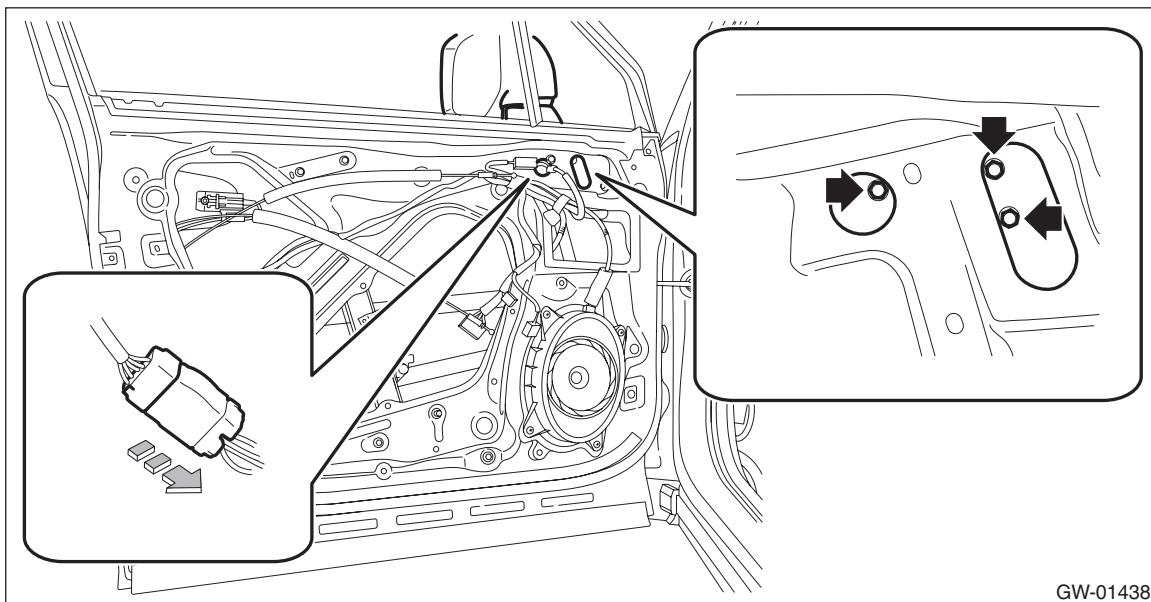

Outer Mirror Assembly

GLASS/WINDOWS/MIRRORS

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Outer mirror assembly: 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)


C: DISASSEMBLY

CAUTION:


- When removing the mirror - repair, be careful not to damage the back surface of mirror - repair with a flat tip screwdriver.
- When installing the mirror - repair, insert the connector and clip securely.

- 1) Operate the remote control mirror switch to face the mirror - repair upward.
- 2) Disconnect the ground cable from battery.
- 3) Remove the mirror - repair.

(1) Using a flat tip screwdriver, release the clip, and slide the mirror - repair downward to remove.

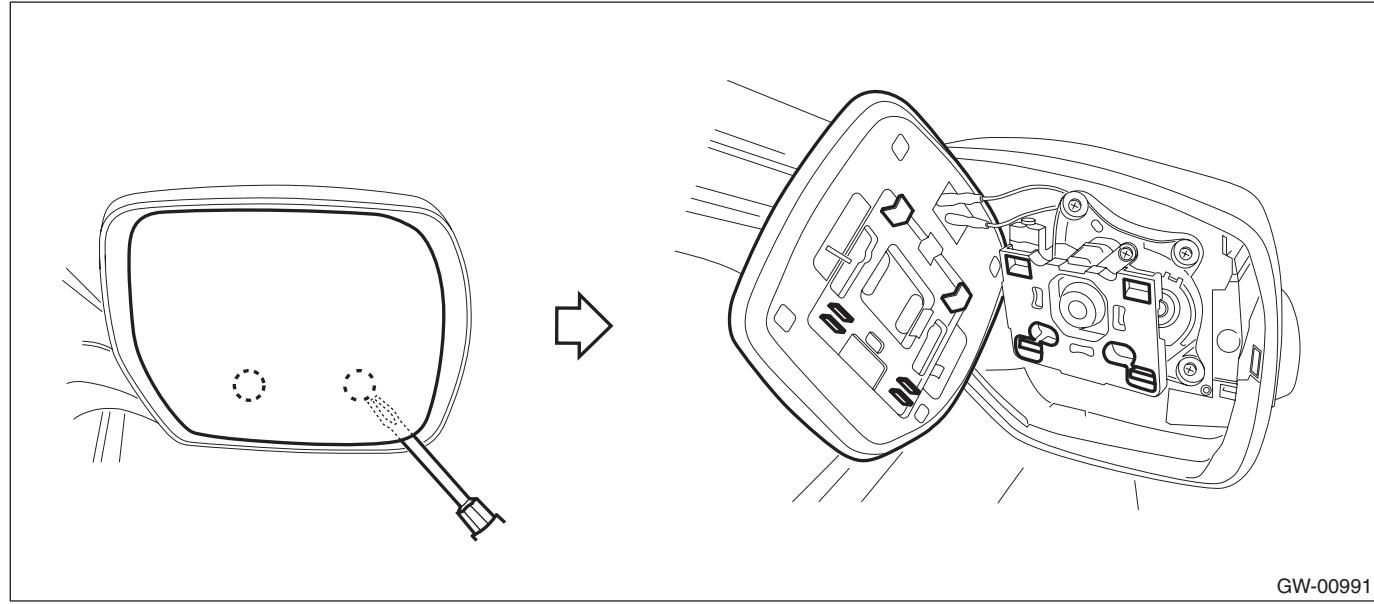


(2) Disconnect the mirror heater connector. (Model with mirror heater)

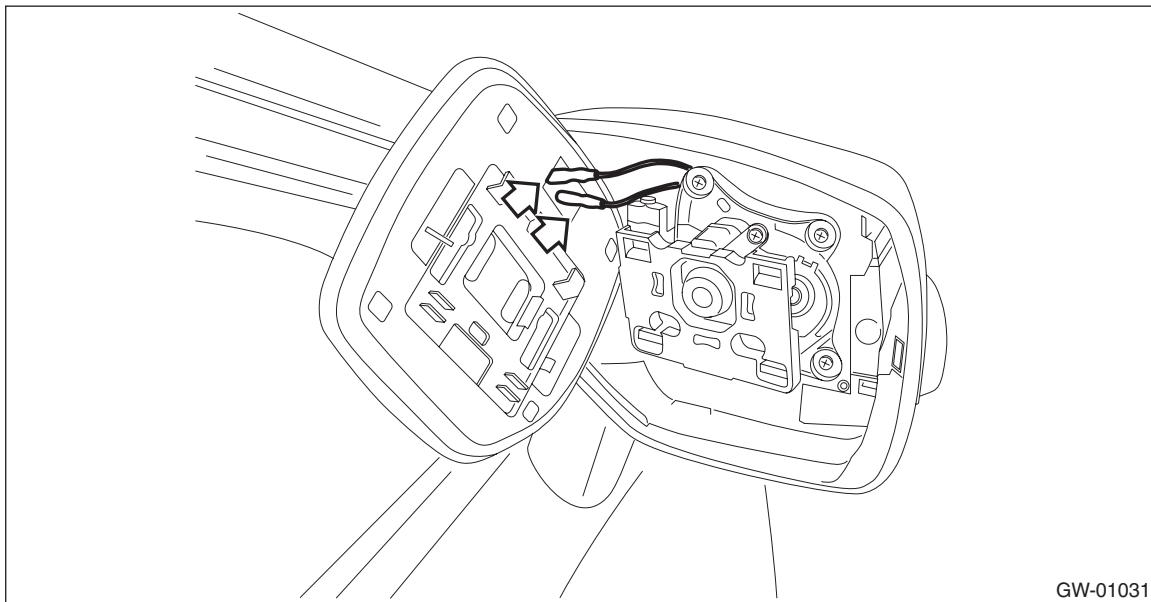

Outer Mirror Assembly

GLASS/WINDOWS/MIRRORS


4) Release the claws, and then remove the cover - cap outer mirror lower.

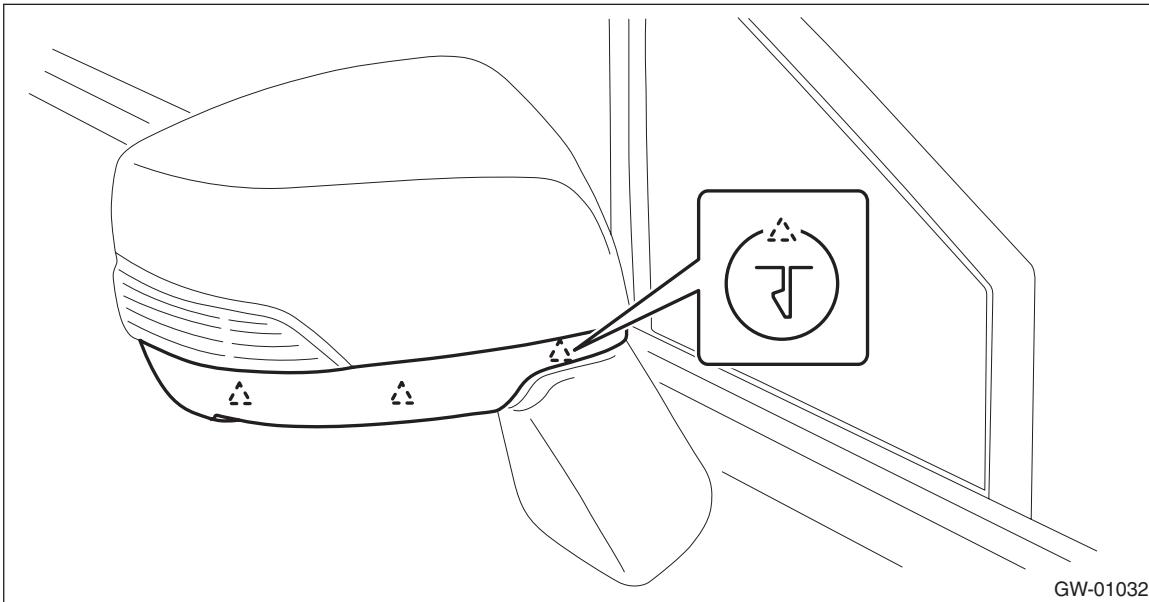

5) Release the claws, and then remove the cover - cap outer mirror.

CAUTION:

Be careful not to apply excessive force when removing the cover - cap outer mirror, as the lower hooks may become damaged.

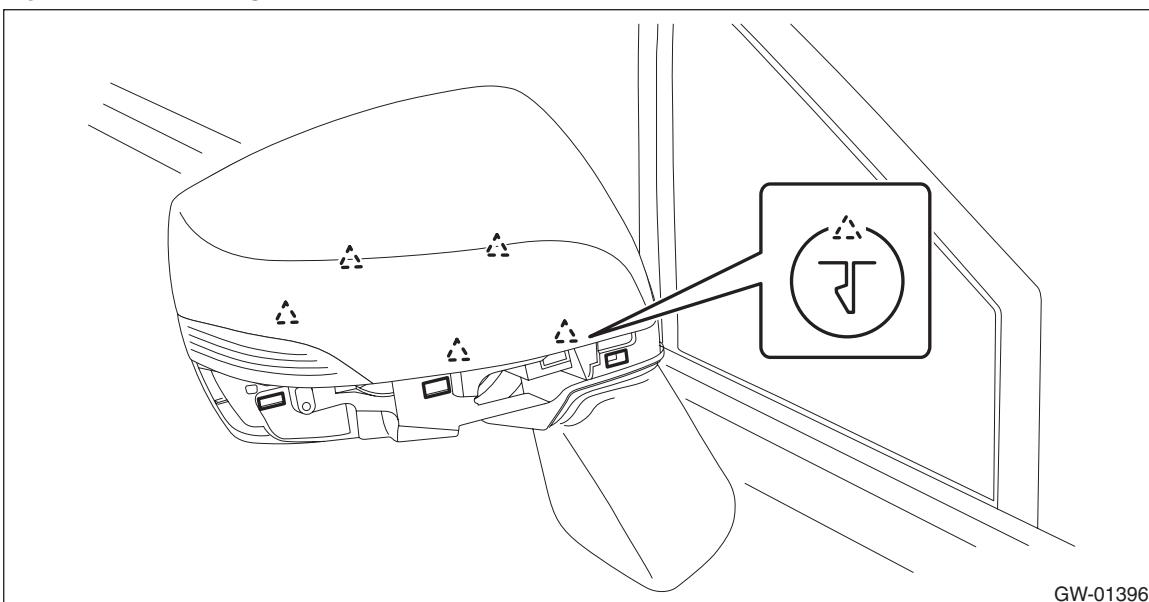


Outer Mirror Assembly

GLASS/WINDOWS/MIRRORS


6) Remove the light assembly - side turn mirror.

- (1) Remove the screws and pull out the light assembly - side turn mirror to the front of the vehicle.
- (2) Disconnect the connector and remove the light assembly - side turn mirror.

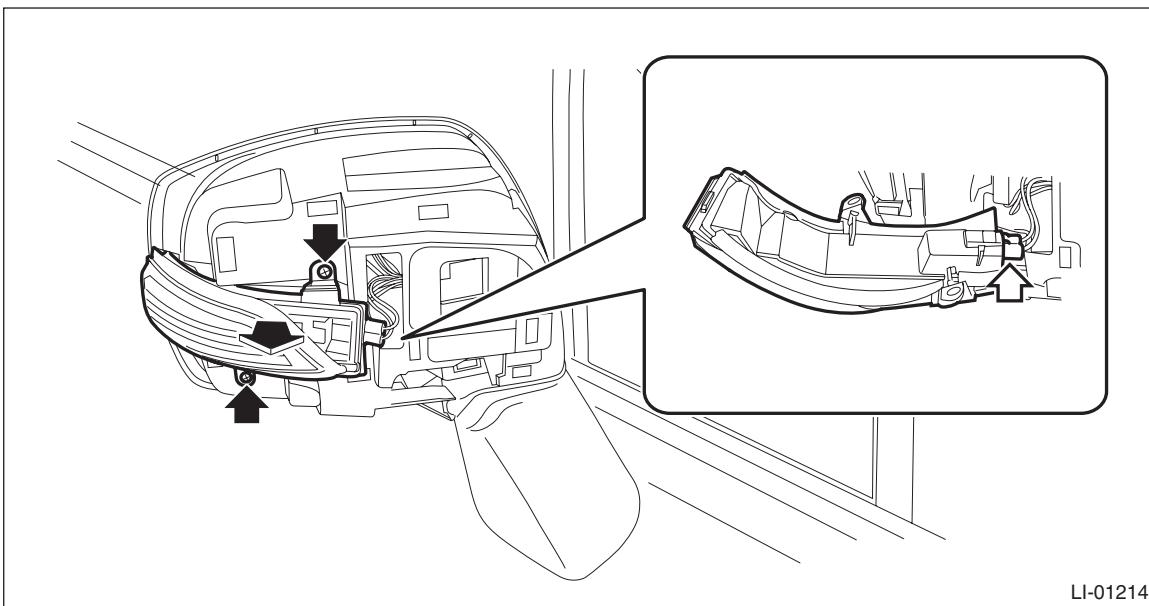

D: ASSEMBLY


1) Install the light assembly - side turn mirror.

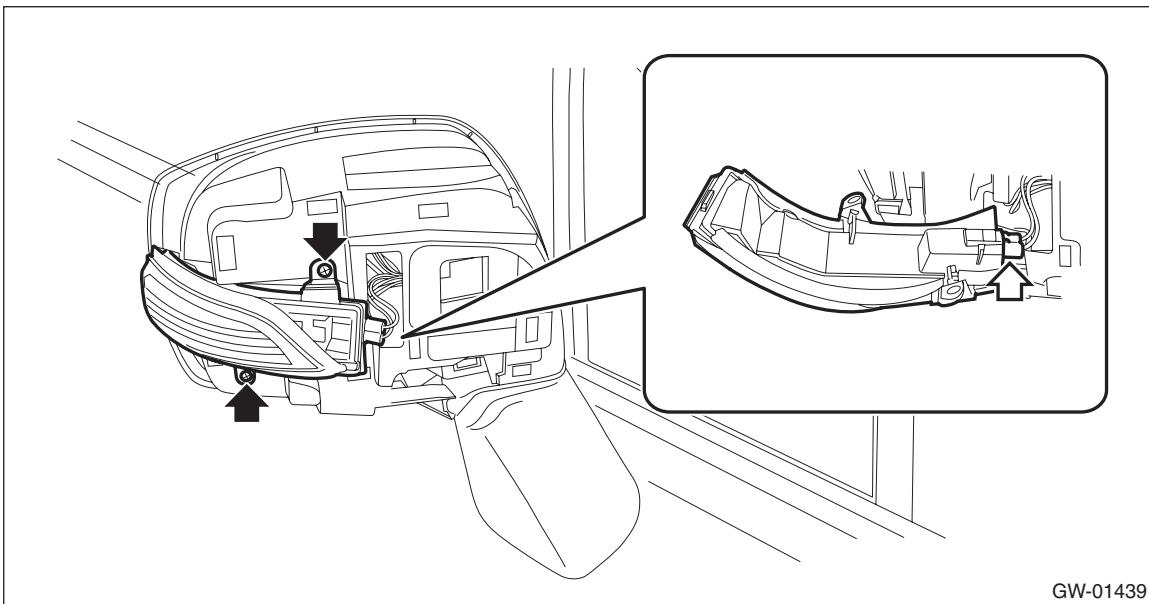


Outer Mirror Assembly

GLASS/WINDOWS/MIRRORS

2) Engage the claws into the hole and install the cover - cap outer mirror.

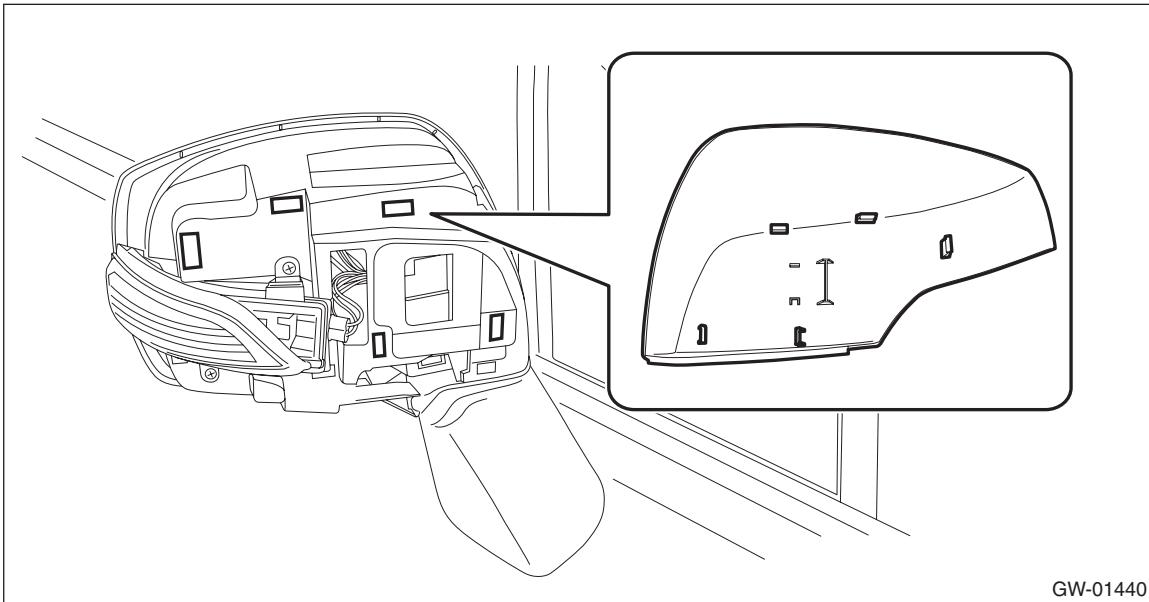

3) Engage the claws into the hole and install the cover - cap outer mirror lower.

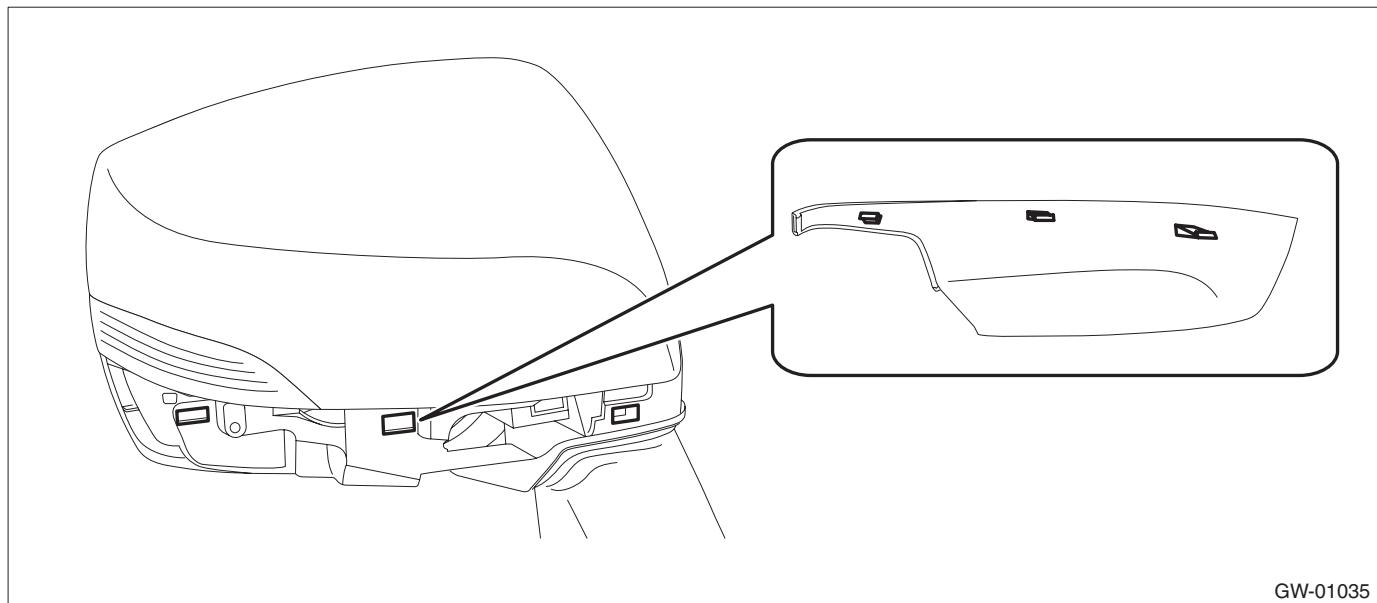

4) Check that all the claws are securely engaged.
5) Install the mirror - repair in the reverse order of removal.

CAUTION:


Be sure to insert the connector and clips securely.

Outer Mirror Assembly

GLASS/WINDOWS/MIRRORS

E: INSPECTION

- 1) Disconnect the outer mirror connector.
- 2) Apply battery voltage between the outer mirror connector terminals and check the mirror operation.

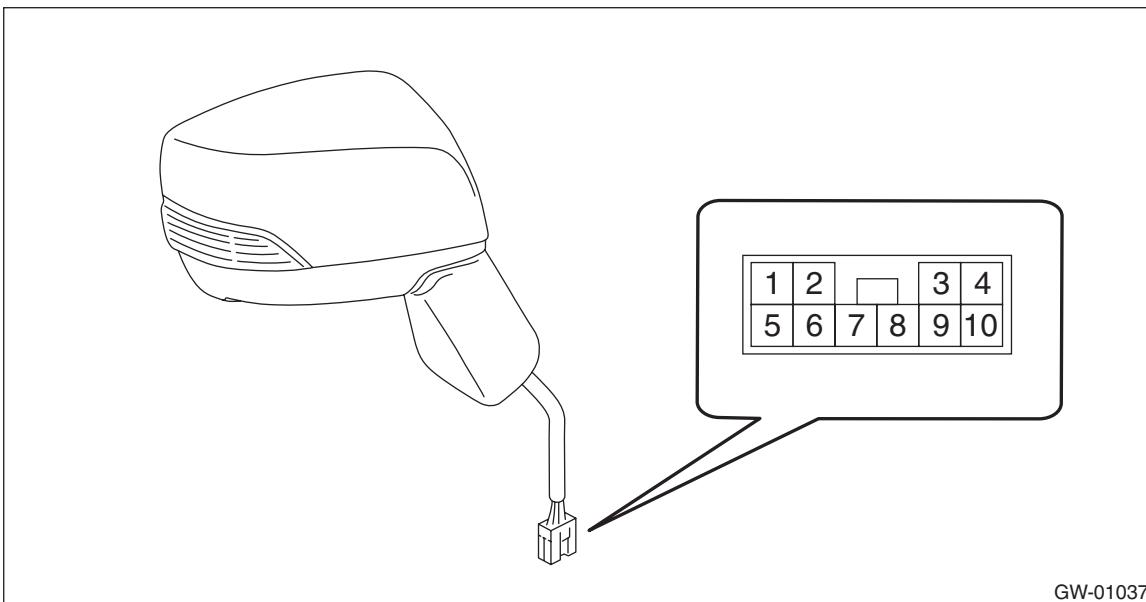

Terminal No.	Inspection conditions	Switch position
—	—	OFF
3 (+) — 8 (-)	Apply battery voltage between terminals.	UP
8 (+) — 3 (-)	Apply battery voltage between terminals.	DOWN
7 (+) — 3 (-)	Apply battery voltage between terminals.	LEFT
3 (+) — 7 (-)	Apply battery voltage between terminals.	RIGHT

- 3) If it does not operate normally, replace the outer mirror assembly.