


Electrical Component Location

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

3. Electrical Component Location

A: LOCATION

1. OUTSIDE VEHICLE

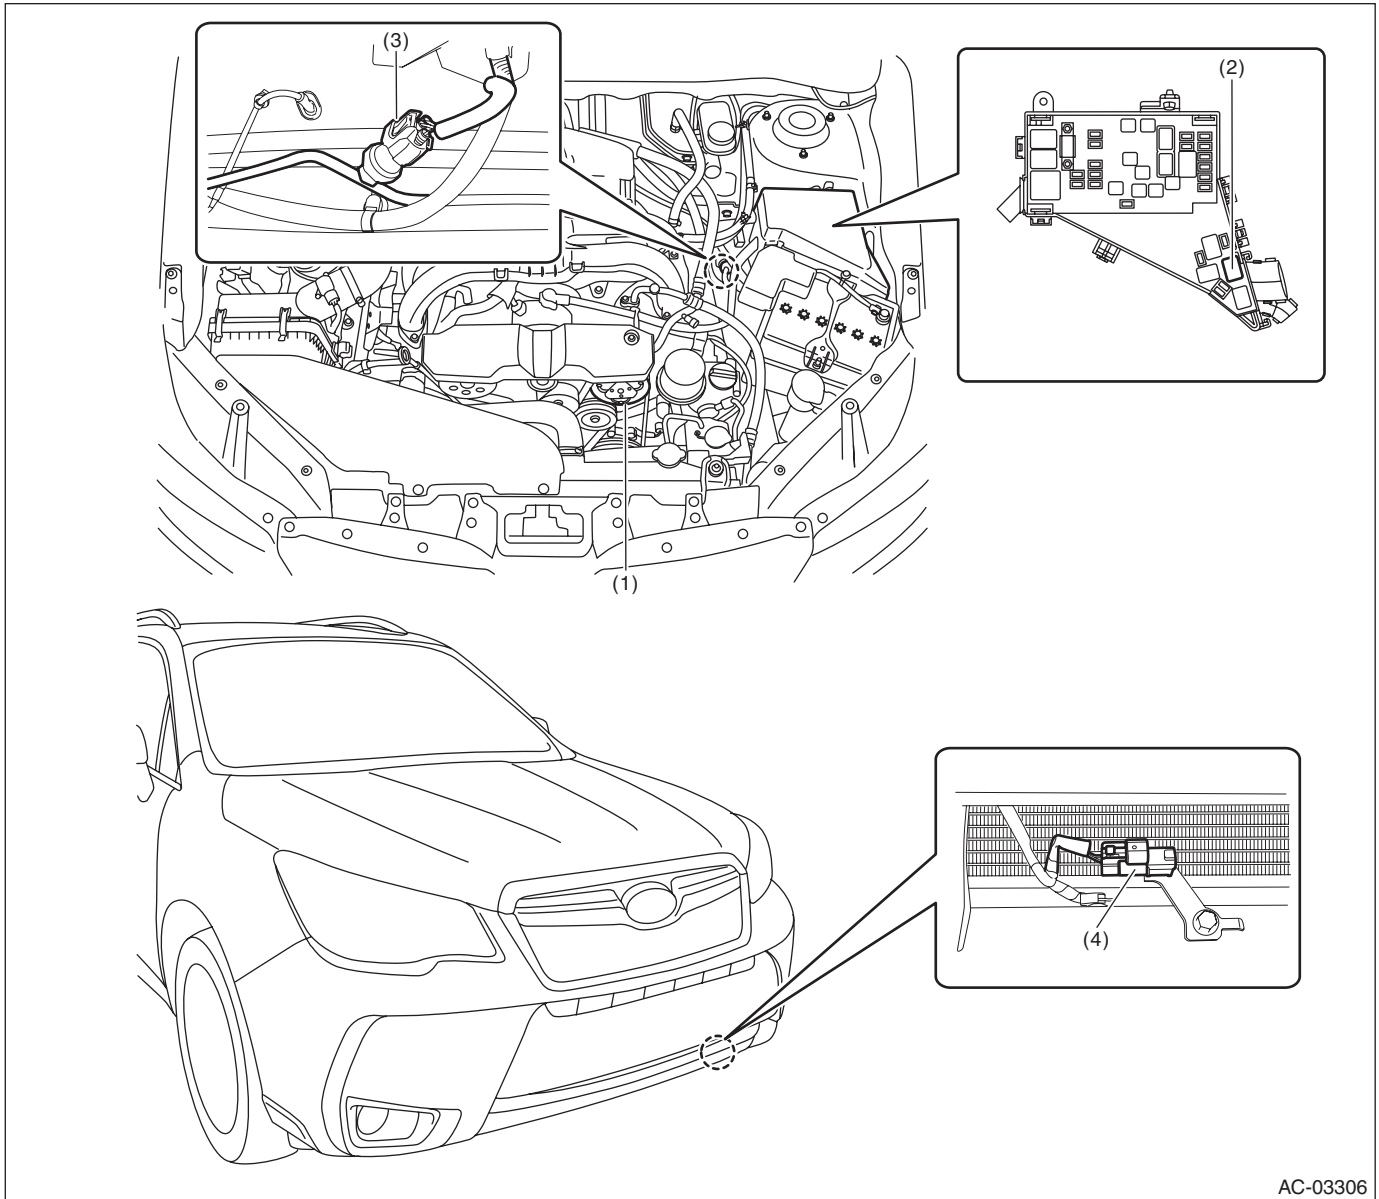

AC-03306

(1) A/C compressor

(3) Pressure switch


(4) Ambient sensor

(2) A/C relay

Electrical Component Location

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

2. COMPARTMENT

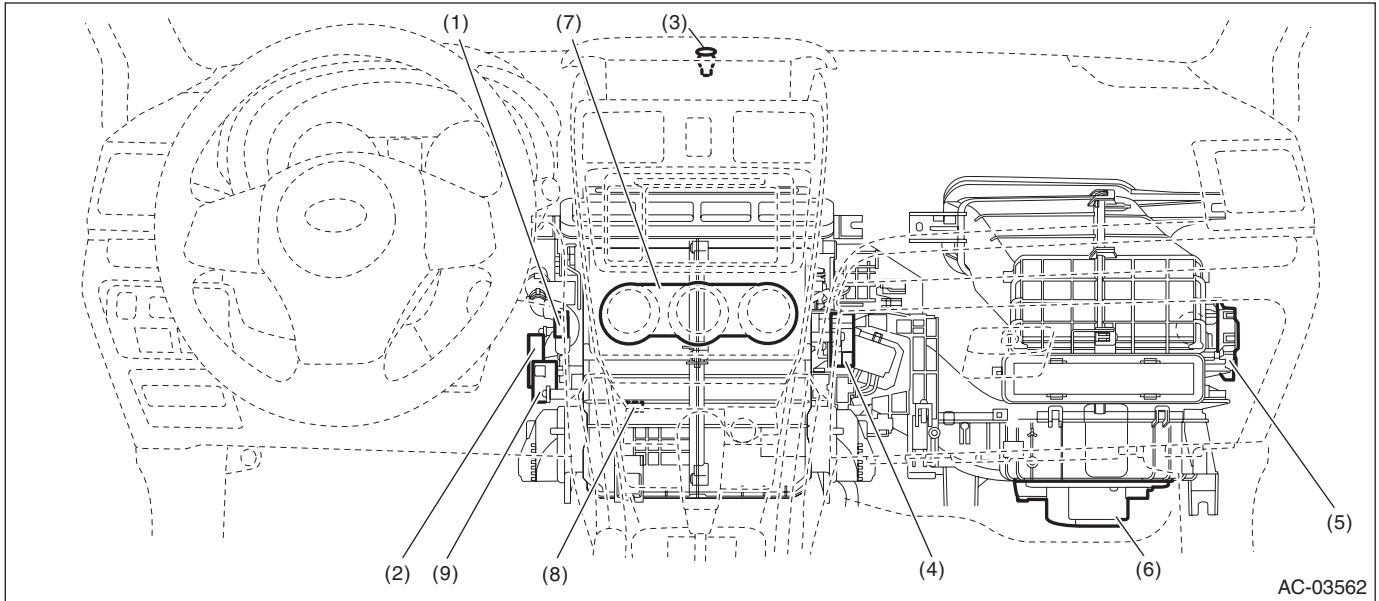

- | | | |
|--------------------------------|---|------------------------|
| (1) In-vehicle sensor | (4) Air mix door actuator*1 or air mix door actuator RH*2 | (7) A/C control panel |
| (2) Air mix door actuator LH*2 | (5) Intake door actuator | (8) Evaporator sensor |
| (3) Sunload sensor | (6) Blower motor | (9) Mode door actuator |

*1: Without left/right independent air conditioning function

*2: With left/right independent air conditioning function