


# Electrical Component Location

## IMMOBILIZER (DIAGNOSTICS)

### 3. Electrical Component Location

#### A: LOCATION

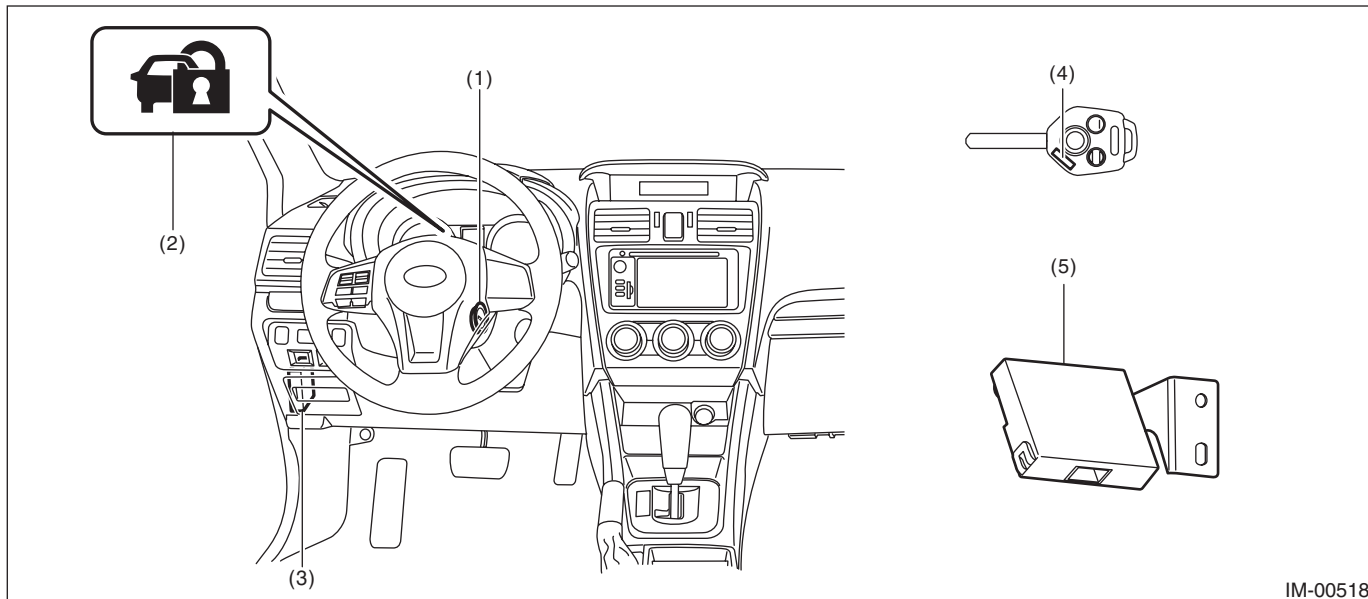

IM-00518

(1) Antenna

(3) Body integrated unit

(5) Security control module (for C0 and C5 models only)

(2) Security indicator light (LED bulb)

(4) Transponder