

11. User Customizing

A: OPERATION

For operation procedures, refer to “PC application help for Subaru Select Monitor”.

B: LIST

Combination meter

Items to be displayed	Initial setting value	Customize setting	Note
Air temperature correction	±0°C	-5°C — +5°C	Temperature compensation can only be performed by 1°C (1°C change = 1.8°F) interval.
Mean fuel efficiency correction	±0%	-10% — +10%	—