

# Basic Diagnostic Procedure

## KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)

### 1. Basic Diagnostic Procedure

#### A: PROCEDURE

##### CAUTION:

- Subaru Select Monitor kit is required for reading DTC, performing diagnosis and reading current data.
- Before removal or installation, be sure to remove any foreign matter (dust, moisture, oil, etc.).
- For models with the keyless access system, registration of the immobilizer may be required after a replacement of the control module, etc. For detailed procedure, refer to the “REGISTRATION MANUAL FOR IMMOBILIZER”.

##### NOTE:

- Using the Function Setting (Customize), check that the keyless access system is not in a cancelled state. <Ref. to SL-112, OPERATION, Function Setting (Customize).>
- Check List for Interview <Ref. to KPS(diag)-3, Check List for Interview.>

Step	Check	Yes	No
<b>1 CHECK BATTERY.</b> Using a tester, measure the battery voltage.	Is the voltage 11 V or more?	Go to step 2.	Charge or replace the battery and perform check pre-inspection. Go to step 2.
<b>2 CHECK PRE-INSPECTION.</b> Use the interview check list to interview the user. <Ref. to KPS(diag)-3, Check List for Interview.>	Was the symptoms of the trouble recorded in the interview?	Go to step 3.	Interview the user again.
<b>3 BASIC INSPECTION.</b> Check the DTC of the LAN system. <Ref. to LAN(diag)-8, INSPECTION, General Description.>	Is LAN system normal?	Go to step 4.	Follow the DTC of the LAN system to repair or replace.
<b>4 CHECK TROUBLE SYMPTOM.</b> 1) Read diagnostic trouble code (DTC) for the keyless access system. <Ref. to KPS(diag)-25, OPERATION, Read Diagnostic Trouble Code (DTC).> NOTE: If the communication function of the Subaru Select Monitor cannot be executed properly, check the communication circuit. <Ref. to KPS(diag)-23, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, Subaru Select Monitor.> 2) Record all DTCs, time stamp and freeze frame data. NOTE: For time stamp, refer to “LAN SYSTEM”. <Ref. to LAN(diag)-6, TIME STAMP, CAUTION, General Description.>	Is DTC displayed on Subaru Select Monitor?	Perform diagnosis according to the DTC.	Go to step 5.
<b>5 CHECK PHENOMENON LIST.</b> Check the “Phenomenon List”. <Ref. to KPS(diag)-97, General Diagnostic Table.>	Is there a symptom that corresponds in the phenomenon list?	Perform diagnosis according to the procedures in the phenomenon list.	Go to step 6.
<b>6 CHECK TROUBLE PHENOMENON.</b> 1) Perform check of current data. 2) Perform a function check. 3) Perform a unit check.	Was the trouble cause found?	Repair the cause of trouble.	Repeat a basic check again.