


Electrical Component Location

KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

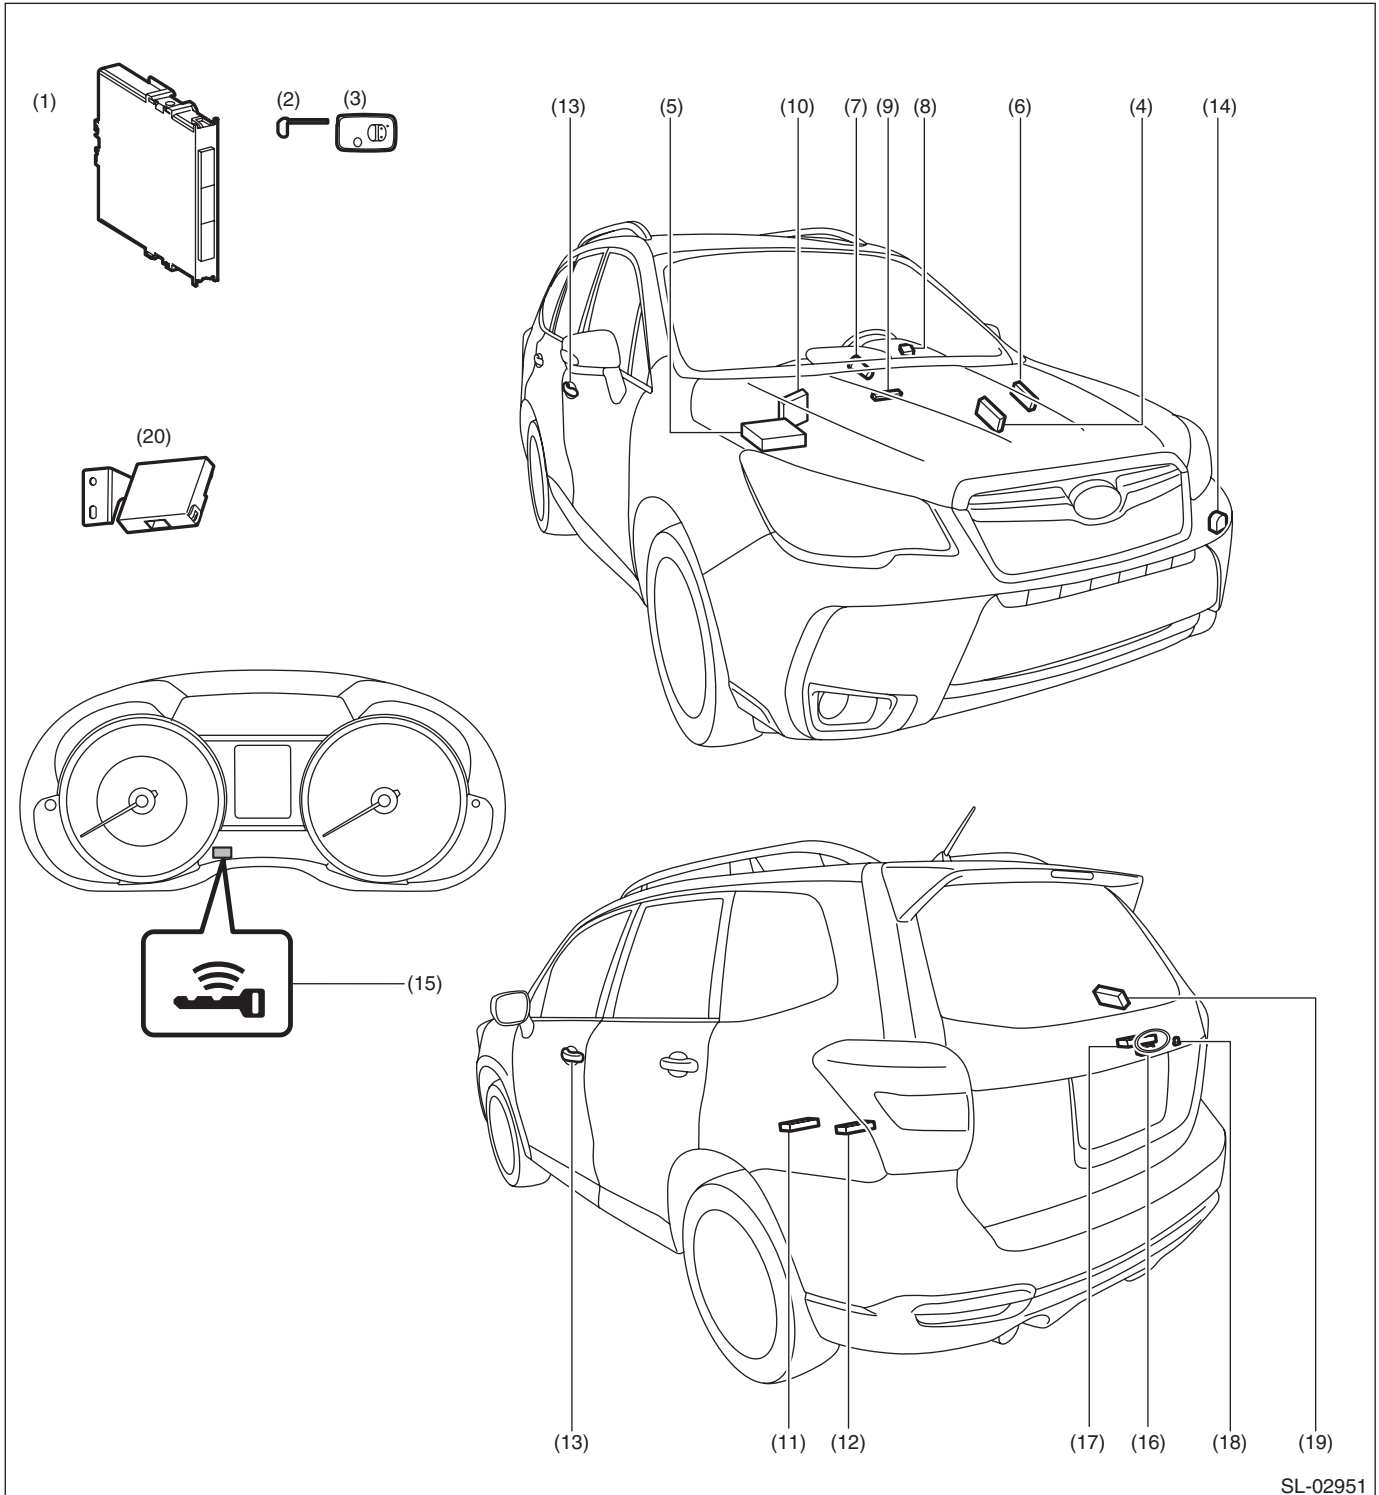

SL-02951

Electrical Component Location

KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)

- | | | |
|---------------------------------|--|--|
| (1) Keyless access CM | (8) Steering lock CM | (15) Access key warning light |
| (2) Mechanical key | (9) Front interior antenna | (16) Rear gate opener button |
| (3) Access key | (10) ECM (non-turbo model) | (17) Rear exterior antenna |
| (4) TCM | (11) Center interior antenna | (18) Rear lock button |
| (5) ECM (turbo model) | (12) Rear interior antenna | (19) Receiver |
| (6) Body integrated unit | (13) Front outer handle (front exterior antenna)
– Touch sensor (lock)
– Touch sensor (unlock) | (20) ID code box
(for C0 and C5 only) |
| (7) Push button ignition switch | (14) Access buzzer | |