

Read Diagnostic Trouble Code (DTC)

LAN SYSTEM (DIAGNOSTICS)

7. Read Diagnostic Trouble Code (DTC)

A: OPERATION

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.