

## 16. Hazard Switch


### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the panel center assembly.

#### CAUTION:

**Do not put your finger on the fin of the air vent grille. Doing so may damage the fin.**


- (1) On manual A/C models, disconnect the control cables from both sides of the heater and cooling unit assembly.

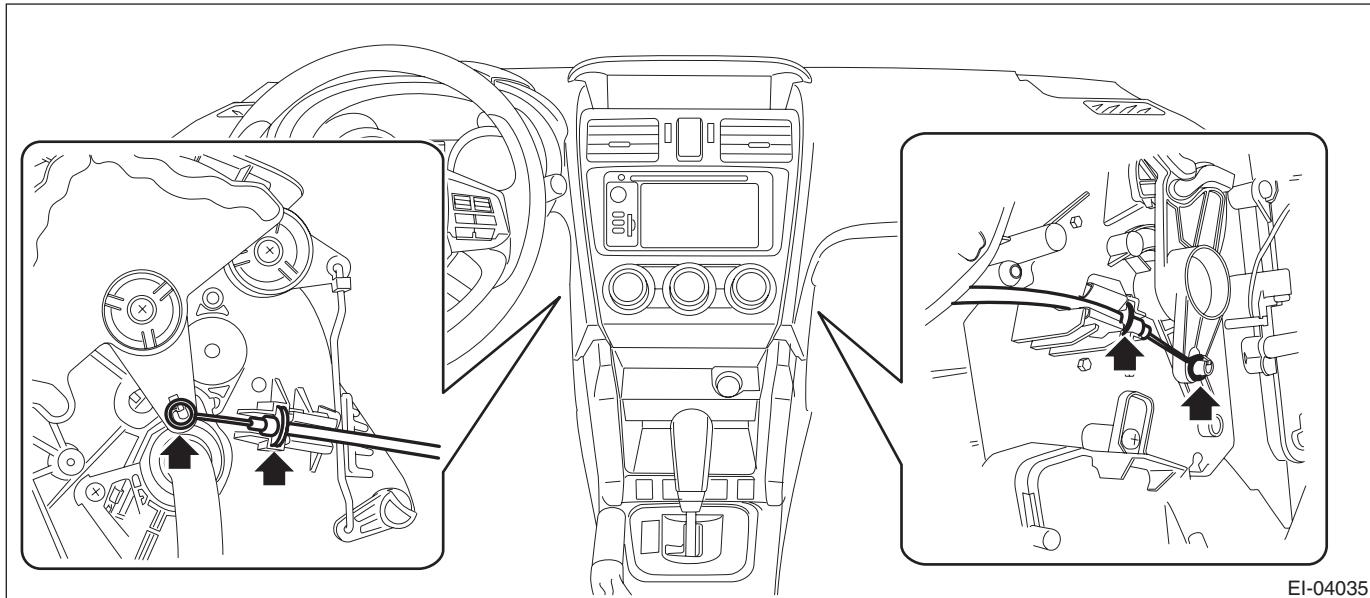

#### NOTE:

Remove the glove box pocket assembly on the passenger's side.


- (2) Insert a plastic remover to the three areas shown by the arrows, and slightly lift up the panel center assembly.
- (3) With the panel center assembly lifted up slightly, release the claw by using a clip remover wrapped with protective tape.
- (4) Release the rest of the claws, and pull out the panel center assembly.
- (5) Disconnect the connectors, and remove the panel center assembly.

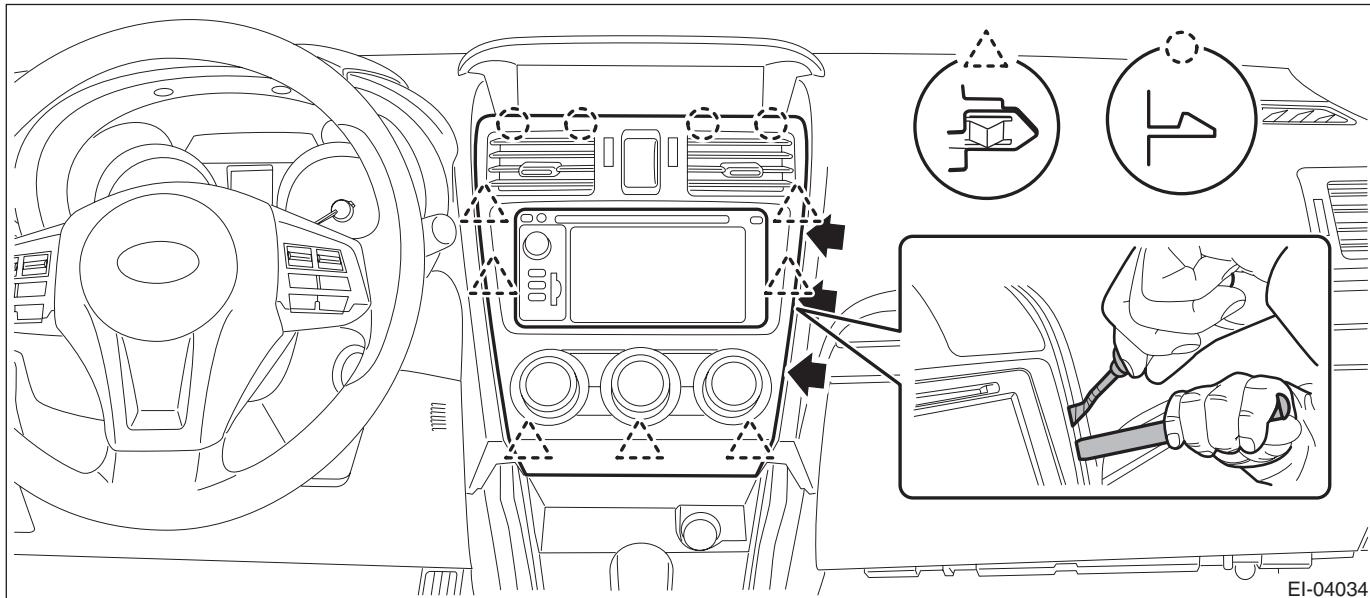

# Hazard Switch

## LIGHTING SYSTEM

- 3) Release the claws, and remove the switch - hazard from the panel center assembly.

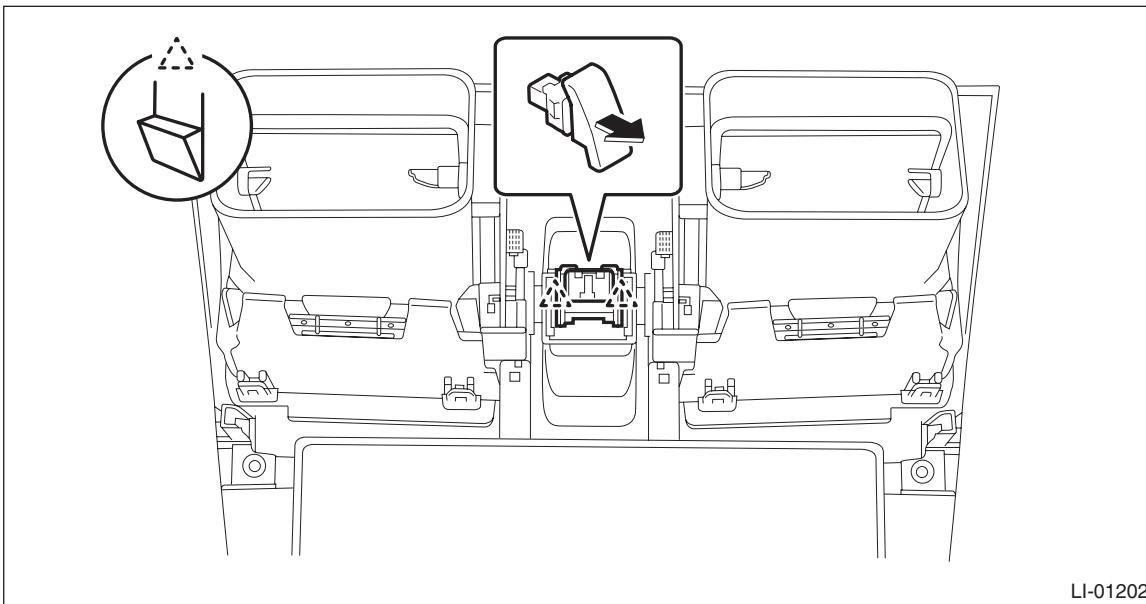

## B: INSTALLATION

### CAUTION:

After installing the panel center assembly, check that the air vent grille of the panel center assembly is inserted correctly into the air vent duct.

Install each part in the reverse order of removal.


## C: INSPECTION

### Unit inspection

#### *Preparation tool:*

#### *Circuit tester*

- 1) Check the resistance between switch terminals.

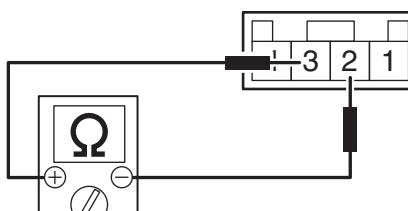Terminal No.	Inspection conditions	Standard	Connection diagram
2 — 3	Switch OFF	1 MΩ or more	
	Switch ON	Less than 1 Ω	

LI-01252

- 2) Replace the switch - hazard if the inspection result is not within the standard value.