


19. Clearance/Parking Light Bulb

A: REMOVAL


NOTE:

Since the LED type parking light cannot be disassembled, it cannot be removed.

- 1) Disconnect the ground cable from battery.
- 2) Remove the clips and remove the air intake duct (rear). (When removing the parking light bulb RH)

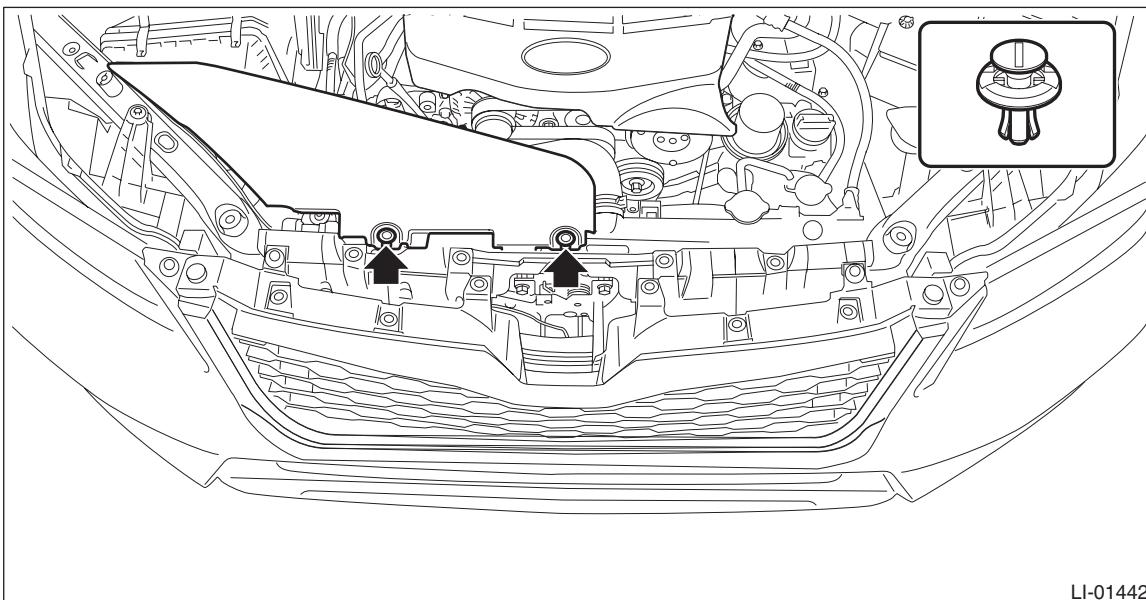

- 3) Remove the bulb socket and parking light bulb.

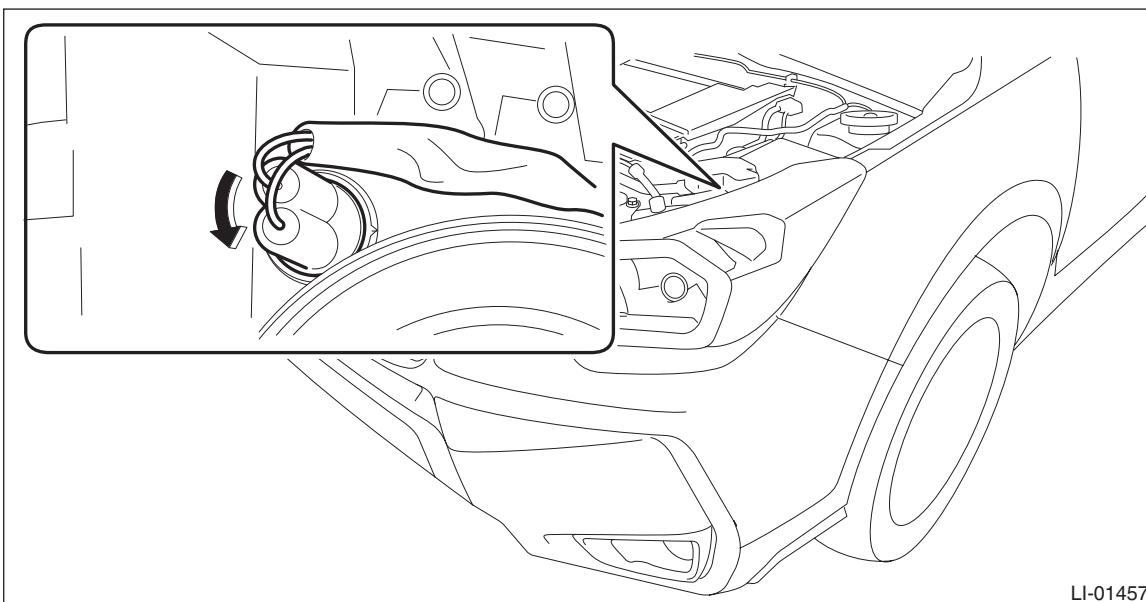

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

NOTE:

When the LED type parking light burns out, replace the light assembly - head.

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.