


## 23. Side Turn Signal Light Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the mirror - repair, the cover - cap outer mirror lower and the cover - cap outer mirror.<Ref. to GW-24, DISASSEMBLY, Outer Mirror Assembly.>
- 3) Remove the light assembly - side turn mirror.
  - (1) Remove the screws and pull out the light assembly - side turn mirror to the front of the vehicle.
  - (2) Disconnect the connector and remove the light assembly - side turn mirror.

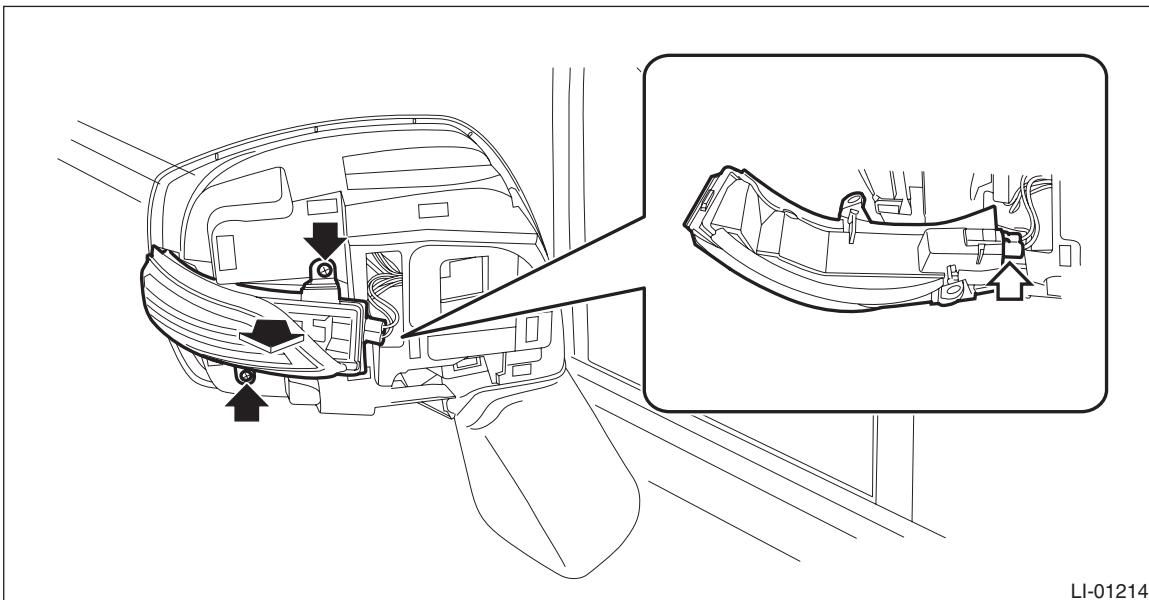

### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

- 1) Install the light to check if it blinks normally.
- 2) If it fails to blink normally, replace the light assembly - side turn mirror with a new part.

#### NOTE:

Since LED (Light Emitting Diode) is used for the light, replace the light assembly - side turn mirror if the LED burns out.