


29. License Plate Light

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the license plate light.
 - (1) Release the claws and pull out the license plate light.
 - (2) Disconnect the connector and remove the bulb socket and bulb from the license plate light.

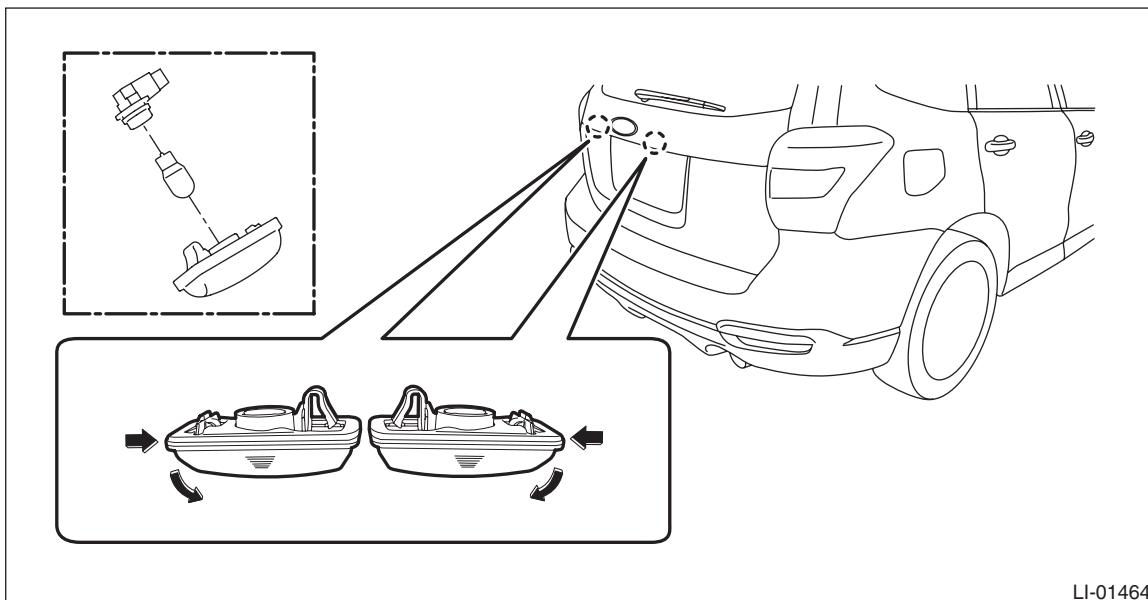

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.