


30. High-mounted Stop Light

A: REMOVAL


1. ROOF SPOILER TYPE

- 1) Disconnect the ground cable from battery.
- 2) Remove the roof spoiler. <Ref. to EI-49, REMOVAL, Roof Spoiler.>
- 3) Remove the light assembly - high-mounted.
 - (1) Disconnect the connector.
 - (2) Remove the nuts and remove the light assembly - high-mounted.

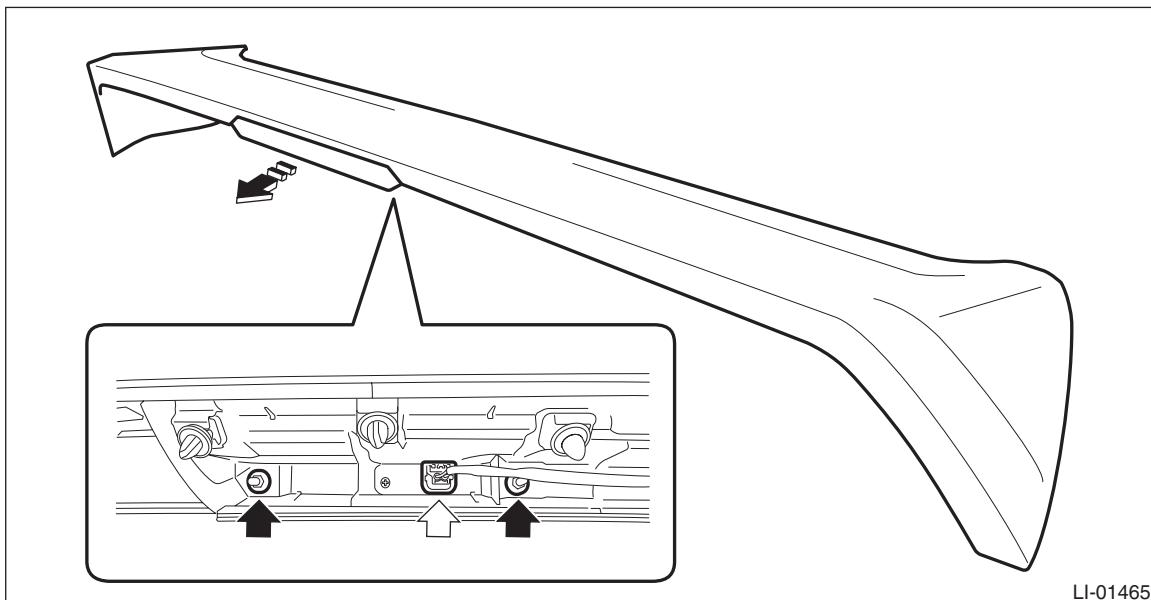


2. REAR GATE TYPE

- 1) Disconnect the ground cable from battery.
- 2) Remove the trim panel - rear gate UPR.
 - (1) Remove the claws on the trim edge.
 - (2) Release the claws in the center of trim, and remove the trim panel - rear gate UPR.

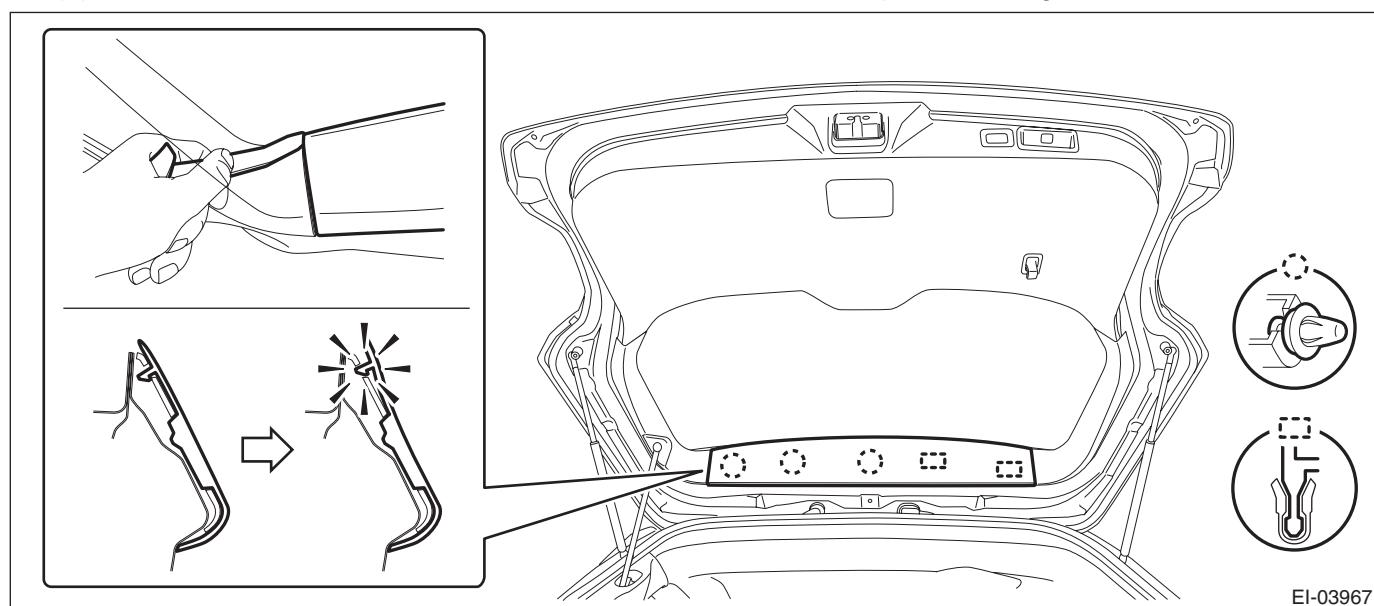


3) Remove the light assembly - high-mounted.

(1) Remove the nut.

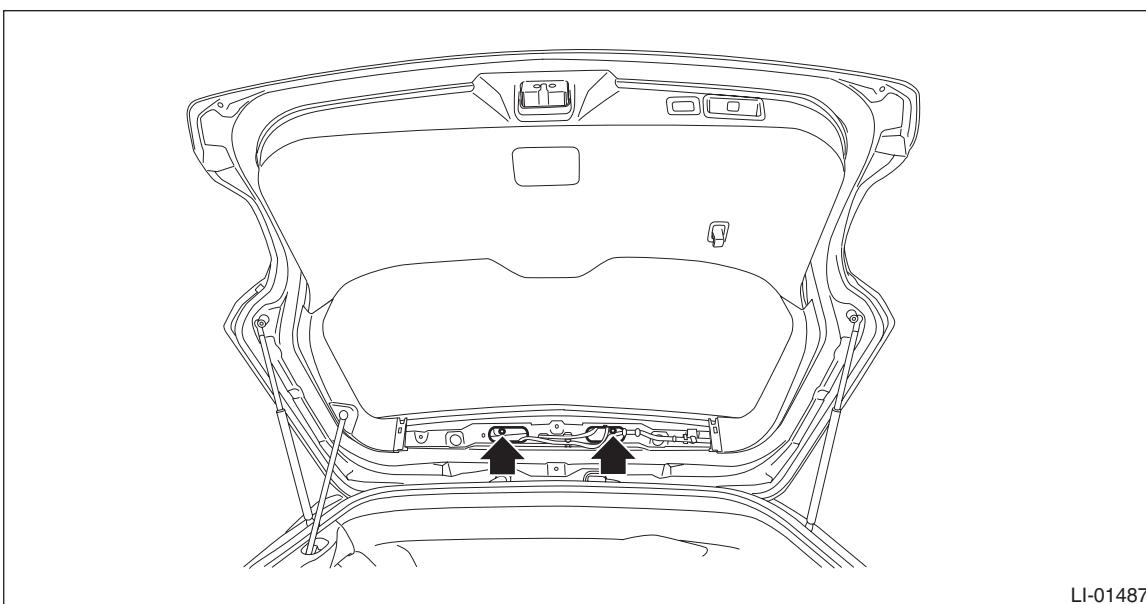

(2) Release the claws, and pull out the light assembly - high-mounted to the rear side of the vehicle.

(3) Disconnect the connector and remove the light assembly - high-mounted.

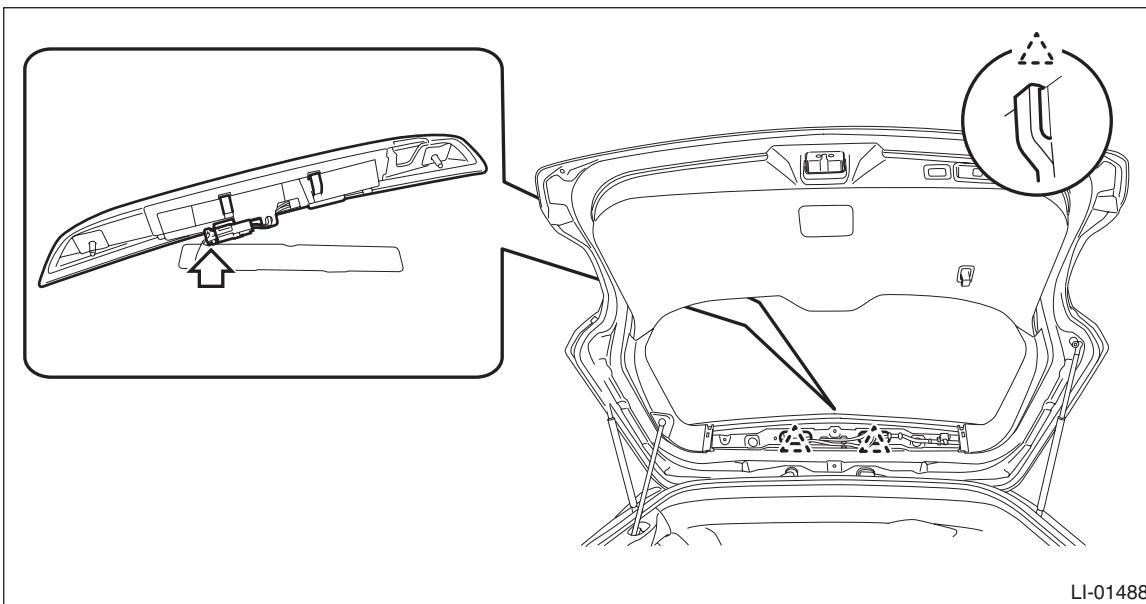

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Light assembly - high-mounted: 4.5 N·m (0.46 kgf·m, 3.3 ft-lb)

C: INSPECTION

1) Install the light to test if it illuminates normally.

2) If it fails to illuminate normally, replace the light assembly - high-mounted with a new part.

NOTE:

Since LED (Light Emitting Diode) is used for the light, replace the light assembly - high-mounted if the LED burns out.