

# Control Module I/O Signal


## OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

### 6. Control Module I/O Signal

#### A: ELECTRICAL SPECIFICATION

##### CAUTION:

Never remove the occupant detection control module, occupant detection sensor or seat frame because they are integrated into one unit.

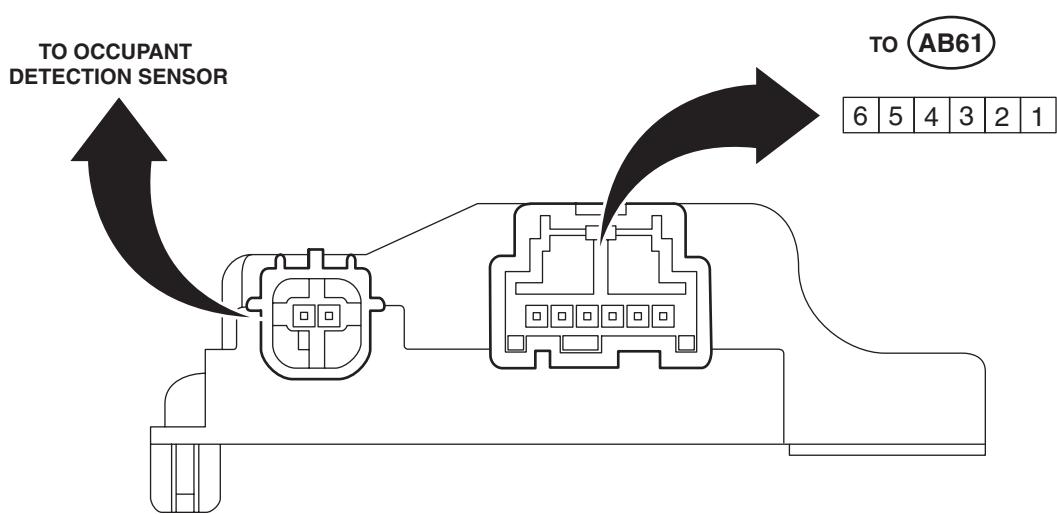

Terminal No.	Terminal name	Input/Output value	Note
1	Buckle switch (+)	0 — IG voltage	When buckle switch is ON
2	Buckle switch (-)	0 V	Switch ground
3	Not used	—	—
4	Airbag CM communication (-)	—	—
5	Airbag CM communication (+)	—	—
6	IG power supply	8 — 16 V	When IG switch is ON

##### NOTE:

Occupant detection sensor signal is unmeasurable.

#### B: WIRING DIAGRAM

Refer to "Occupant Detection System" in the wiring diagram.<Ref. to WI-301, WIRING DIAGRAM, Occupant Detection System.>