

## 7. Subaru Select Monitor

### A: OPERATION

For detailed operation procedures, refer to the “PC application help for Subaru Select Monitor”.

### B: INSPECTION

#### 1. COMMUNICATION FOR INITIALIZING THE AIRBAG SYSTEM IS IMPOSSIBLE

##### DETECTING CONDITION:

Defective harness connector

##### TROUBLE SYMPTOM:

Communication is impossible between the airbag control module and the Subaru Select Monitor.

##### NOTE:

Refer to “COMMUNICATION FOR INITIALIZING IMPOSSIBLE” in AIRBAG SYSTEM (DIAGNOSTICS).

<Ref. to AB(diag)-20, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, INSPECTION, Subaru Select Monitor.>

#### 2. COMMUNICATION FOR INITIALIZING ONLY THE OCCUPANT DETECTION SYSTEM IS IMPOSSIBLE

##### NOTE:

The occupant detection system communicates with the Subaru Select Monitor via the airbag control module.

##### DETECTING CONDITION:

Defective harness connector between airbag control module and occupant detection control module

##### TROUBLE SYMPTOM:

Communication is impossible between the airbag control module and the occupant detection control module.

Perform the diagnosis from Step 2 in “DTC B1650 OCCUPANT CLASSIFICATION SYSTEM MALFUNCTION”. <Ref. to OD(diag)-19, DTC B1650 OCCUPANT CLASSIFICATION SYSTEM MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>