

## **Read Diagnostic Trouble Code (DTC)**

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

---

### **8. Read Diagnostic Trouble Code (DTC)**

#### **A: OPERATION**

Read out DTCs stored in the airbag control module and the occupant detection control module. For operation procedures, refer to the “PC application help for Subaru Select Monitor”.

**NOTE:**

For details concerning DTCs, refer to the List of Diagnostic Trouble Code (Airbag system, Occupant detection system). <Ref. to AB(diag)-30, List of Diagnostic Trouble Code (DTC).> <Ref. to OD(diag)-18, List of Diagnostic Trouble Code (DTC).>