



## 12. Memory Height Switch

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the cover assembly - instrument panel LWR driver. <Ref. to EI-59, REMOVAL, Instrument Panel Lower Cover.>
- 3) Remove the memory height switch.
  - (1) Remove the screw, release the claws, and then remove the panel - switch.

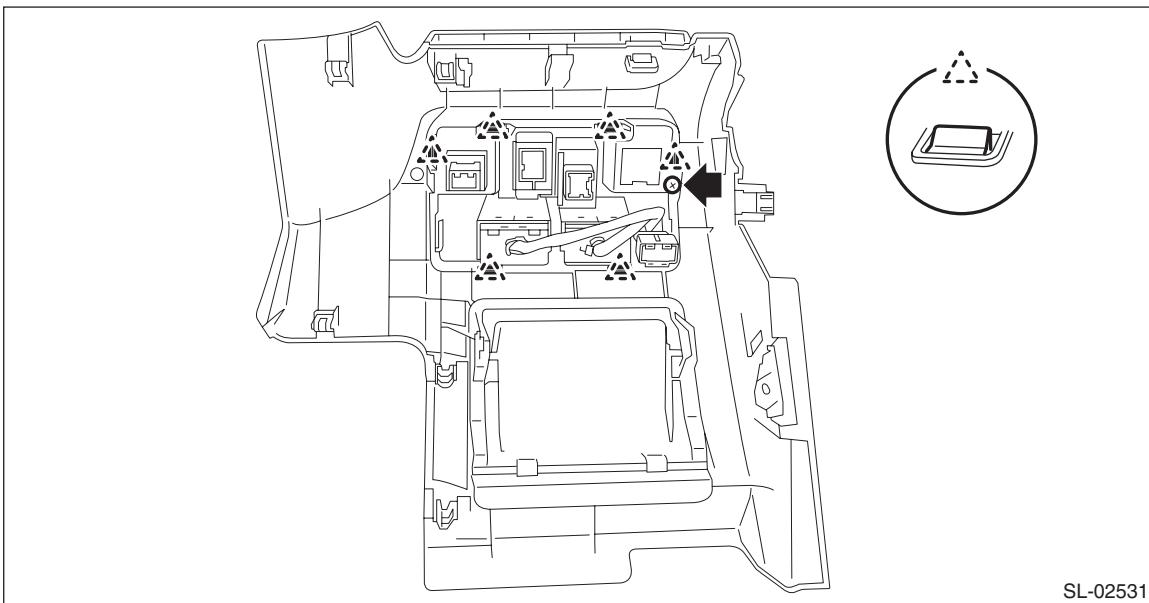

- (2) Release the claws and remove the memory height switch.

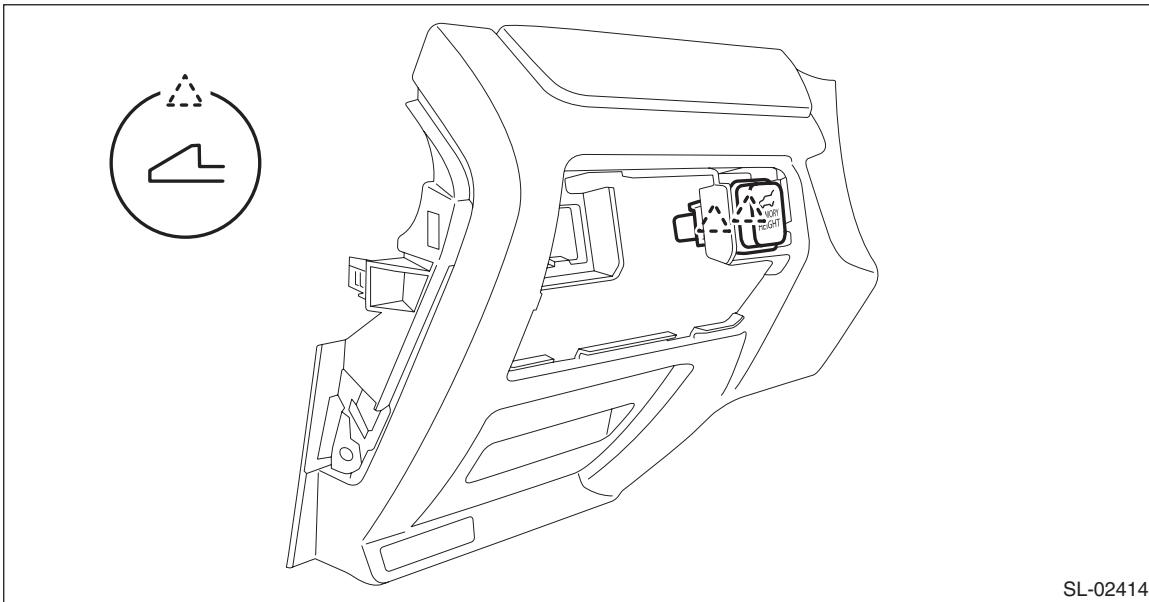

### B: INSTALLATION

Install each part in the reverse order of removal.

# Memory Height Switch

POWER REAR GATE SYSTEM


## C: INSPECTION

### Unit inspection

**Preparation tool:**

**Circuit tester**

- 1) Check the resistance between switch terminals.

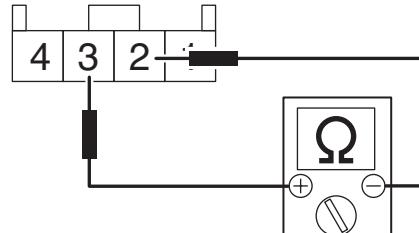Terminal No.	Inspection conditions	Standard	Connection diagram
	Switch OFF	1 MΩ or more	
2 — 3	Switch ON	Less than 1 Ω	 SL-02278

- 2) Replace the memory height switch, if the inspection result is not within the standard value.