


### 4. Power Rear Gate Control Module

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trim panel - rear apron. <Ref. to EI-102, REMOVAL, Rear Quarter Trim.>
- 3) Remove the power rear gate control module (PRG CM).
  - (1) Disconnect the connector.
  - (2) Remove the bolts and harness clips and remove the power rear gate control module (PRG CM).

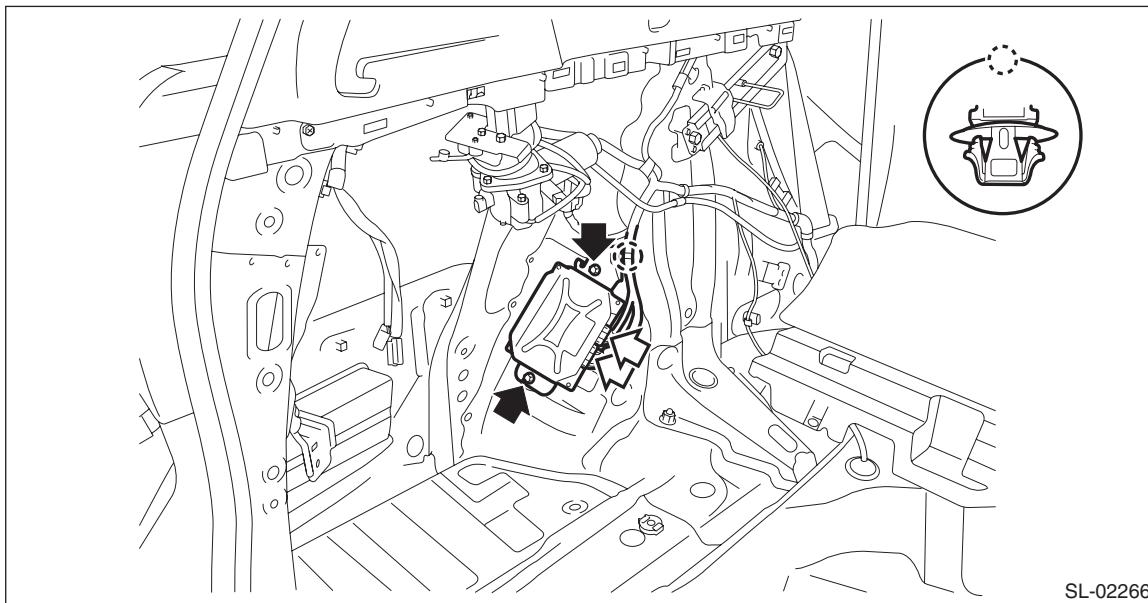

#### B: INSTALLATION

Install each part in the reverse order of removal.

##### ***Tightening torque:***

***Power rear gate control module (PRG CM): 10 N·m (1.02 kgf-m, 7.4 ft-lb)***