


9. Power Rear Gate Buzzer

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trim panel - rear gate LWR. <Ref. to EI-122, REMOVAL, Rear Gate Trim.>
- 3) Remove the power rear gate buzzer.
 - (1) Disconnect the connector.
 - (2) Release the claws, and then remove the power rear gate buzzer.

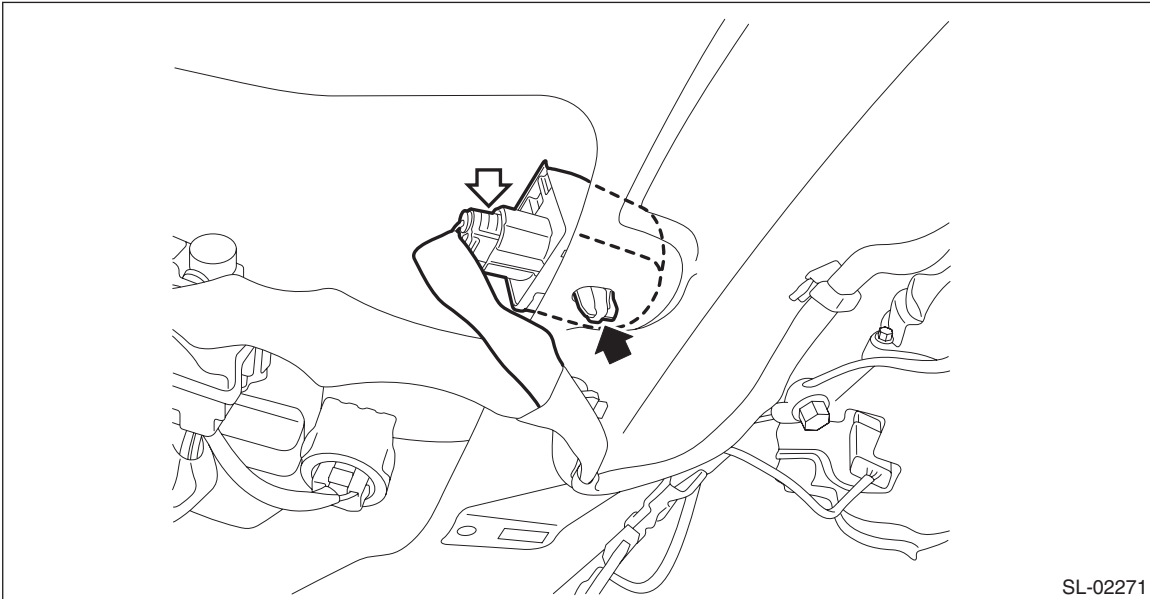

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

Connect the battery between the power rear gate buzzer terminals, and check whether the buzzer sounds. If the buzzer does not sound, replace the power rear gate buzzer.