


# General Description

## SEAT BELT SYSTEM

### 1. General Description

#### A: COMPONENT

##### 1. FRONT SEAT BELT

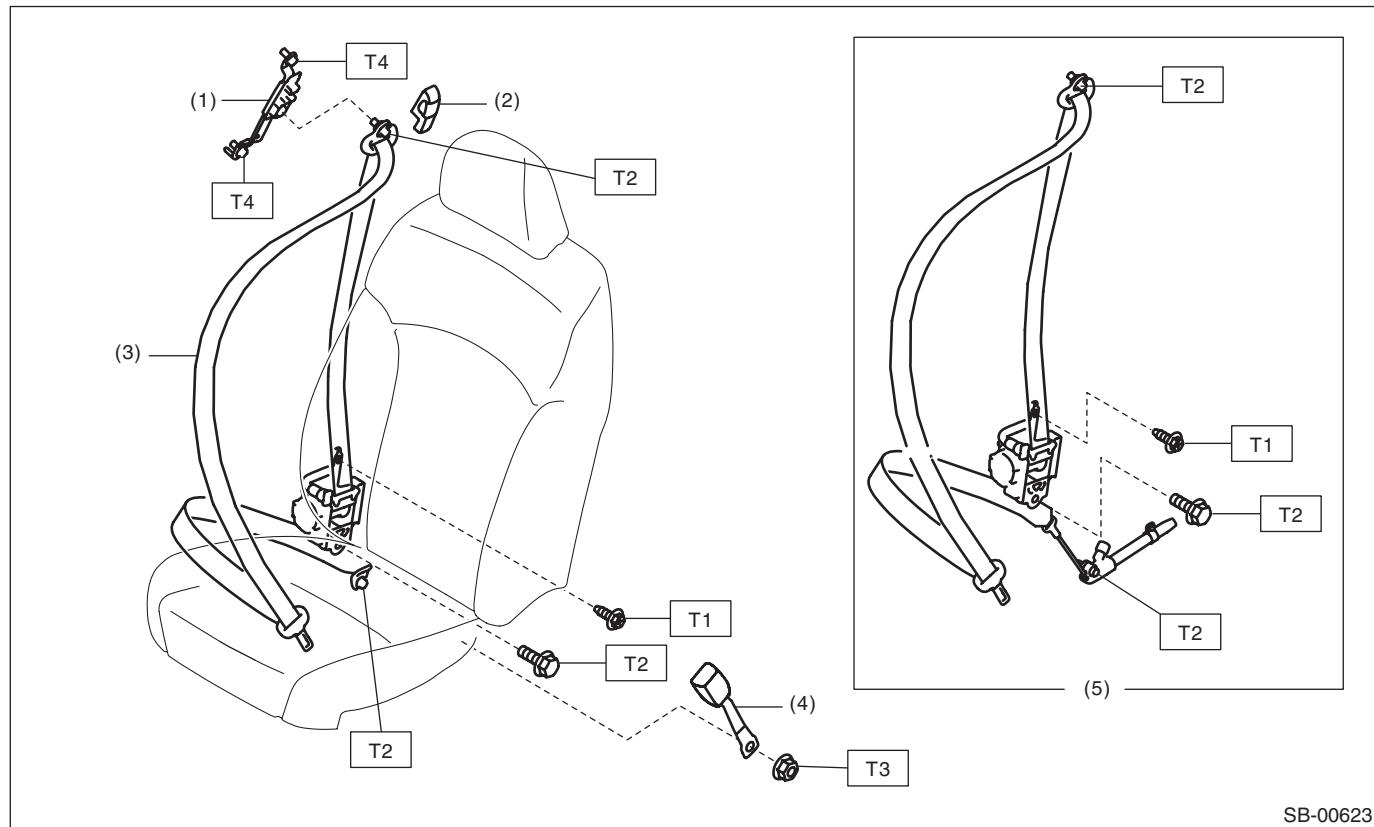

SB-00623

(1) Adjuster ASSY - seat belt  
(2) Cover through  
(3) Seat belt outer - front  
(4) Seat belt inner - front  
(5) Seat belt outer - front (lap seat belt pretensioner - passenger's side only)

#### ***Tightening torque: N·m (kgf·m, ft-lb)***


***T1: 7.5 (0.76, 5.5)***

***T2: 30 (3.06, 22.1)***

***T3: 38 (3.87, 28.0)***

***T4: 53 (5.40, 39.1)***

### 2. REAR SEAT BELT

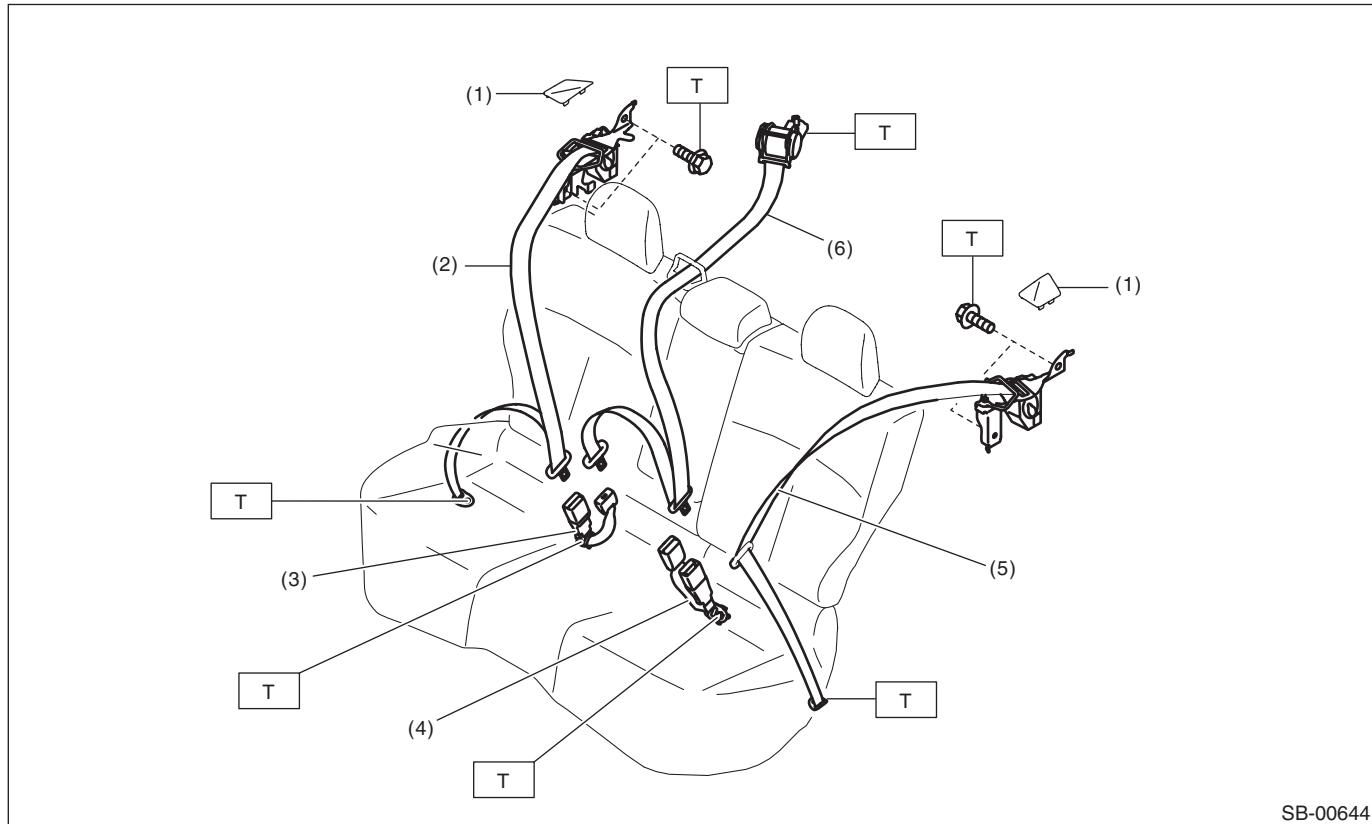

(1) Cap - belt	(4) Seat belt - CTR LH
(2) Seat belt outer - rear RH	(5) Seat belt outer - rear LH
(3) Seat belt - CTR RH	(6) Seat belt - rear shoulder CTR

**Tightening torque: N·m (kgf·m, ft-lb)**

**T: 30 (3.06, 22.1)**

## General Description

### SEAT BELT SYSTEM

---


#### B: CAUTION

- Before starting the work, turn the ignition switch to OFF, disconnect the battery ground cable and wait for 60 seconds or more.
- The pretensioner system is fitted with a backup power supply. After disconnecting the battery ground cable, the pretensioner may operate if you do not wait for 60 seconds or more before starting pretensioner system servicing.
- Do not drop or apply any impact to the pretensioner.
- If oil, grease or water gets on the pretensioner, wipe it off immediately with a dry cloth.
- Do not expose the pretensioner to high temperature or flame.
- Do not allow current to flow through or voltage to reach the pretensioner. Do not use a circuit tester to check resistance of the pretensioner.
- Do not disassemble or attempt to repair the pretensioner. If it is dented, cracked or deformed, replace it with a new genuine part.
- Do not use the airbag or pretensioner parts from other vehicles. Always use a new genuine part for replacement.
- When handling a seat belt with deployed pretensioner, wear gloves and goggles. Wash your hands afterwards.
- Do not reuse a seat belt with deployed pretensioner.
- Before disposal, make sure to perform an operation process to the pretensioners.
- If material from the pretensioner enters the eyes or contacts skin during operation process, wash it away with clean water, and then consult a doctor.


### C: PREPARATION TOOL




#### 1. SPECIAL TOOL

- Subaru Select Monitor

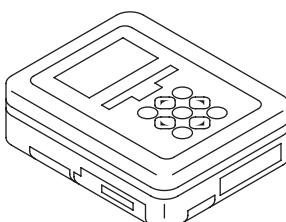ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for setting of each function and troubleshooting for electrical system.

- TEST HARNESS AP

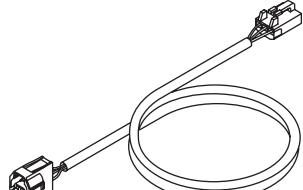ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299FJ030	98299FJ030	TEST HARNESS AP	Used when measuring voltage and resistance of occupant detection system.

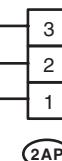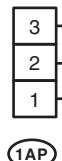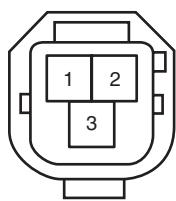



AB-02734

# General Description

## SEAT BELT SYSTEM


- TEST HARNESS AG

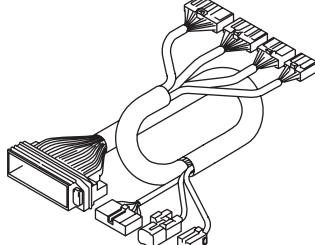ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299AG070	98299AG070	TEST HARNESS AG	Used when measuring voltage and resistance of airbag control module.

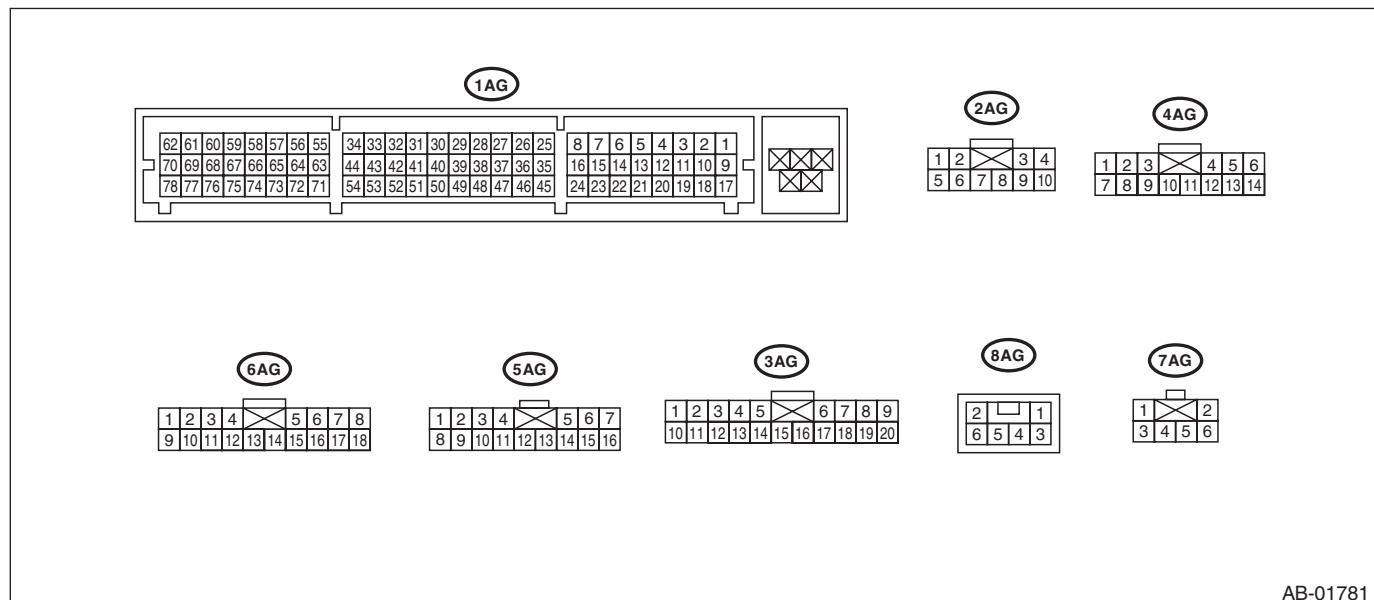

# General Description

## SEAT BELT SYSTEM

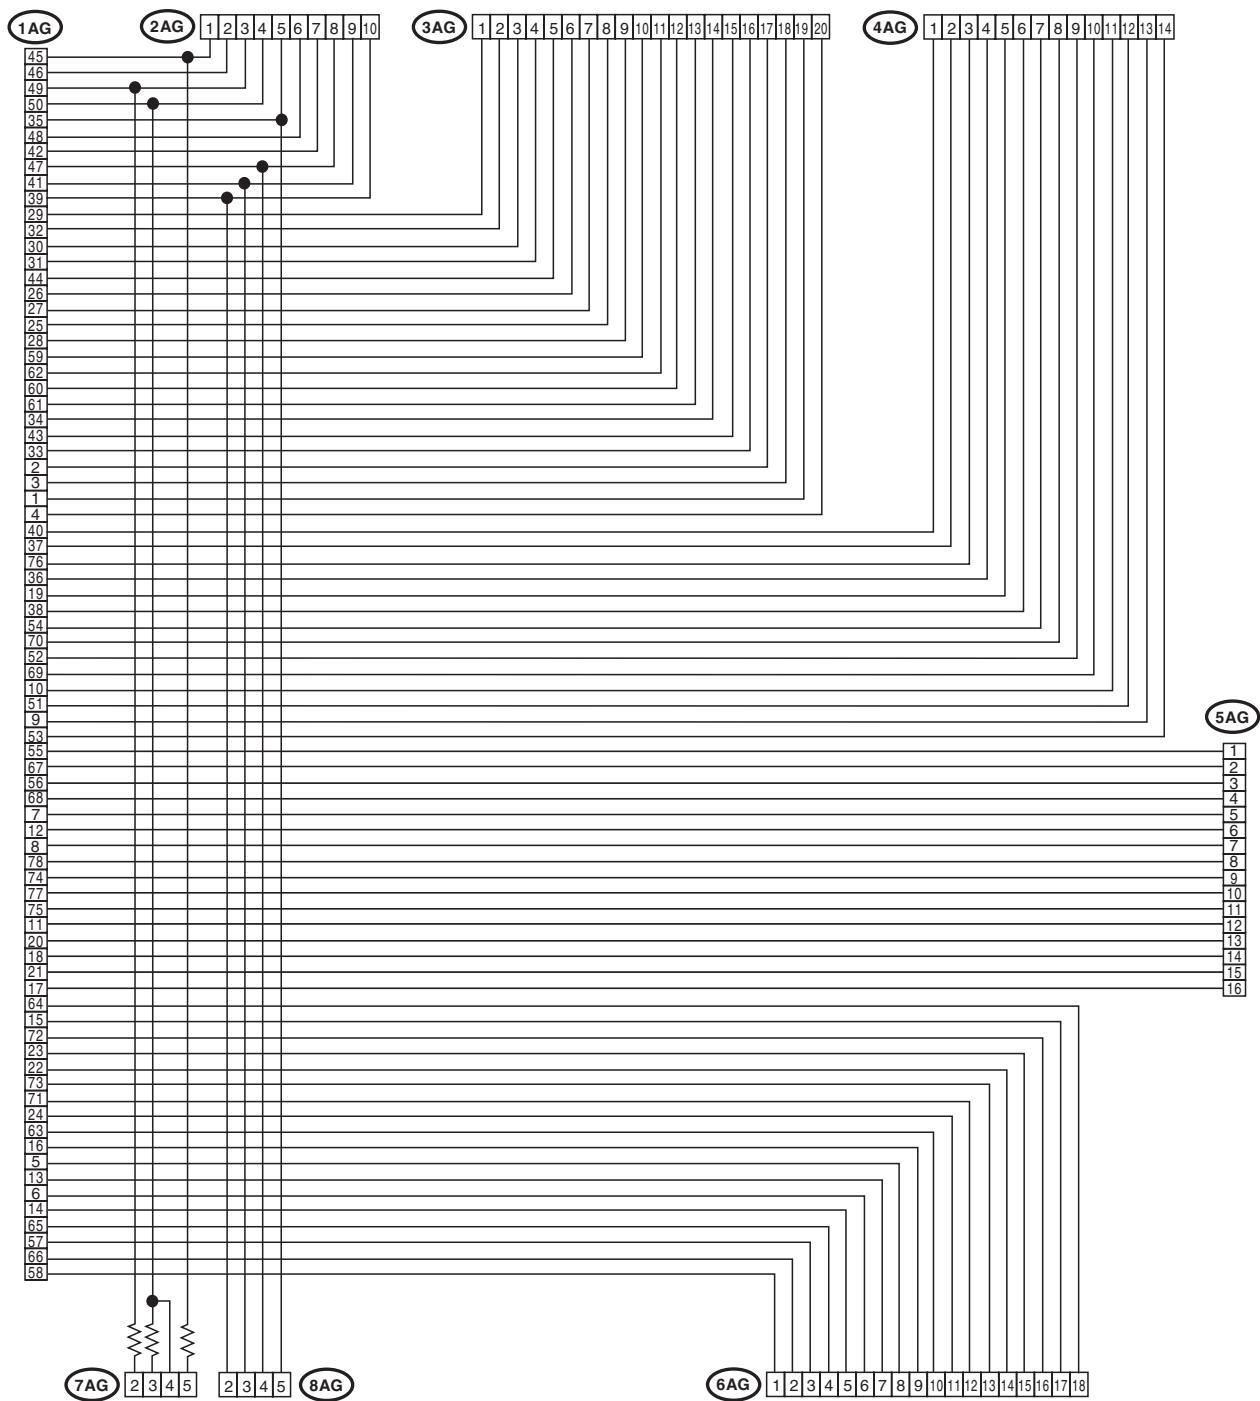



AB-01902

# General Description

## SEAT BELT SYSTEM

- TEST HARNESS Y

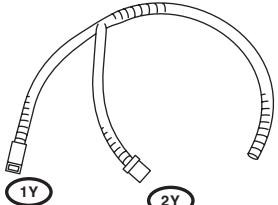
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299AG040	98299AG040	TEST HARNESS Y	Used for troubleshooting seat belt buckle switch.

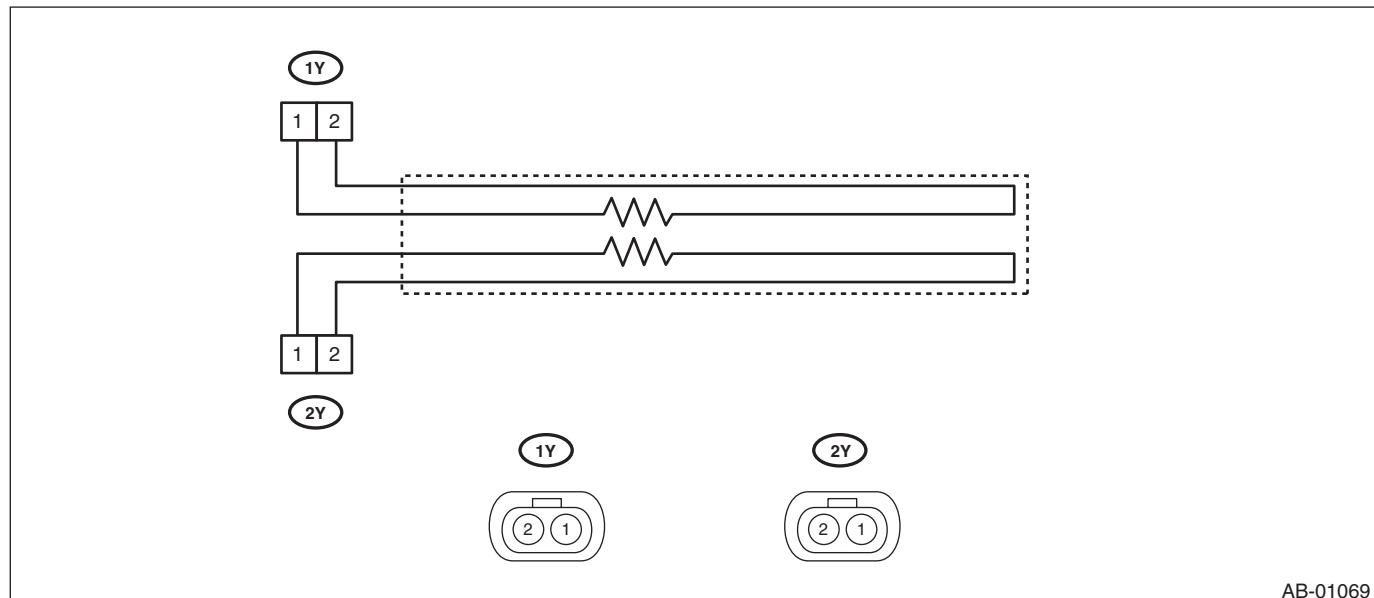


# General Description

SEAT BELT SYSTEM


- AIRBAG RESISTOR

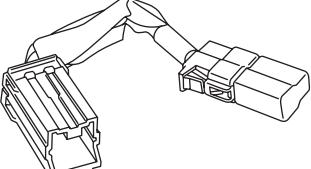ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299PA040	98299PA040	AIRBAG RESISTOR	Used in replacement of airbag module for which resistance value is same as airbag module.

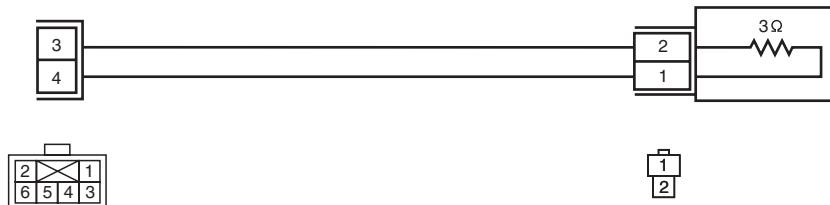

AB-00433


- TEST HARNESS ADAPTER D

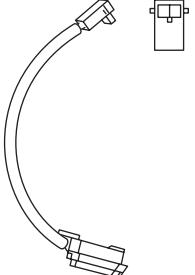ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299SA010	98299SA010	TEST HARNESS ADAPTER D	<ul style="list-style-type: none"><li>• Used for operation process of pretensioner.</li><li>• Used together with AIRBAG DEPLOYMENT TOOL. (98299PA030)</li></ul>

## General Description

### SEAT BELT SYSTEM

#### • AIRBAG DEPLOYMENT TOOL

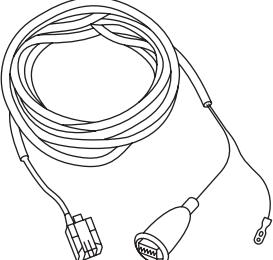ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299PA030	98299PA030	AIRBAG DEPLOYMENT TOOL	<ul style="list-style-type: none"><li>• Used for operation process of pretensioner.</li><li>• Used together with each test harness adapter.</li></ul>

## 2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.