

## 2. Front Seat

### A: REMOVAL

**CAUTION:**

The airbag system is fitted with a backup power supply. After disconnecting the battery ground cable, the airbag may operate if you do not wait for 60 seconds before starting the service of airbag system.

1) Turn the ignition switch to OFF.

2) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.

**NOTE:**

- Before removing the seat, raise the seating face.
- For the power seat, remove the slide rail installing bolt before removing the battery ground.

3) Remove the headrest assembly - front.

4) Remove the slide rail assembly installing bolt.

(1) Tilt the backrest assembly forward and move the front seat to the mid point on the slide rail.

(2) Remove the bolts on the front side of the front seat.

(3) Remove the cover - bolt rear.

1. While spreading the tip of the cover - bolt rear OUT side to side, pull it out toward you to remove.


2. Remove the cover - bolt rear INN.

**NOTE:**

• Firmly push in the cover - bolt rear INN at the point shown in the figure until a clicking sound is heard and remove it.

• If it is difficult to remove, release the claw using a flat tip screwdriver wrapped with protection tape while pushing the point shown in the figure to remove.

(4) Remove the bolts on the rear side of the front seat.

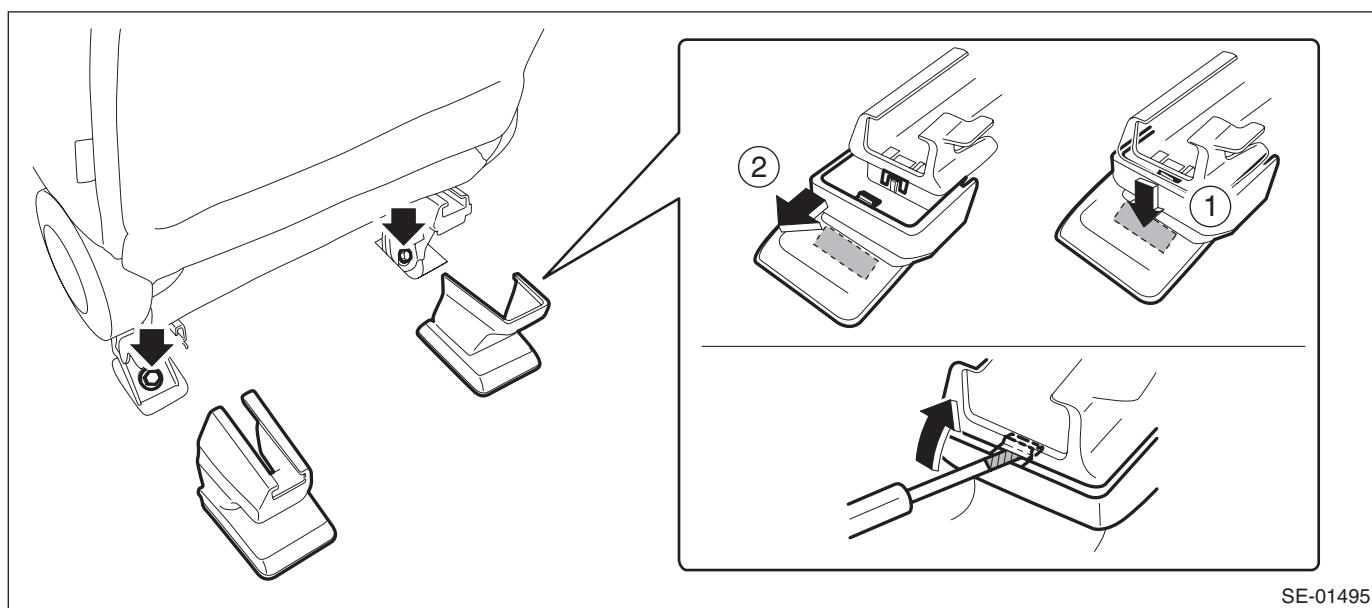

# Front Seat

## SEATS

(5) Disconnect the connector under the front seat.

### CAUTION:

For the power seat, check that the battery ground cable is disconnected. If not, disconnect the battery ground cable and wait for 60 seconds or more.

- Seat belt warning light connector
- Occupant detection system harness connector (passenger's seat) <Ref. to OD(diag)-9, OCCUPANT DETECTION SYSTEM (BETWEEN AIRBAG REAR HARNESS AND SEAT HARNESS), PROCEDURE, Airbag Connector.>
- Side airbag connector <Ref. to AB-27, SIDE AIRBAG MODULE, PROCEDURE, Airbag Connector.>
- Seat heater connector (model with seat heater)
- Power seat connector (model with power seats)

5) Take out the front seat from the vehicle.

### CAUTION:


Be careful not to damage the body.

## B: INSTALLATION

Install each part in the reverse order of removal.

### CAUTION:

- The front seat mounting bolts differ between the front mounting points and the rear mounting points. When installing the front seat, make sure that you are using correct bolts at correct positions.
- Tighten the slide rail assembly installing bolts in the order as shown in the figure, in several steps by gradually increasing the torque until they reach the specified torque.

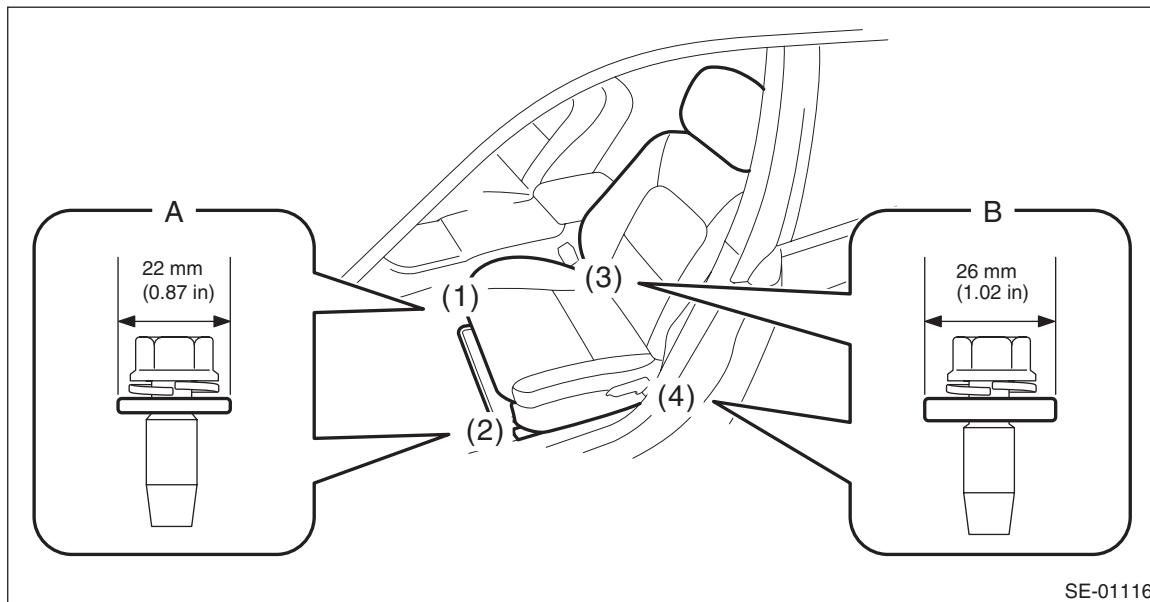

- Front (bolt A): Washer diameter 22 mm (0.87 in)
- Rear (bolt B): Washer diameter 26 mm (1.02 in)

### Tightening torque:

Front seat assembly: 53 N·m (5.40 kgf·m, 39.1 ft-lb)

## C: DISASSEMBLY


### 1. DRIVER SEAT (MANUAL SEAT)

#### CAUTION:

Before assembling, make sure how the harnesses such as the side airbag harness and the seat belt inner - front harness are routed in order to avoid misarranging. Assembling with harnesses improperly routed may cause the harness to get caught and short out.


- 1) Remove the front seat from vehicle. <Ref. to SE-9, REMOVAL, Front Seat.>
- 2) Remove the knob - lifter.

- (1) Using a flat tip screwdriver, remove the cap - lifter lever (a).
- (2) Remove the screws and remove the knob - lifter.

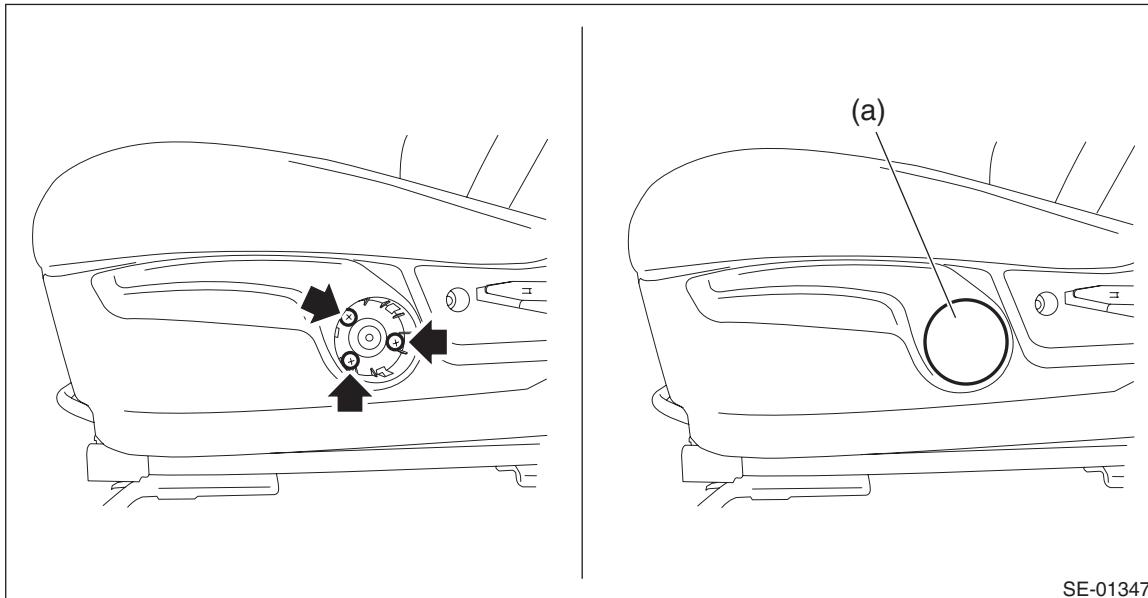

- 3) Remove the lever - reclining.

- (1) Pull up the lever - reclining and release the claws on the back.
- (2) Pull out the lever - reclining.

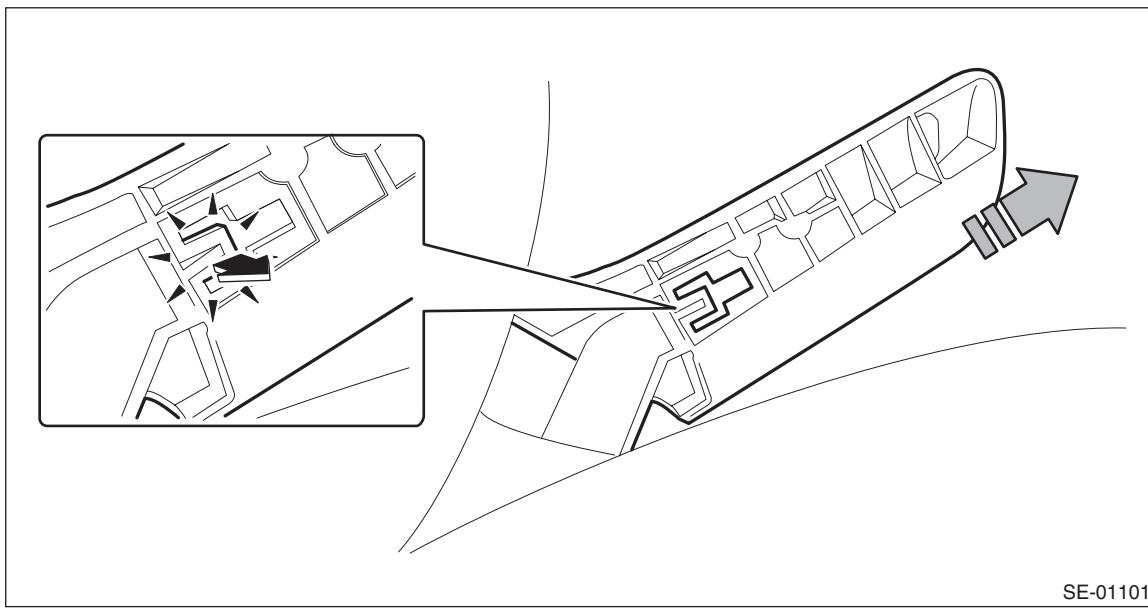


## Front Seat


### SEATS

4) Remove the cover - hinge front seat OUT.

- (1) Remove the screws.
- (2) Release the claw in the upper section of the cover - hinge front seat OUT.
- (3) Release the claw in the rear section of the cover - hinge front seat OUT.
- (4) Release the claw in the front section of the cover - hinge front seat OUT, then remove the cover - hinge front seat OUT.

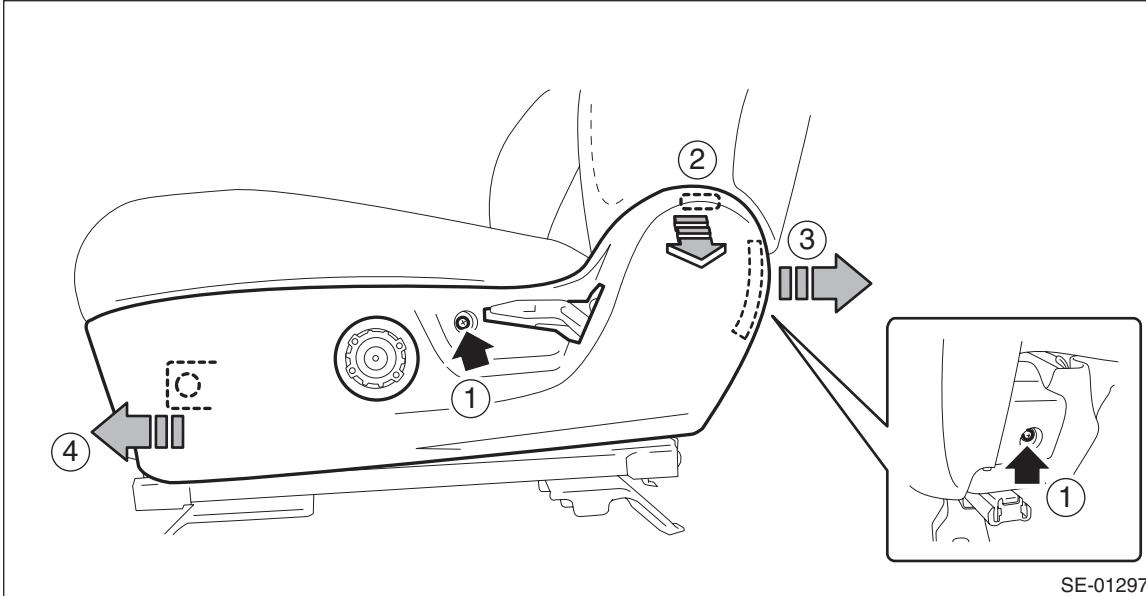


5) Remove the nuts, and remove the member - bracket.

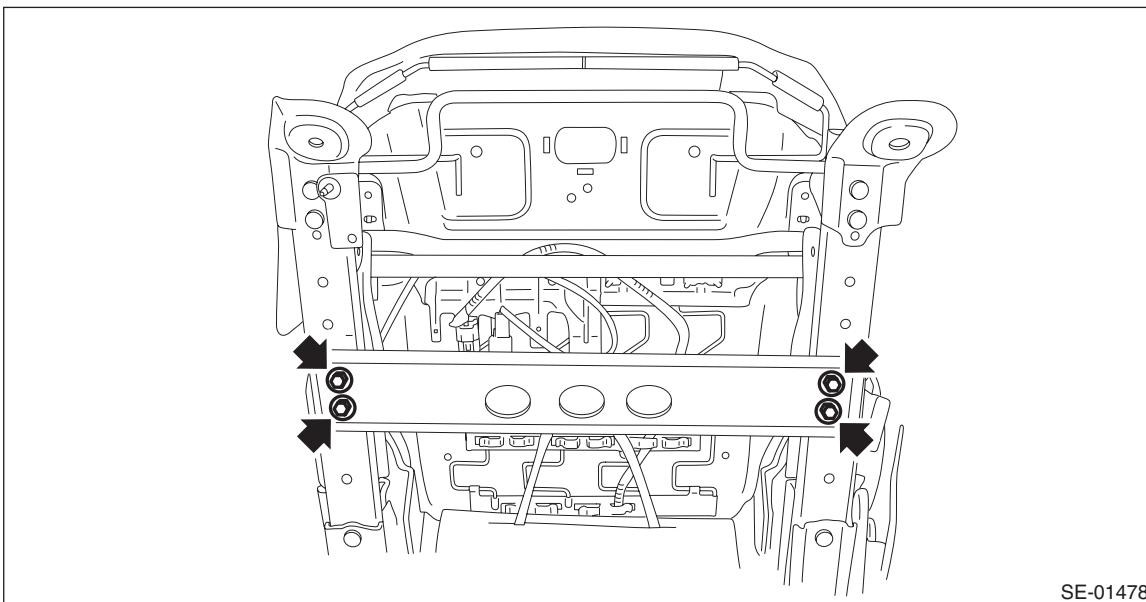


6) Remove the seat belt inner - front.

- (1) Remove the nut, and remove the seat belt inner - front.
- (2) Remove the clip for the seat belt inner - front located under the seat cushion assembly.

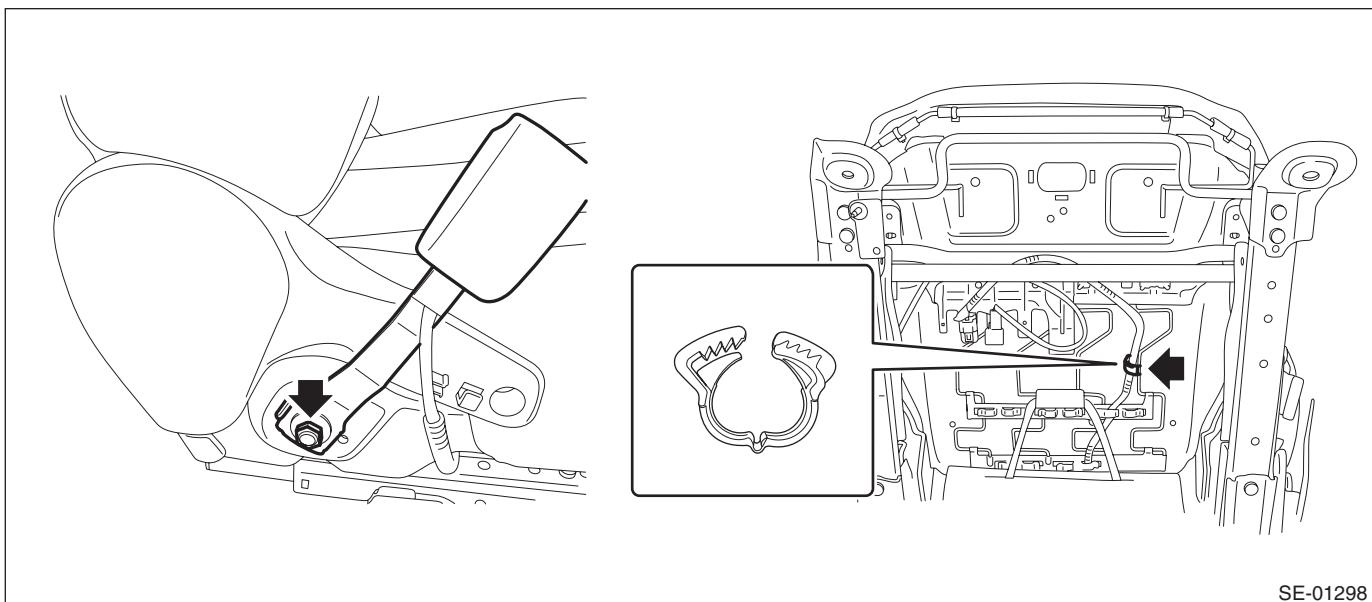

7) Remove the cover - hinge front seat INN.

- (1) Remove the screws.
- (2) Release the claw in the upper section of the cover - hinge front seat INN.
- (3) Release the claw in the rear section of the cover - hinge front seat INN, then remove the cover - hinge front seat INN.

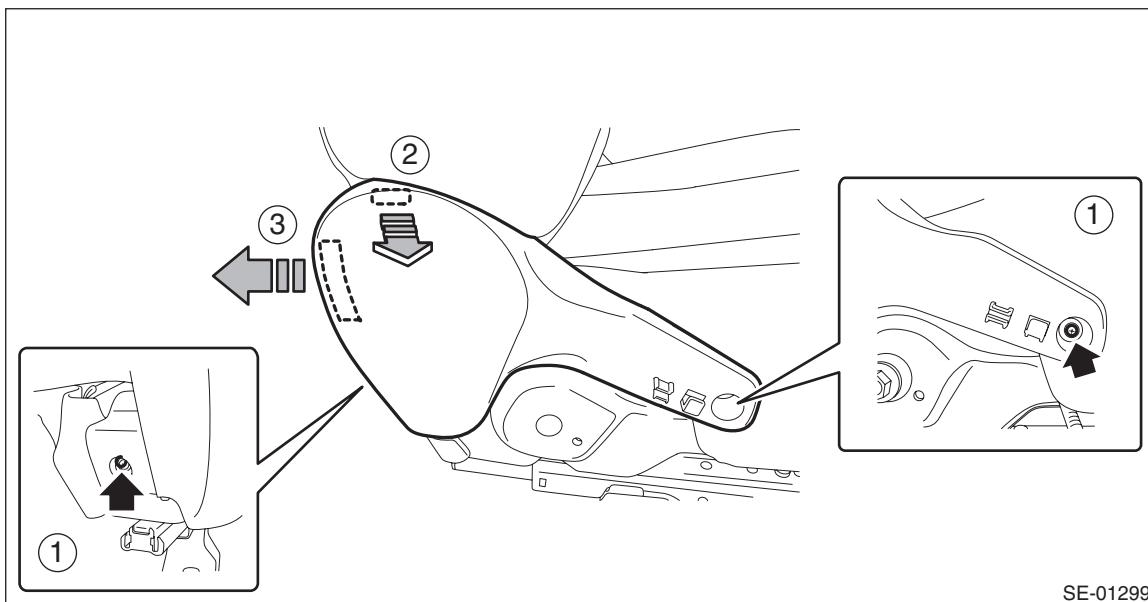

## Front Seat

### SEATS



8) Separate the backrest assembly and the seat cushion assembly.

(1) Remove the clip for the side airbag harness located under the seat cushion assembly.

(2) Disconnect the seat heater harness. (Seat with seat heater)

(3) Remove the bolts from reclining hinge of both sides.

(4) While taking care not to damage the harness, separate the backrest assembly and the seat cushion assembly.

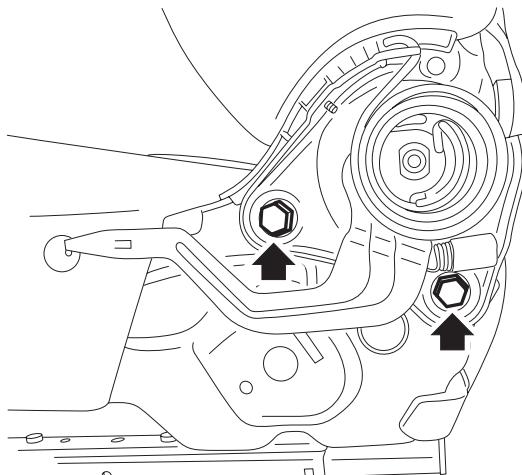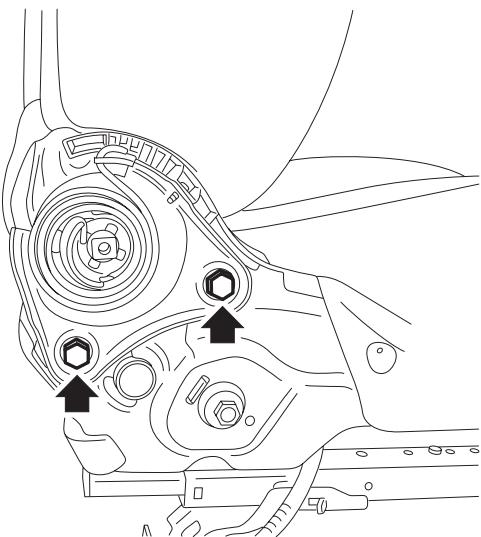


SE-01300

9) Remove the cover - slide rail OUT.


(1) Remove the clip.

(2) Remove the hook, and detach the cover - slide rail OUT.

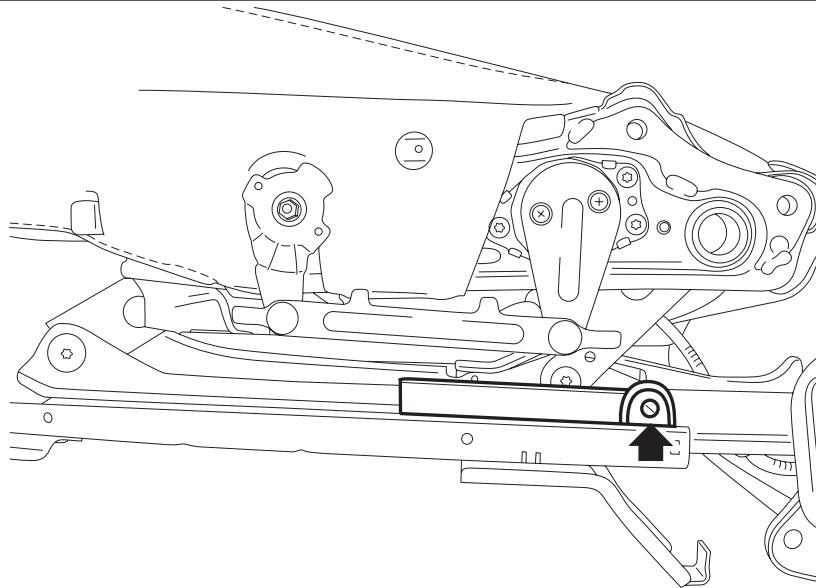

SE-01444


10) Remove the screws and detach the cover - slide rail INN.

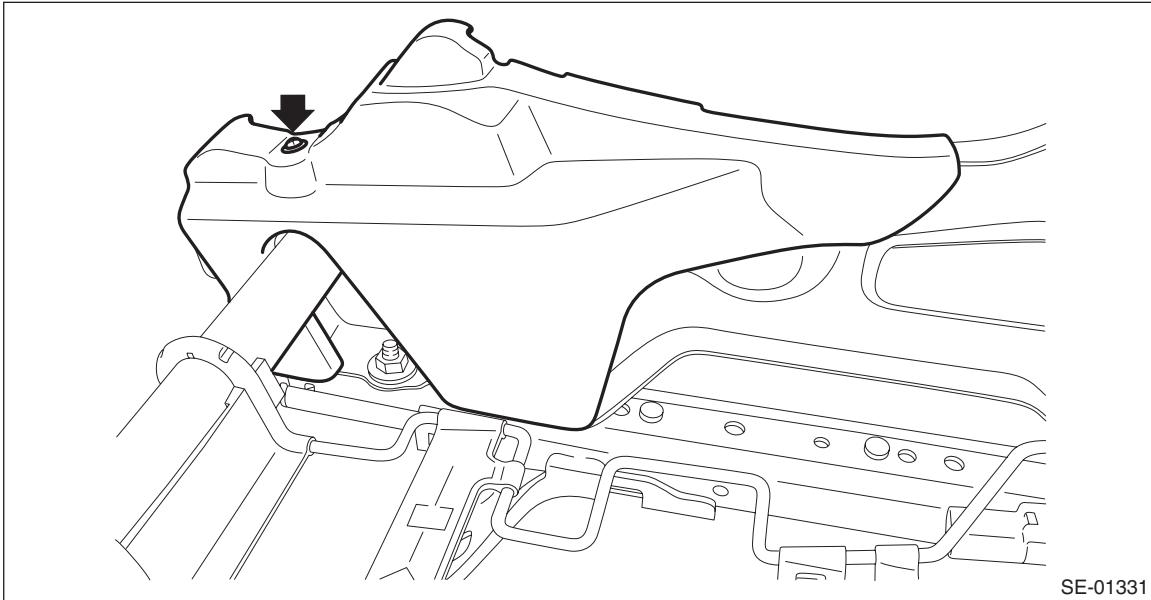

11) Remove the pad assembly - front seat cushion and the cover - front cushion.

(1) Remove the hooks and hog rings.

(2) Remove the pad assembly - front seat cushion and the cover - front cushion from the seat cushion assembly.

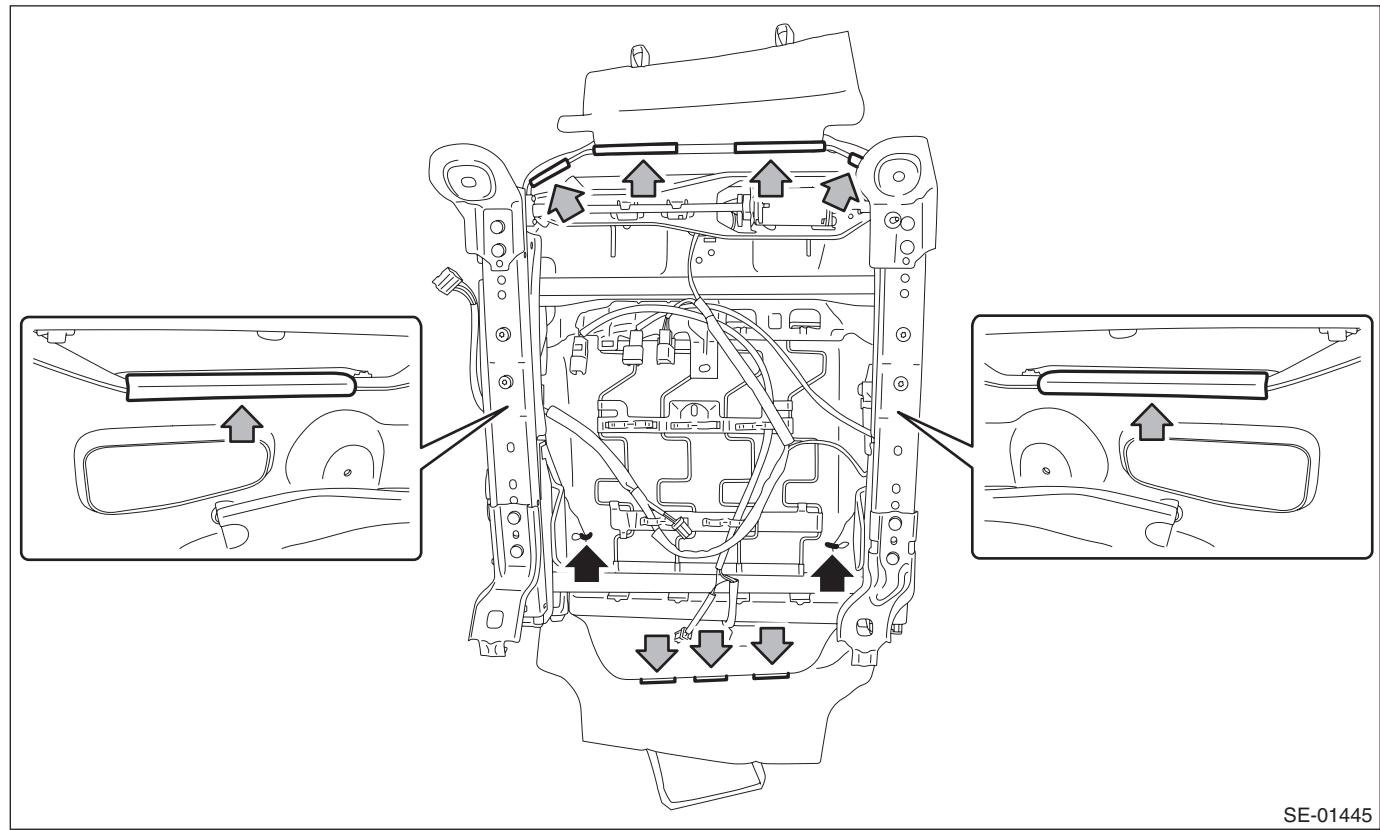


## Front Seat

### SEATS

12) Remove the cover - front cushion.

(1) Remove the hog ring (A).

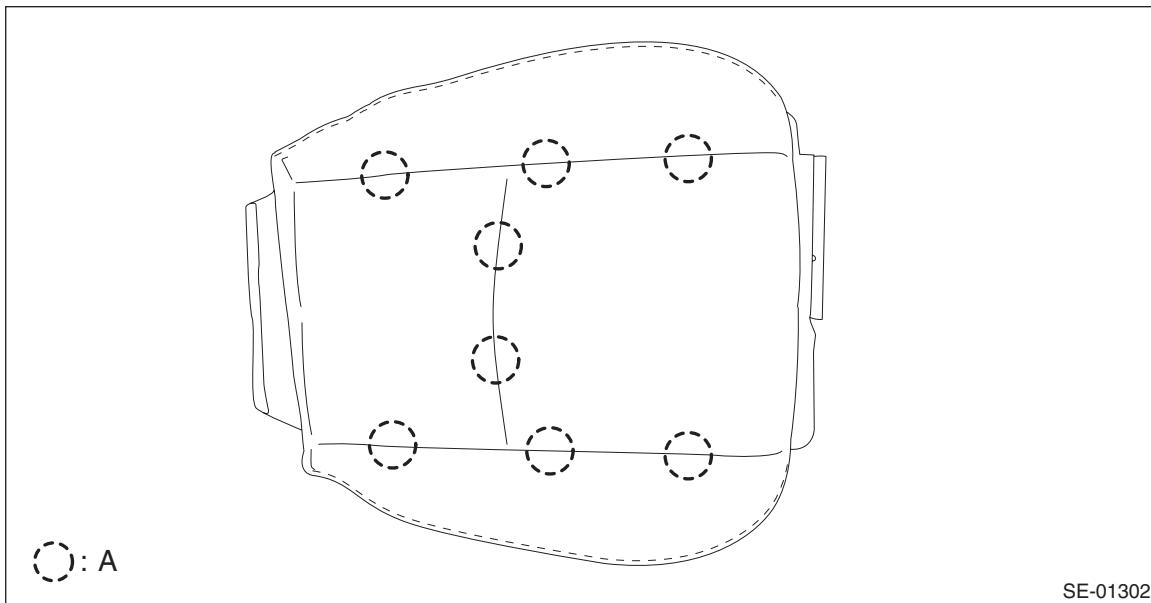


(2) Pull out the pad assembly - front seat cushion from the cover - front cushion.

13) Remove the pad assembly - front seat backrest and the cover COMPL - front backrest.

(1) Remove the plastic fastener at the back side (bottom) of backrest assembly.


(2) Open the fastener at the rear side of backrest assembly.

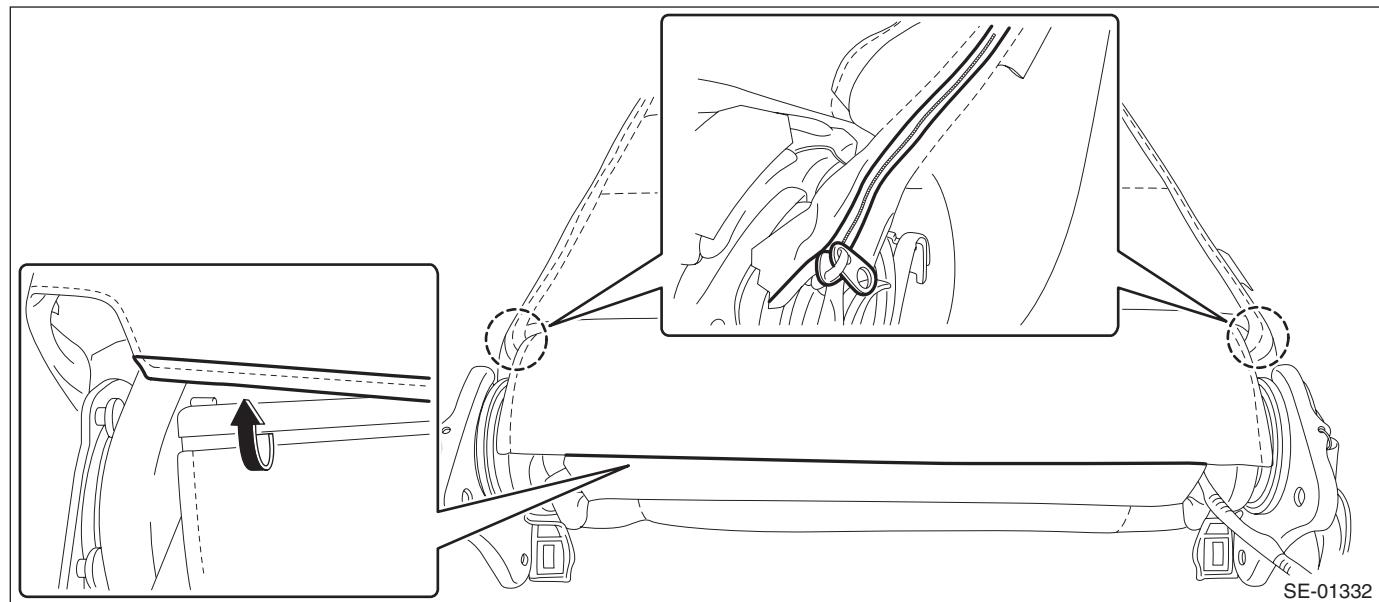


(3) Remove the hog ring.

**CAUTION:**

Be careful not to tear the vinyl inside the seat when removing the hog rings.  
If torn, replace with a new part.

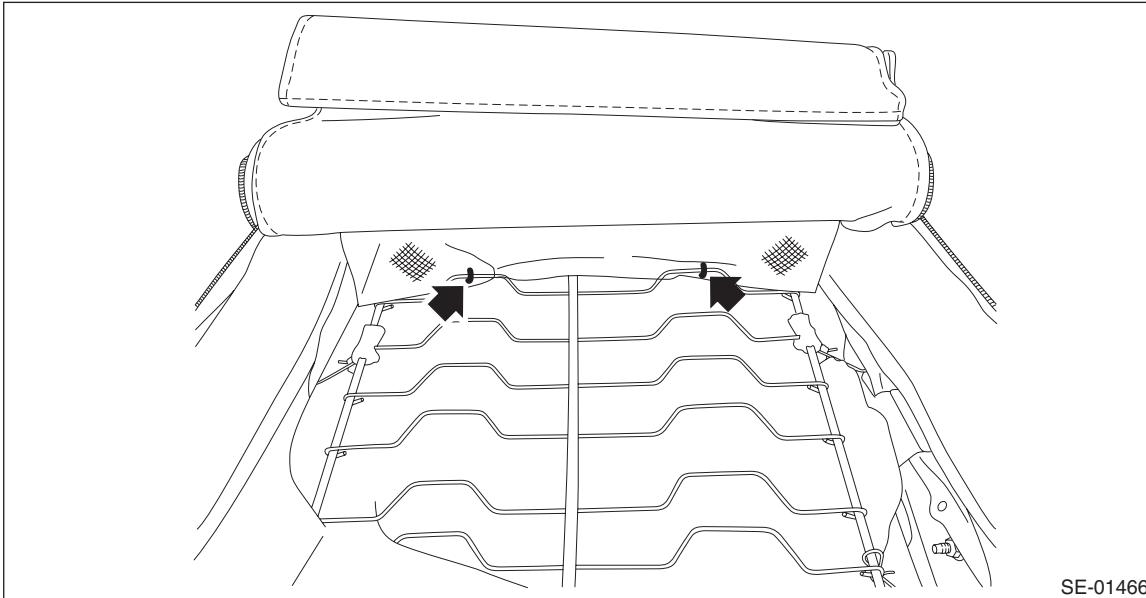

(4) Turn over the backrest pad & cover, and remove the hog rings.

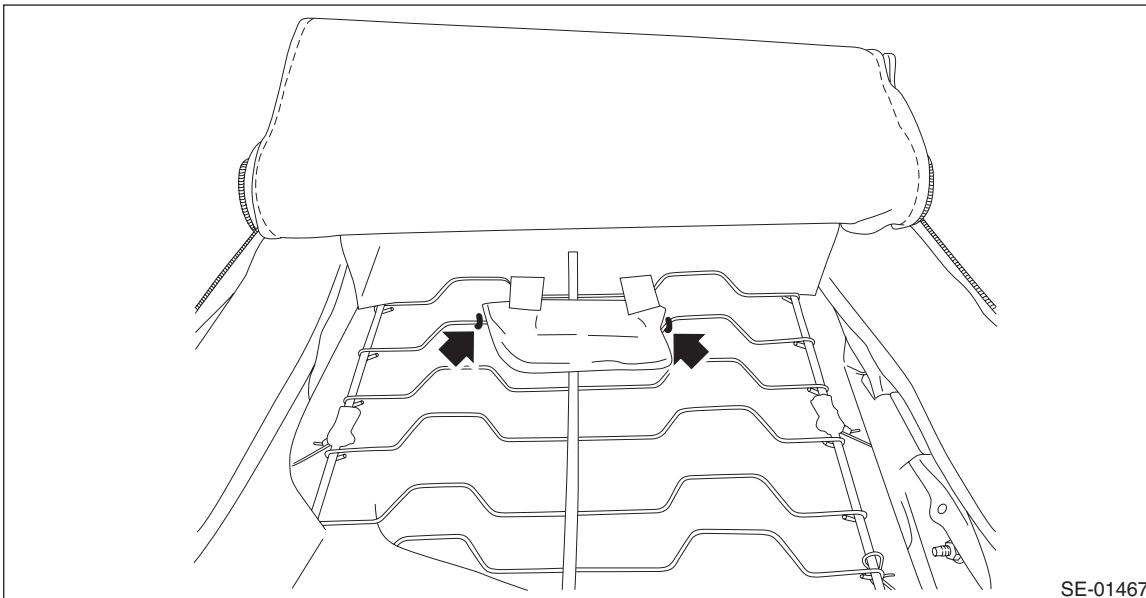

## Front Seat

### SEATS


14) Remove the side airbag module.

**CAUTION:**


**Do not open the protective cover of the side airbag. If any damage is present in the protective cover or the cloth of side airbag module comes out from the protective cover slit, replace the side airbag module with a new part.**

(1) Remove the hexagon cap nut and nuts.

(2) While taking care not to damage the airbag protective cover, remove the side airbag module.

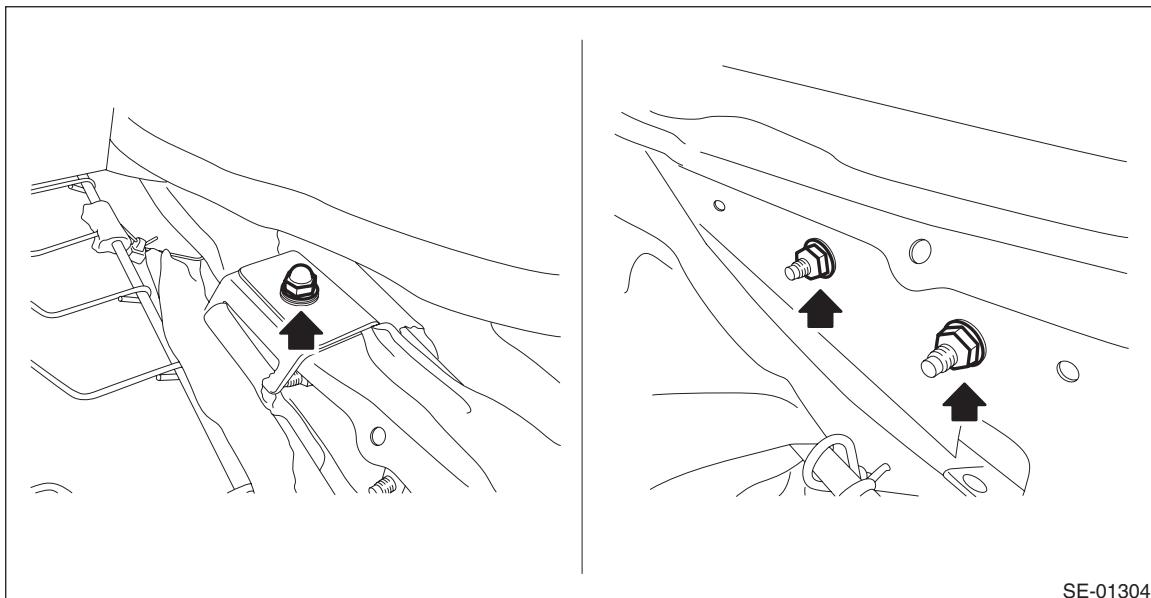

15) Remove the bushing - headrest.

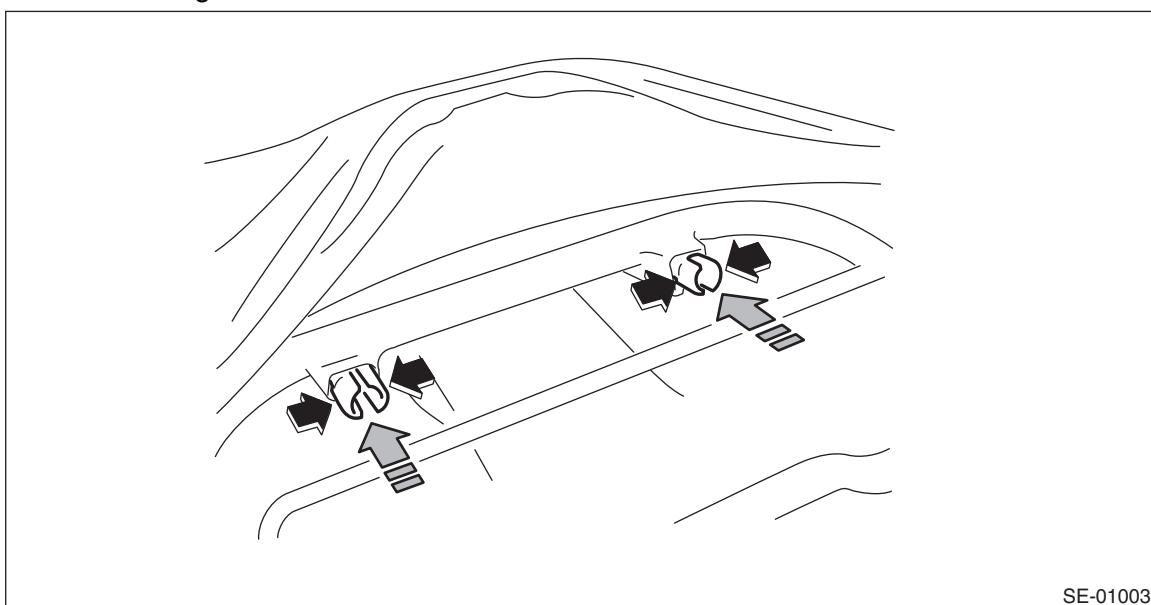


**NOTE:**

Catch the tip of the bushing - headrest with pliers and push it outward from the inside of seat to remove it.

16) Pull out the frame assembly - front backrest.

17) Remove the cover COMPL - front backrest.

(1) Remove the hog ring (A).

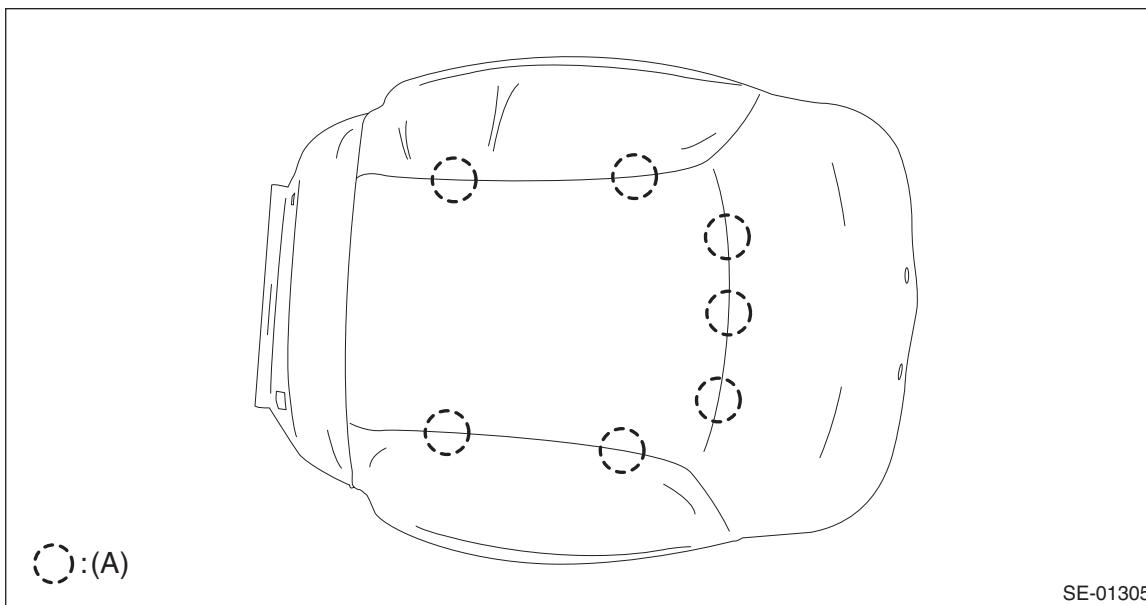

(2) Pull out the pad assembly - front seat backrest from the cover COMPL - front backrest.

## 2. DRIVER SEAT (POWER SEAT MODEL)

### CAUTION:


- Before assembling, make sure how the harnesses such as the side airbag harness and the seat belt inner - front harness are routed in order to avoid misarranging. Assembling with harnesses improperly routed may cause the harness to get caught and short out.
- Do not disassemble the backrest assembly and seat cushion frame and slide rail assembly.

1) Remove the seat from vehicle.<Ref. to SE-9, REMOVAL, Front Seat.>

### NOTE:

Before removing the seat, raise the seating face.

2) Remove the knob - power seat.

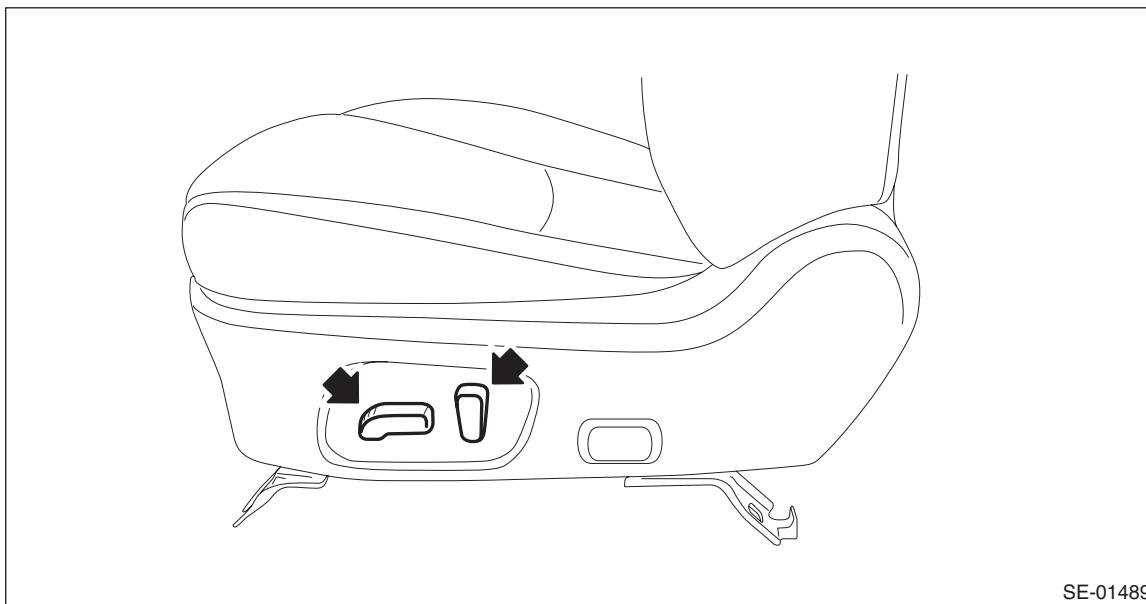


## Front Seat

### SEATS


#### 3) Remove the cover - hinge front seat OUT.

- (1) Remove the screws in the rear section of the cover - hinge front seat OUT.
- (2) Release the claw in the upper section of the cover - hinge front seat OUT.
- (3) Remove the clip, and release the claws in the front section of the cover - hinge front seat OUT.
- (4) Disconnect the power seat switch and lumber switch connector and remove the cover - hinge front seat OUT.

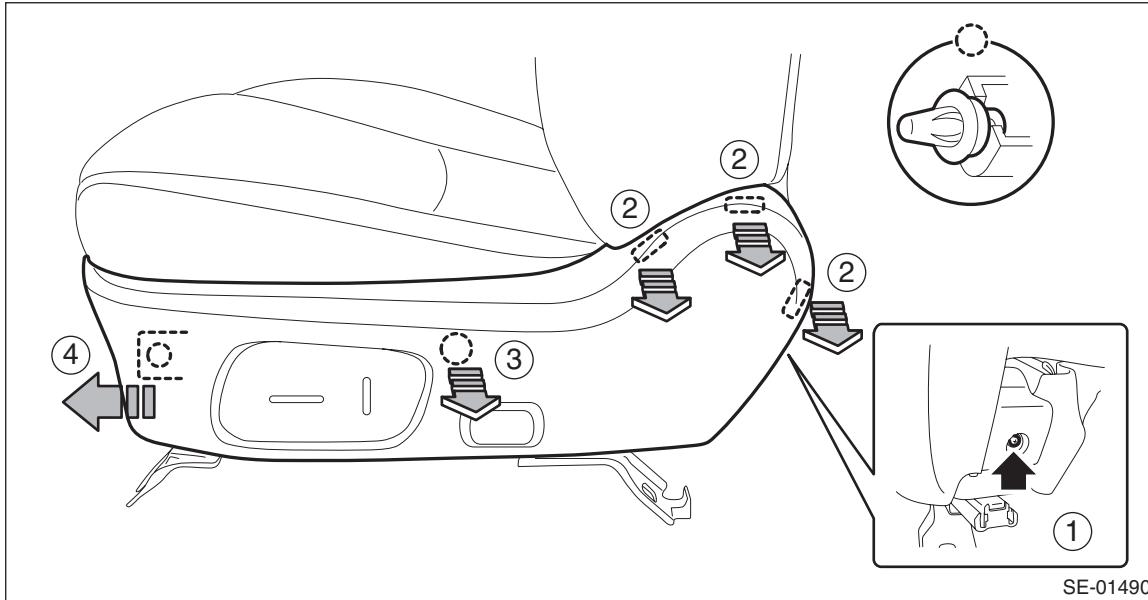


#### 4) Disconnect the connectors from the backside of seat cushion.

- (1) Disconnect the connector for reclining motor.
- (2) Disconnect the connector of seat heater harness. (Seat with seat heater)

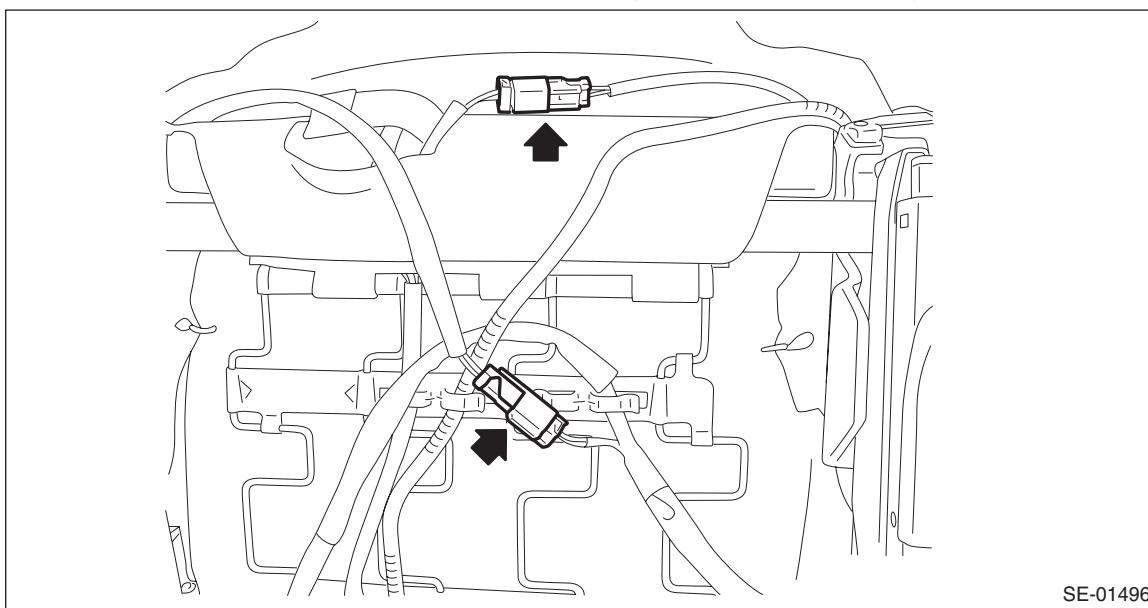

5) Remove the nuts, and remove the member - bracket.

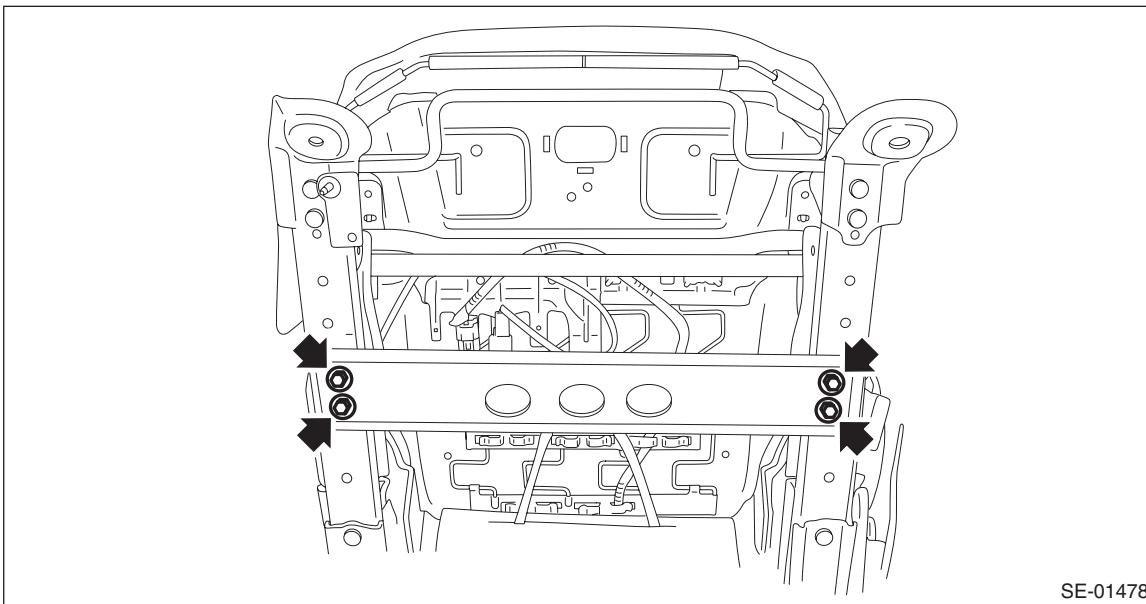


SE-01478

6) Remove the seat belt inner - front.

(1) Remove the nut, and remove the seat belt inner - front.

(2) Disconnect the connector for the seat belt inner - front harness located under the seat cushion assembly.

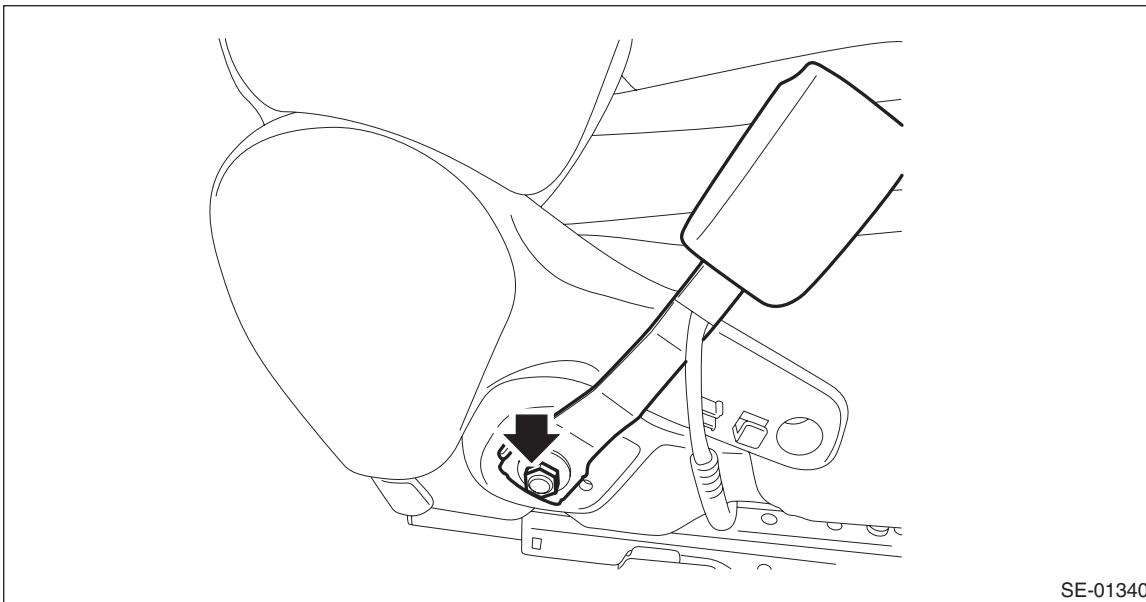

SE-01340

## Front Seat


### SEATS

7) Remove the cover - hinge front seat INN.

(1) Remove the screws.

(2) Release the claw in the upper section of the cover - hinge front seat INN.

(3) Release the claw in the rear section of the cover - hinge front seat INN, then remove the cover - hinge front seat INN.

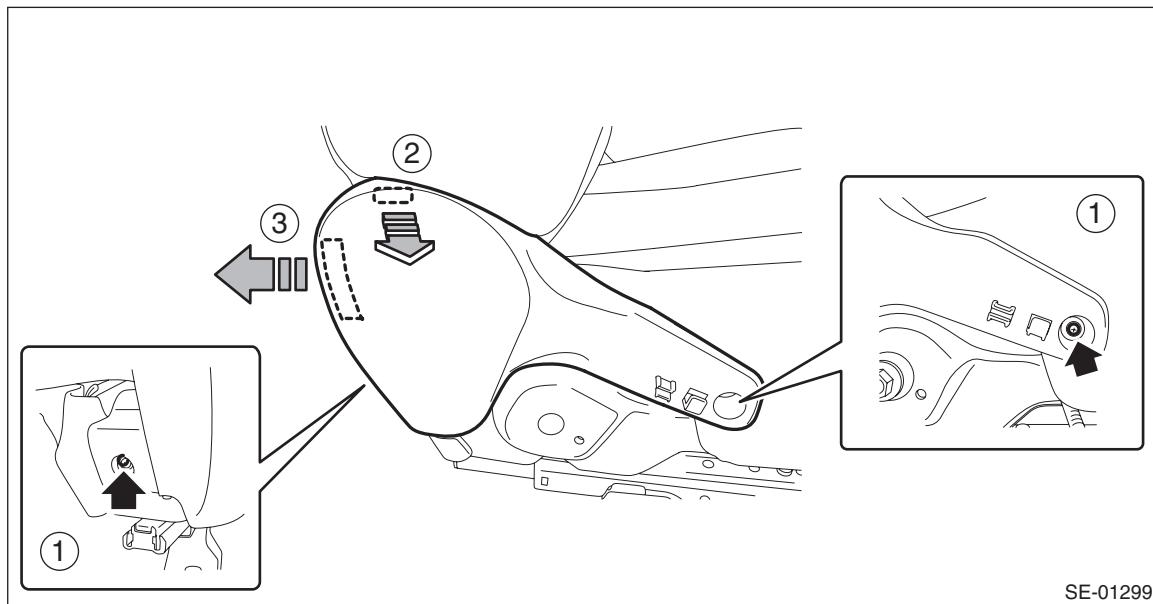


8) Separate the backrest assembly and the seat cushion assembly.

(1) Remove the clip for the side airbag harness located under the seat cushion assembly.

(2) Remove the bolts from reclining hinge of both sides.


(3) While taking care not to damage the harness, separate the backrest assembly and the seat cushion assembly.

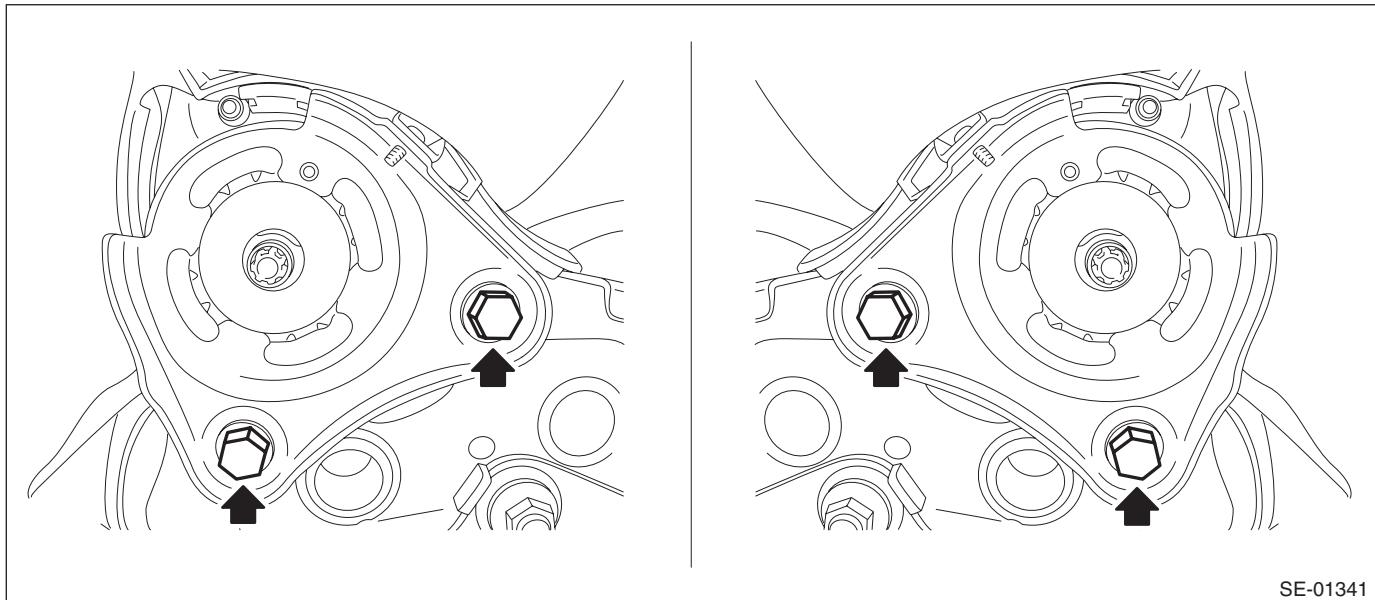

9) Remove the pad assembly - front seat cushion and the cover - front cushion.

(1) Remove the hooks and hog rings.


(2) Remove the pad assembly - front seat cushion and the cover - front cushion from the seat cushion assembly.

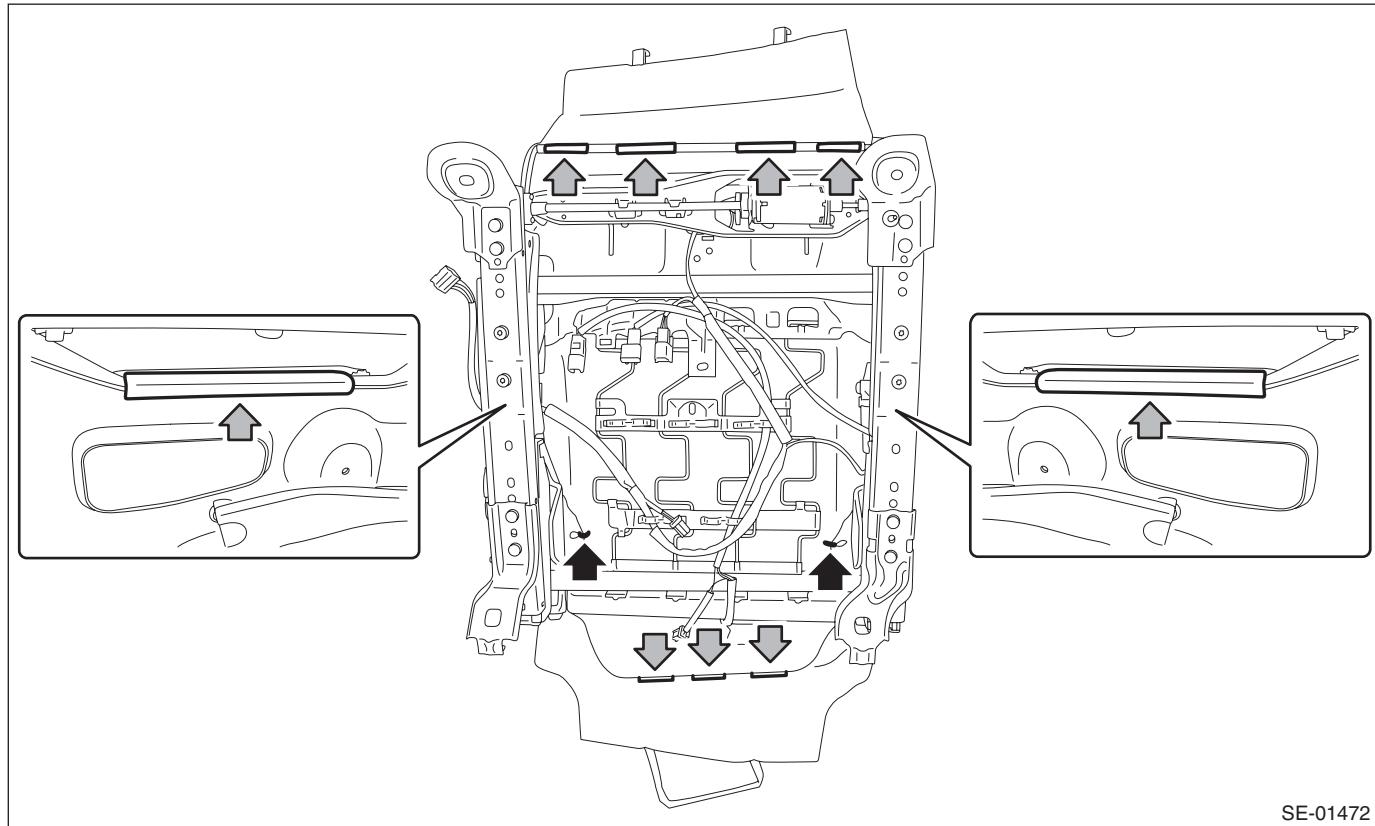

SE-01472

10) Remove the cover - front cushion.

(1) Remove the hog ring (A).

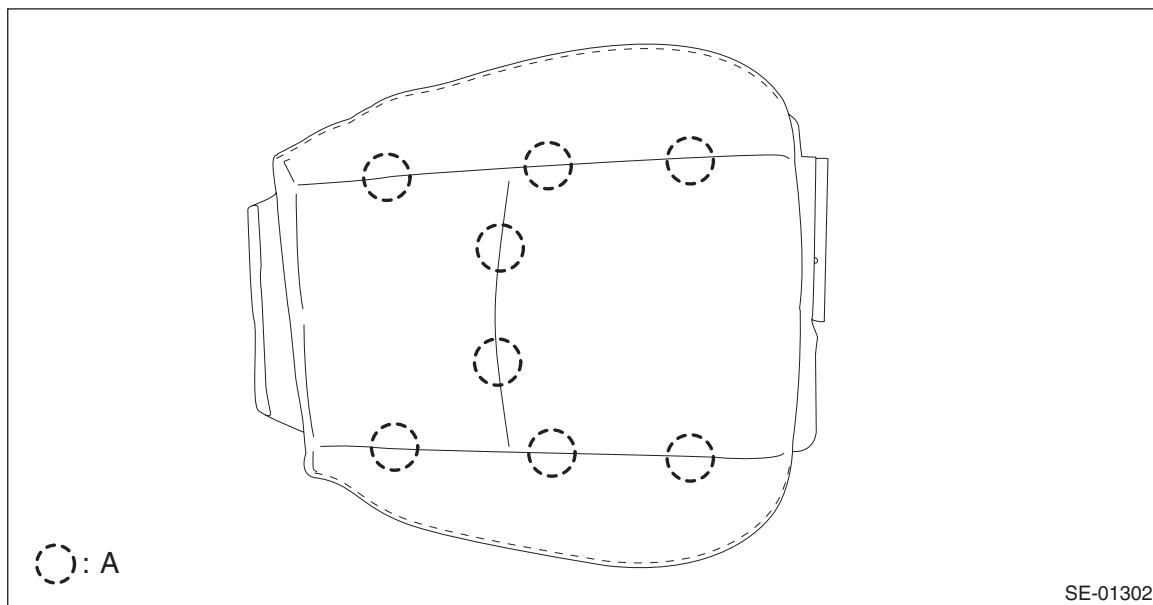

SE-01302

(2) Pull out the pad assembly - front seat cushion from the cover - front cushion.


## Front Seat

### SEATS

11) Remove the pad assembly - front seat backrest and the cover COMPL - front backrest.

(1) Remove the plastic fastener at the back side (bottom) of backrest assembly.

(2) Open the fastener at the rear side of backrest assembly.

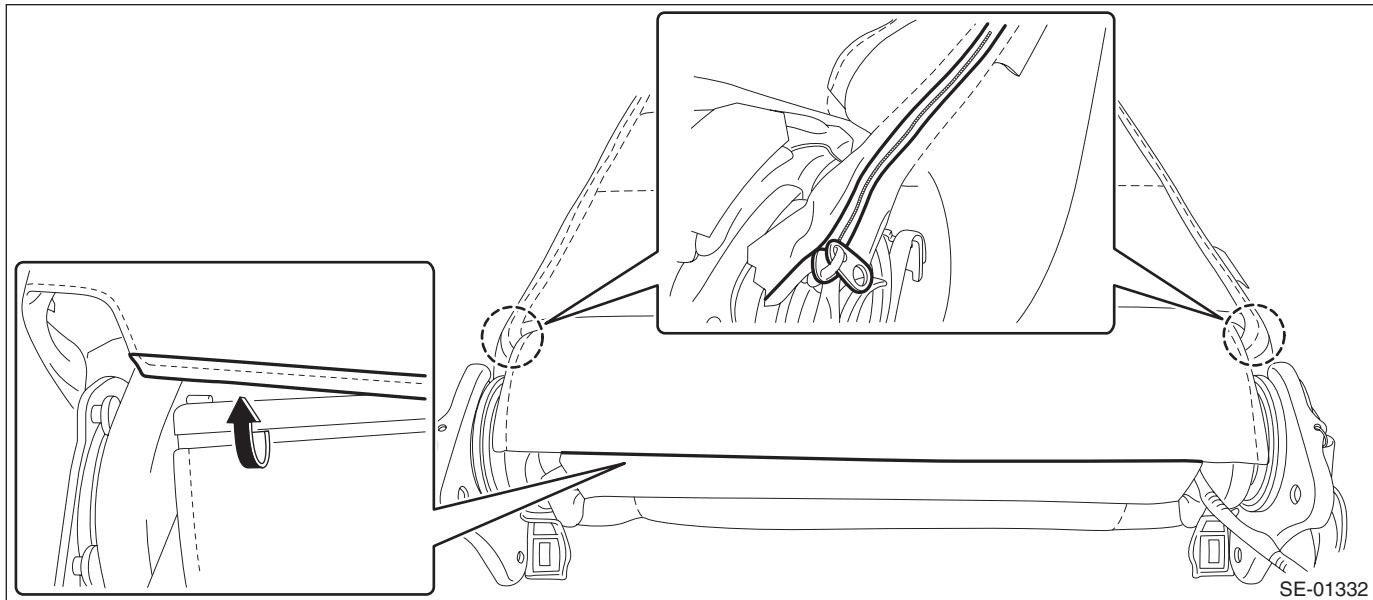


(3) Remove the hog ring.


#### CAUTION:

Be careful not to tear the vinyl inside the seat when removing the hog rings.

If torn, replace with a new part.

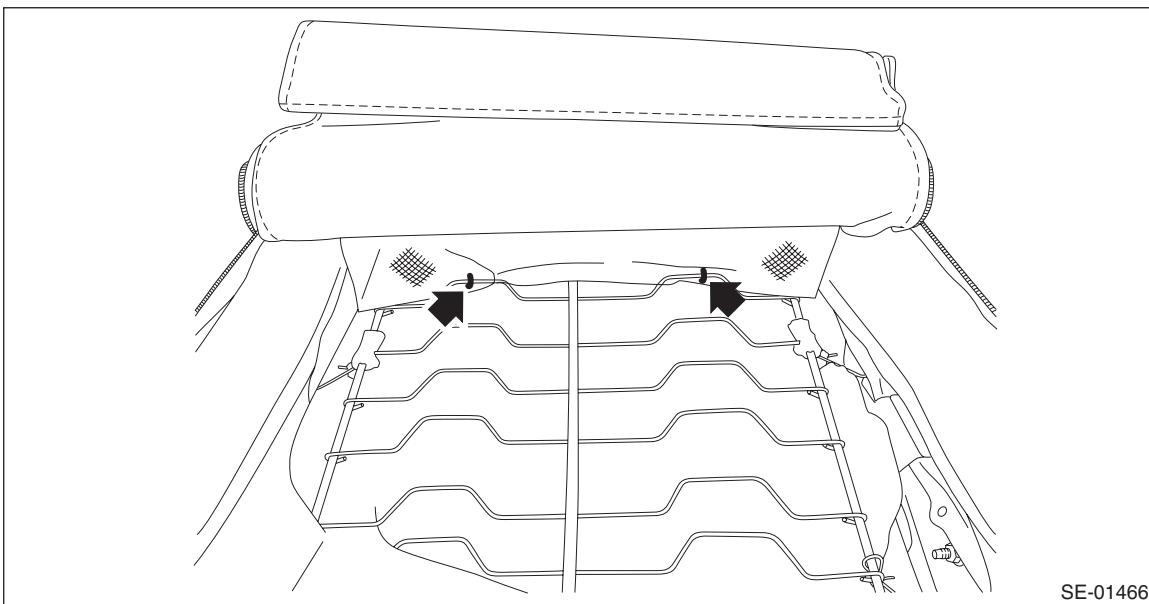

(4) Turn over the backrest pad & cover, and remove the hog rings.

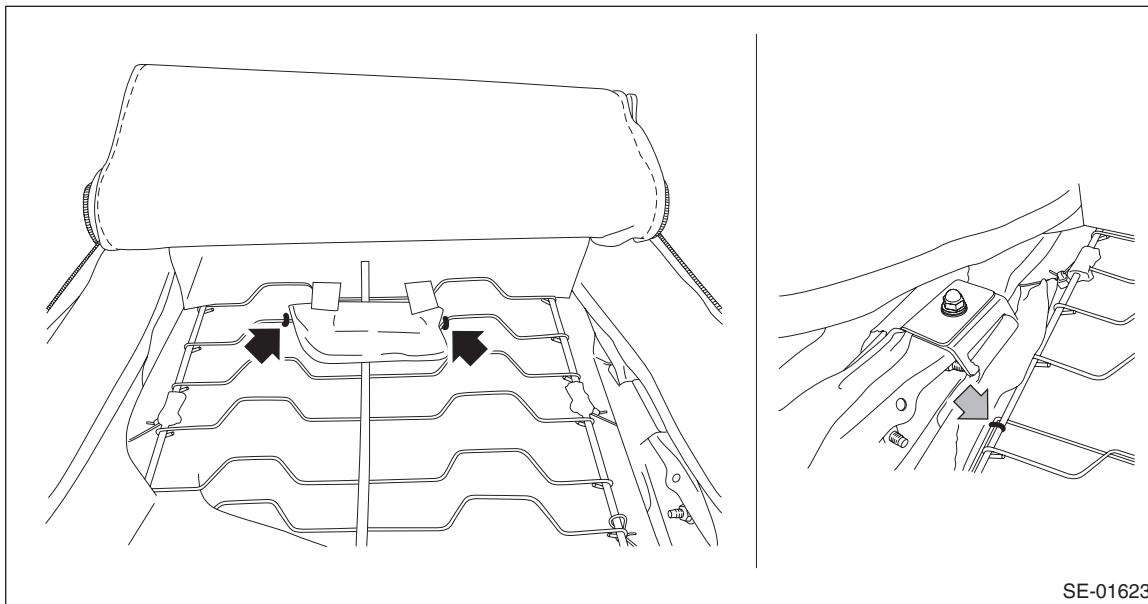

**NOTE:**

The part with an arrow (gray) is only for 10-WAY model.


12) Remove the side airbag module.

**CAUTION:**

**Do not open the protective cover of the side airbag. If any damage is present in the protective cover or the cloth of side airbag module comes out from the protective cover slit, replace the side airbag module with a new part.**

(1) Remove the hexagon cap nut and nuts.


(2) While taking care not to damage the airbag protective cover, remove the side airbag module.

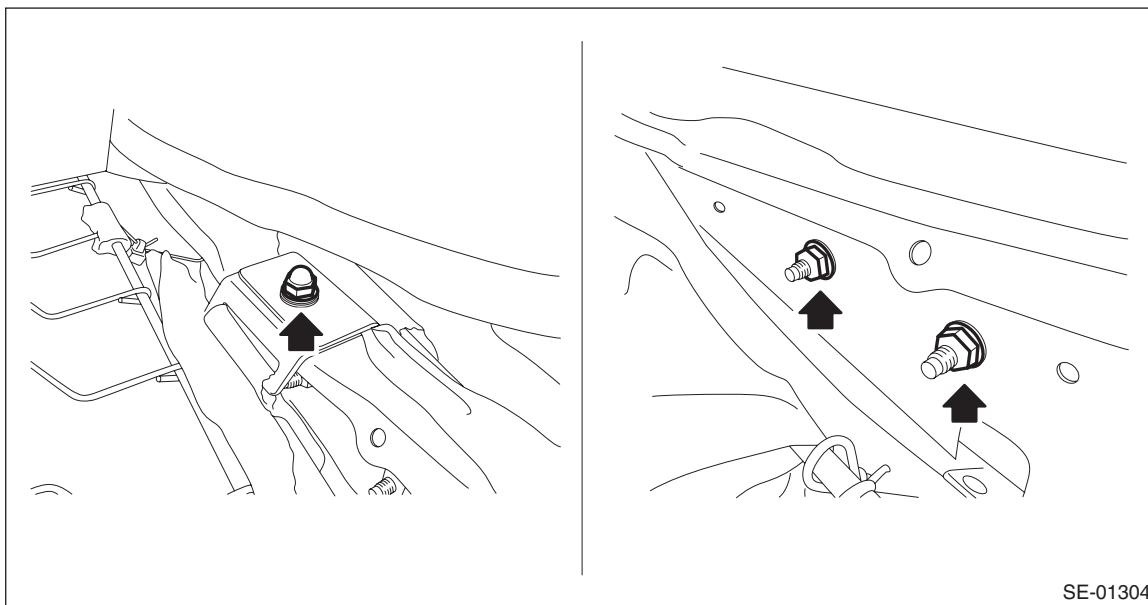

## Front Seat

### SEATS

13) Remove the headrest bushing.

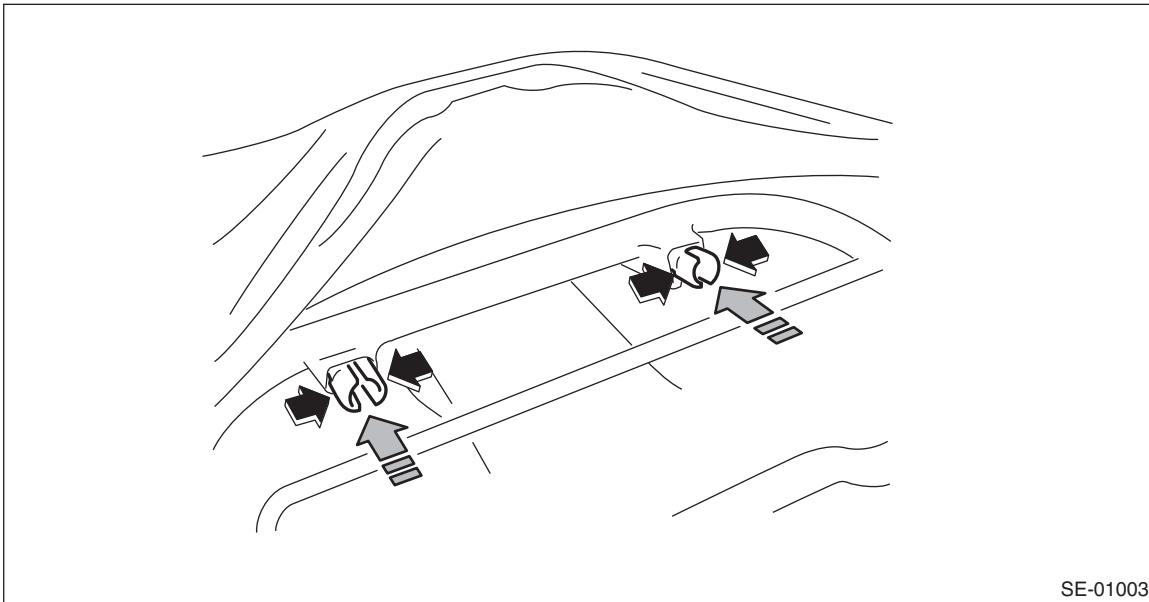


NOTE:

Catch the tip of headrest bushing with pliers and push it from inside seat to outside to remove it.

14) Pull out the frame assembly - front backrest.

15) Remove the cover COMPL - front backrest.

(1) Remove the hog ring (A).

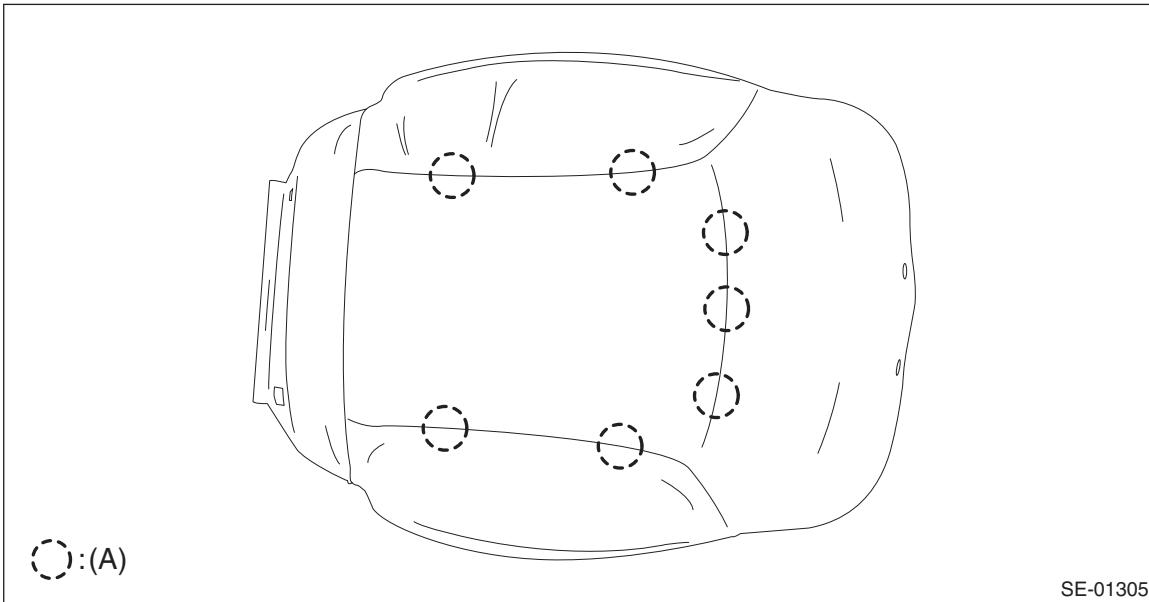

(2) Pull out the pad assembly - front seat backrest from the cover COMPL - front backrest.

### 3. PASSENGER'S SEAT

#### CAUTION:


- The occupant detection system (passenger's seat only) control module, the occupant detection sensor, the pad assembly - front seat cushion, the frame assembly - front cushion and the cover assembly - front cushion are considered as a single seat cushion pad & frame assembly. Never remove the occupant detection control module or the occupant detection sensor from the frame assembly - front cushion.
- Never remove the occupant detection sensor connector from the occupant detection control module.

- 1) Remove the front seat (passenger's side) from vehicle. <Ref. to SE-9, REMOVAL, Front Seat.>
- 2) Refer to the disassembly procedures for the driver's seat. <Ref. to SE-11, DRIVER SEAT (MANUAL SEAT), DISASSEMBLY, Front Seat.>


### D: ASSEMBLY

#### CAUTION:

- Do not confuse the harness routing of the side airbag harness and the seat belt inner - front harness, etc. Assembling with harnesses improperly routed may cause the harness to get caught and short out.
- If the flat mat hook of the frame assembly - front backrest is deformed or comes off due to the deformation, replace the hook with a new part.

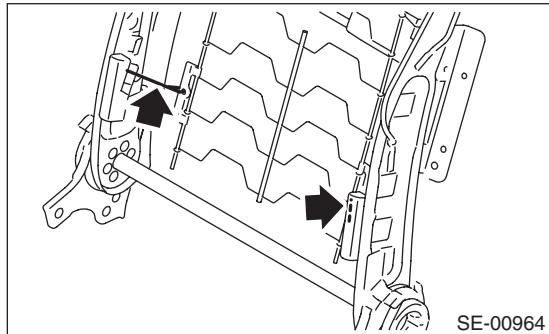

- Make sure that the side airbag module is installed as shown in the figure.

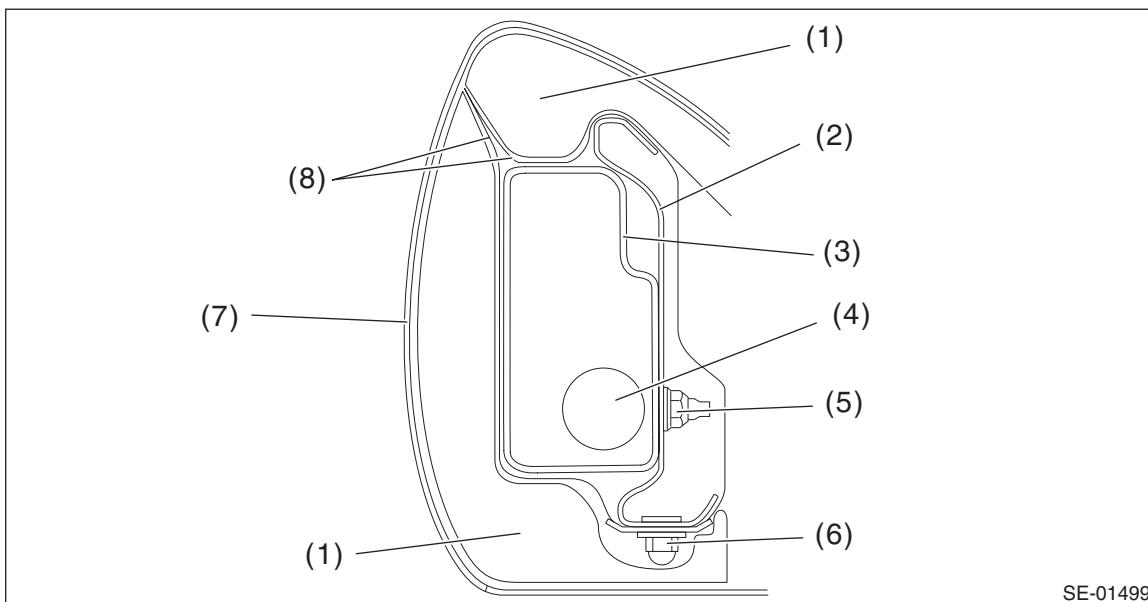

(1) Pad ASSY - front seat backrest	(4) Side airbag module inflator	(7) Cover COMPL - front backrest
(2) Frame ASSY - front backrest	(5) Nut	(8) Side airbag guide cloth
(3) Side airbag module protective cover	(6) Hexagon cap nut	

## Front Seat

### SEATS


**Besides, if the cover COMPL - front backrest is not installed securely, the side airbag may not be activated properly, therefore keep strictly to the following procedures.**

- Be careful not to stain or damage the cover COMPL - front backrest during assembly.
- Do not reuse hog rings.
- Secure the hog ring using hog ring pliers.
- Install the hog rings to the specified points securely and make sure that there is no wrinkle or twisting on the cover COMPL - front backrest.

1) Make sure that there is no foreign matter on side airbag module.


2) Assemble the seat cover.

(1) Adjust so that the left and right clearances between wire and seat pad become equal, and mark the seat pad.

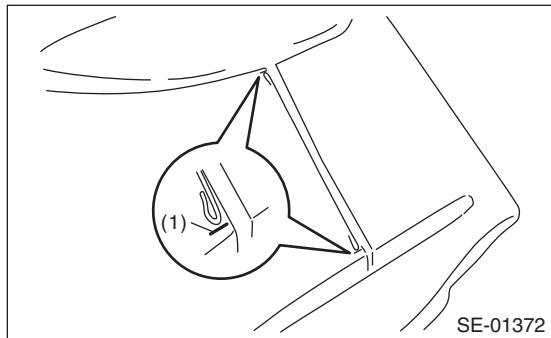


(1) Marking

(2) Mark the center of the wire on the pad side to which the hog ring is attached.

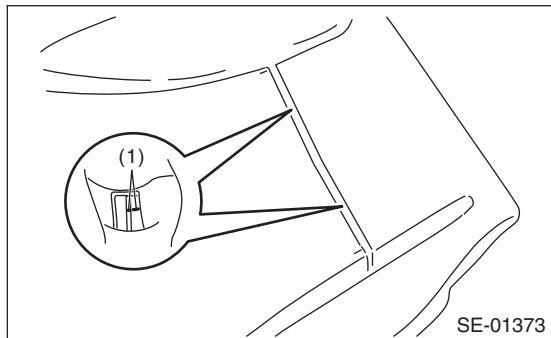


(1) Marking

(3) Insert the wire into the seat cover, and align the wire with the position marked in step 1).

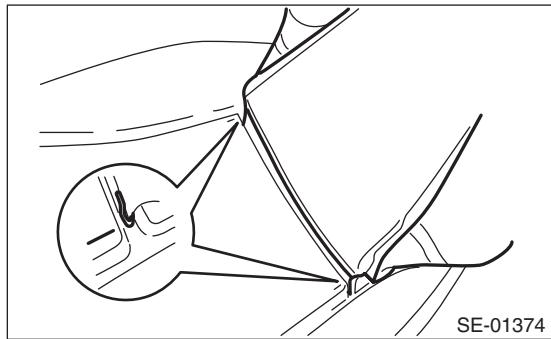

(4) Mark the wire on the seat cover side according to the markings on the seat pad.

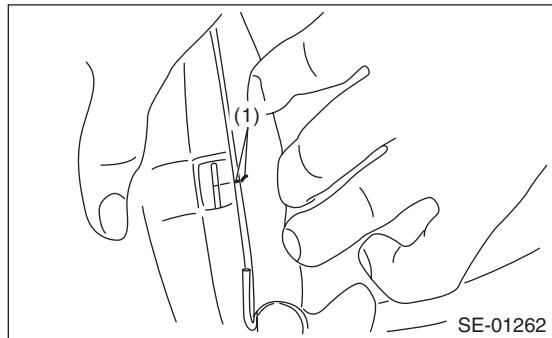


(1) Marking

(5) Perform steps 1) — 4) to all sections to which the hog rings are attached.

(6) Make sure that all hog rings (A) are attached securely.

(7) Make sure that the hog ring (B) (10-WAY model) is attached securely.

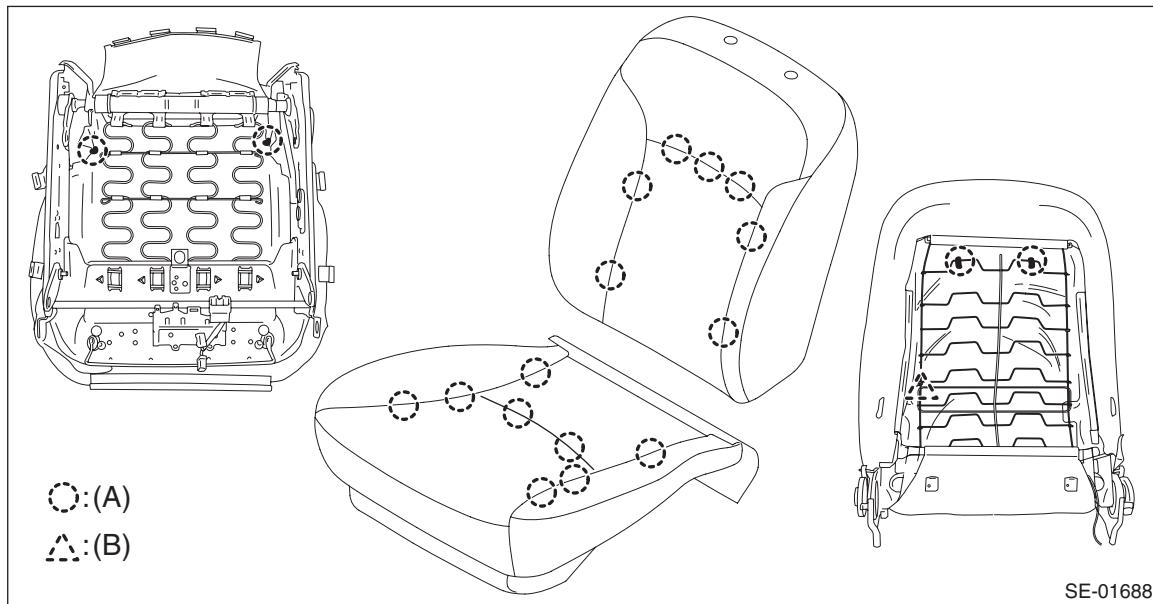


## Front Seat

### SEATS

3) Assemble remaining parts in the reverse order of disassemble.

#### NOTE:

- When installing the seat belt inner - front, follow the procedures described in the seat belt section.<Ref. to SB-25, INSTALLATION, Front Seat Belt.>
- Install the backrest assembly and seat cushion assembly in the following procedure.
  1. Temporarily tighten the four reclining hinge bolts.
  2. Place the backrest in the most upright position.
  3. Tighten the reclining hinge bolts in order from (1) to (4) two or three times, until they reach the specified torque.

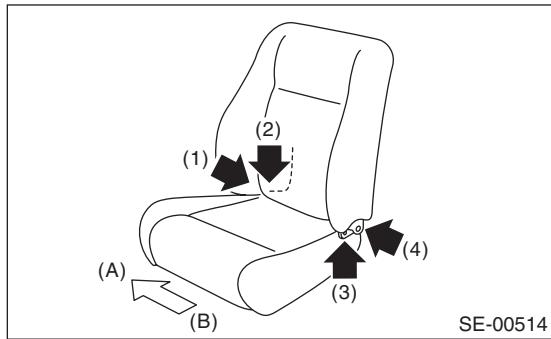

(A) Vehicle inside

(B) Vehicle outside

#### Tightening torque:

Refer to "COMPONENT" of "General Description".<Ref. to SE-2, FRONT SEAT, COMPONENT, General Description.>

4) If any wrinkles are found after the assembly of the seat cover, finish the seat cover with iron.

- (1) Place the wet towel on wrinkles.




- (2) Touch up with warm iron.

#### CAUTION:

Keep moving the iron, otherwise the seat cover surface can be damaged.


#### NOTE:

This method is available for genuine leather, synthetic leather, cloth, etc.

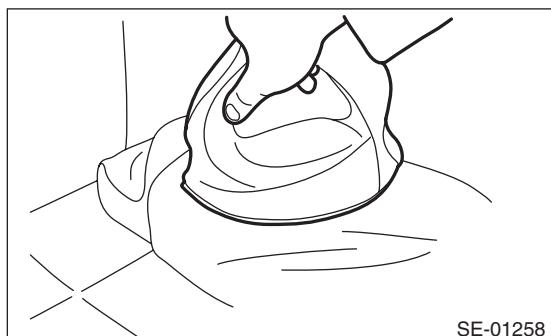


5) Install connectors located under the front seat.

- Power seat

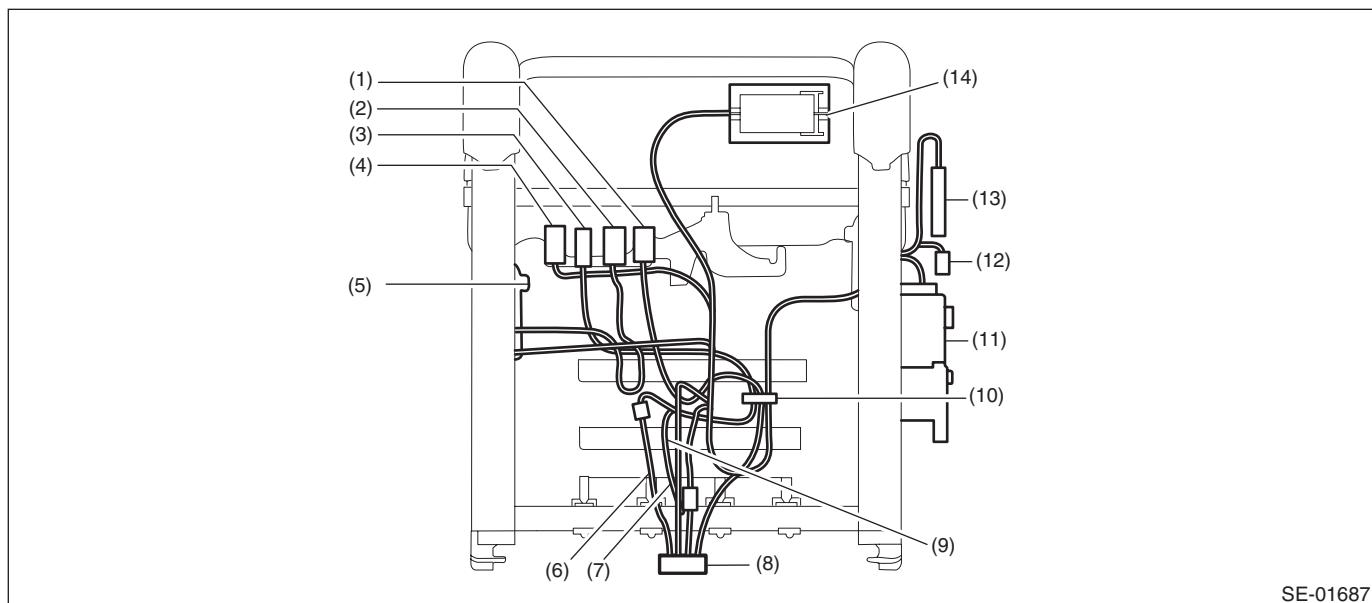

(1) Side airbag connector	(6) Backrest heater harness	(11) Lifter motor
(2) Seat belt switch connector	(7) Reclining motor harness	(12) Lumbar switch
(3) Seat cushion heater connector	(8) Velcro	(13) Power seat switch ASSY
(4) Power seat connector	(9) Seat cushion - heater harness	(14) Slide motor
(5) Tilt motor	(10) Band	

- Manual seat

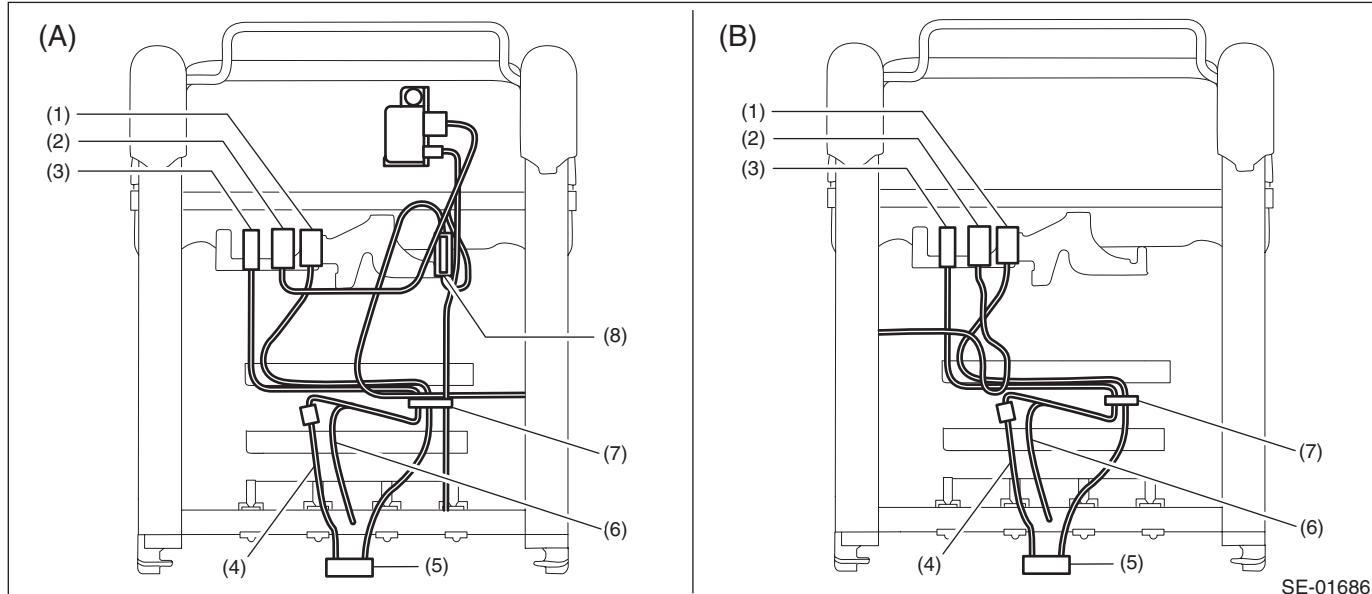

(A) RH

(B) LH

(1) Side airbag connector	(4) Backrest heater harness	(7) Band
(2) Occupant detection control module	(5) Velcro	(8) Seat belt switch connector
(3) Seat cushion heater connector	(6) Seat cushion - heater harness	


# Front Seat

## SEATS

6) Install the seat assembly.

### CAUTION:

- The seat mounting bolts differ between the front mounting points and the rear mounting points. Make sure that you are using correct bolts at correct positions.
- Tighten the slide rail installing bolts in the order as shown in the figure, in several steps by gradually increasing the torque until they reach the specified torque.

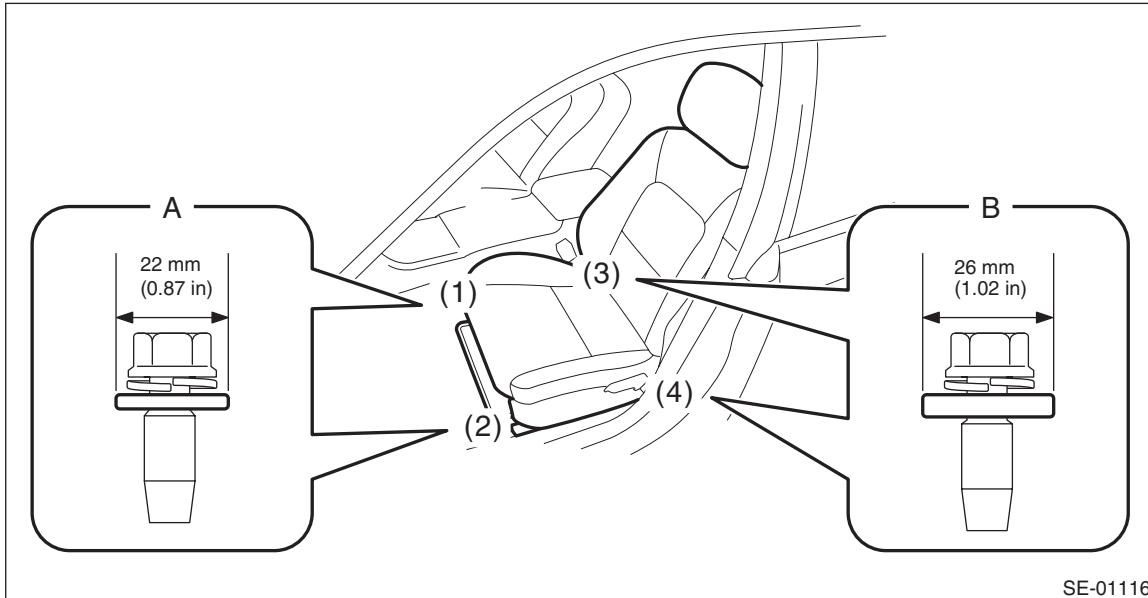

SE-01116

- Front (bolt A): Washer diameter 22 mm (0.87 in)
- Rear (bolt B): Washer diameter 26 mm (1.02 in)

**Tightening torque: 53 N·m (5.40 kgf·m, 39.1 ft-lb)**

## E: INSPECTION

### 1. SEAT COVER


Check that there is no tear or fray on the cover COMPL - front backrest and the cover - front cushion.

#### NOTE:

If the door side of the cover COMPL - front backrest is torn or frayed, the side airbag may not be deployed properly. In this case, replace the cover COMPL - front backrest with a new part.


### 2. SEATING SWITCH (PASSENGER'S SEAT BELT WARNING LIGHT)

Apply weight to rear part of passenger's seat cushion and check if passenger's seat belt warning light illuminates. If it does not, replace the pad assembly - front seat cushion and the frame assembly - front cushion with new parts.

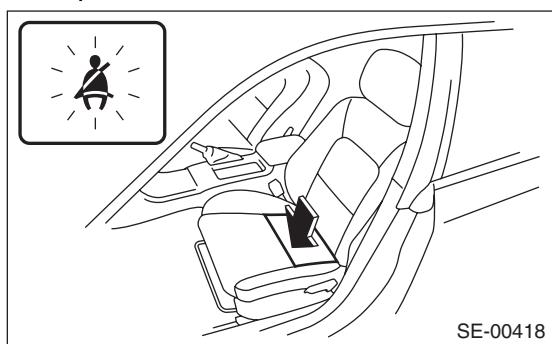

### 3. FLAT MAT HOOK

Check the flat mat hook by applying weight to the backrest assembly.

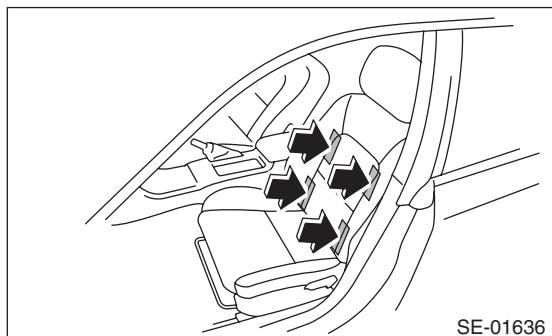

**NOTE:**

If the appropriate stiffness is not obtained by applying weight to the backrest assembly, the hook may be disengaged.

If it is due to the deformation of the hook, replace the hook with a new part.

