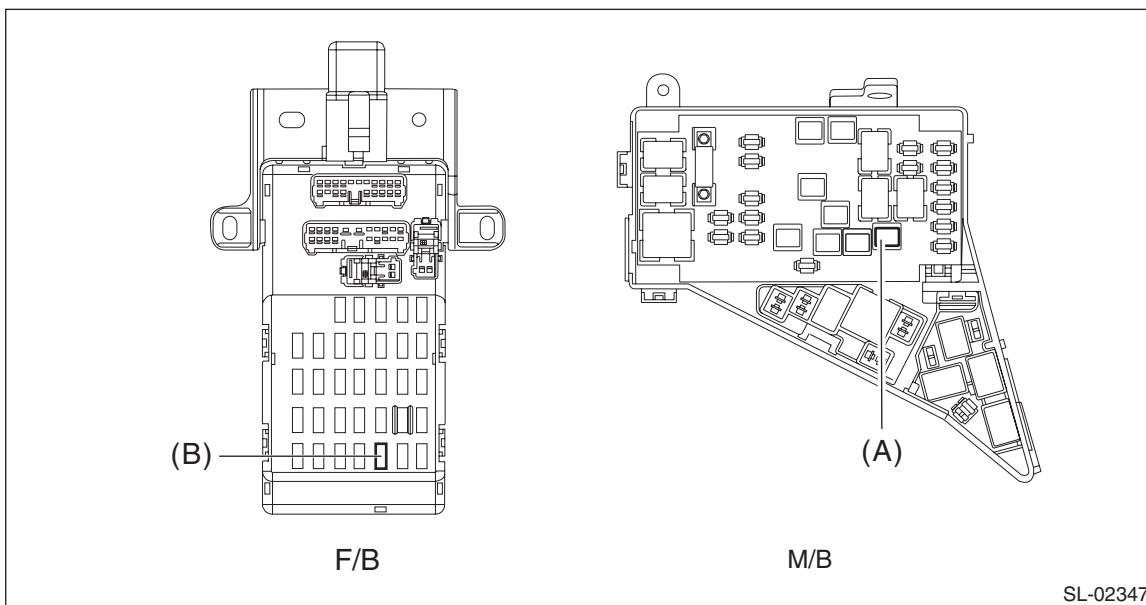


## 2. Relay and Fuse

### A: LOCATION



SL-02347

Main fuse box	Fuse 50 A (keyless access CM)	(A)
Relay & fuse box	Fuse 7.5 A (body integrated unit)	(B)

**NOTE:**

For other related fuses, refer to the wiring diagram. <Ref. to WI-24, Power Supply Circuit.>

### B: INSPECTION

#### 1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

**NOTE:**

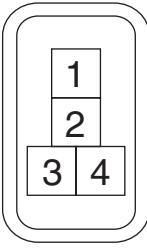
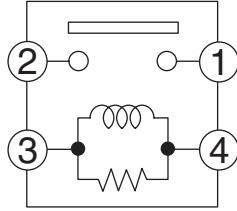
If the fuse is blown again, check the system wiring harness.

# Relay and Fuse

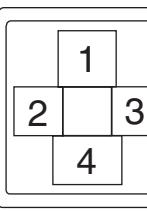
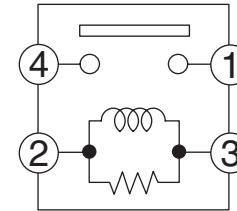
## SECURITY AND LOCKS

### 2. CHECK RELAY

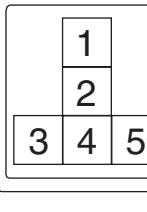
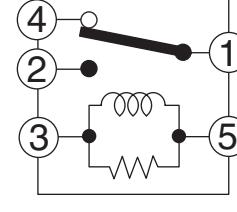
1) Check the resistance between relay terminals.

Terminal No.	Inspection conditions	Standard	Circuit
1 — 2	Always	1 MΩ or more	
1 — 2	Apply battery voltage between terminals 4 and 3.	Less than 1 Ω	 

LI-01273

Terminal No.	Inspection conditions	Standard	Circuit
1 — 4	Always	1 MΩ or more	
1 — 4	Apply battery voltage between terminals 2 and 3.	Less than 1 Ω	 

AC-02796

Terminal No.	Inspection conditions	Standard	Circuit
1 — 2	Always	1 MΩ or more	
1 — 4	Always	Less than 1 Ω	
1 — 2	Apply battery voltage between terminals 3 and 5.	Less than 1 Ω	 

SL-01566

2) Replace the relay if the inspection result is not within the standard value.