


34.ID Code Box

A: REMOVAL

NOTE:

- Equipped on C0 and C5 models with keyless access.
- The ID code box is located at the place of security control module.

- 1) Remove the heater and cooling unit assembly.<Ref. to AC-61, REMOVAL, Heater and Cooling Unit.>
- 2) Remove the ID code box.
 - (1) Disconnect the connector.
 - (2) Remove the nut and remove the ID code box.

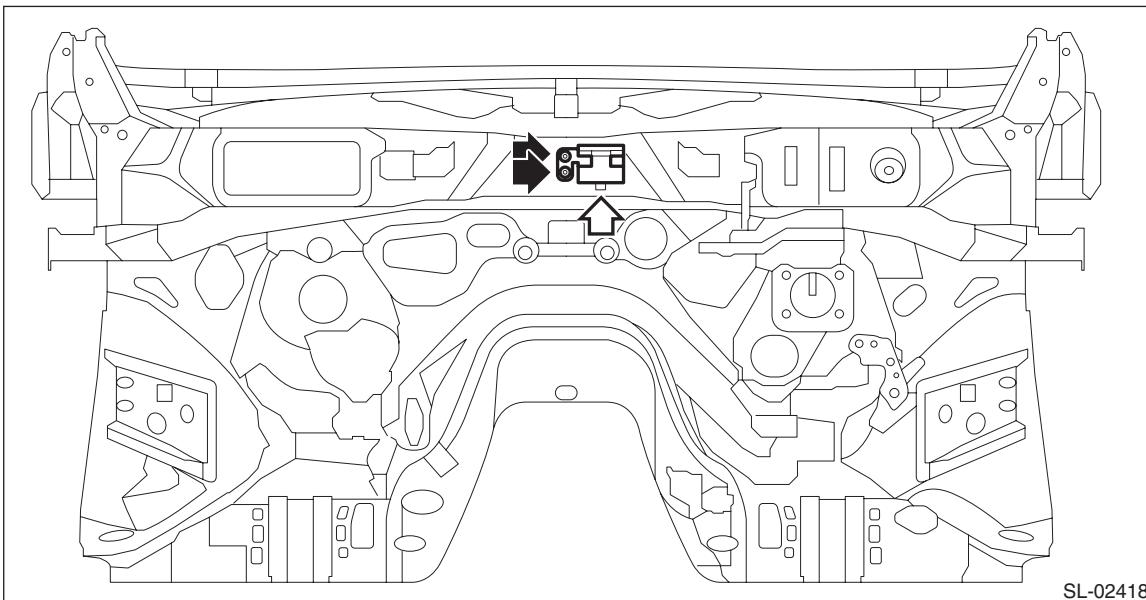

B: INSTALLATION

CAUTION:

Registration of the immobilizer is necessary when a immobilizer-related control module has been replaced. For detailed operation procedure, refer to the “REGISTRATION MANUAL FOR IMMOBILIZER”.

Install each part in the reverse order of removal.

NOTE:

Refer to “INSTALLATION” of “Heater and Cooling Unit Assembly”.<Ref. to AC-64, INSTALLATION, Heater and Cooling Unit.>

Tightening torque:

ID code box: 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)