

## 6. Push Button Start System

### A: WIRING DIAGRAM

For wiring diagrams related to the push button start system (ignition change), refer to the following items.

- Keyless access system: <Ref. to WI-273, WIRING DIAGRAM, Keyless Access System.>
- Push button start system
  - Non-turbo model: <Ref. to WI-325, NON-TURBO MODEL, WIRING DIAGRAM, Push Button Start System.>
  - Turbo model: <Ref. to WI-332, TURBO MODEL, WIRING DIAGRAM, Push Button Start System.>

### B: ELECTRICAL SPECIFICATION

Refer to "Control Module I/O Signal" of "KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)" section. <Ref. to KPS(diag)-12, ELECTRICAL SPECIFICATION, Control Module I/O Signal.>

### C: INSPECTION

#### 1. IGNITION/ACC CHANGE FUNCTION CHECK

- 1) Check push button ignition switch function

(1) Check the power supply change control through push button ignition switch, brake pedal, clutch pedal operation, and shift position.

- CVT model

Shift lever position	Brake pedal operation	Push button ignition switch operation
P	Released	Repeat Ignition OFF → ACC ON → Ignition ON → Ignition OFF
P	Released	Engine running → Ignition OFF
P	Depressed	Ignition OFF → Engine started
P	Depressed	ACC ON → Engine started
P	Depressed	Ignition ON → Engine started
P	Depressed	Engine running → Ignition OFF
N	Released	Repeat Ignition OFF → ACC ON → Ignition ON → ACC ON
N	Released	Engine running → ACC ON
N	Depressed	Ignition OFF → Engine started
N	Depressed	ACC ON → Engine started
N	Depressed	Ignition ON → Engine started
N	Depressed	Engine running → ACC ON
Other than P or N	Released	Repeat Ignition OFF → ACC ON → Ignition ON → ACC ON
Other than P or N	Released	Engine running → ACC ON
Other than P or N	Depressed	Ignition OFF → Ignition ON
Other than P or N	Depressed	ACC ON → Ignition ON
Other than P or N	Depressed	Engine running → ACC ON

# Push Button Start System

## SECURITY AND LOCKS

### 2) Check power status display

(1) Check the power indicator display of the push button ignition switch.

#### NOTE:

\*1: Key collation is normal, and the stop light switch (CVT) or clutch switch (MT) is ON.

\*2: For CVT models, while the select lever button is being pressed, the indicator does not illuminate in green even if the select lever is in P range.

#### Indicator display

Push button ignition switch status	Indicator lighting status
Ignition OFF (except for condition *1)	Light OFF
ACC ON (except for condition *1)	Orange light
Ignition ON (except for condition *1)	Orange light
Engine start standby (*1)	Green light (*2)
After engine is started	Light OFF

#### NOTE:

The indicator blinks if any of the following malfunctions are detected.

Detected malfunction	Indicator lighting status
Steering lock stuck	Green blinking
Clutch switch failure	Orange blinking
Steering lock CM internal malfunction	Orange blinking
Keyless access CM internal malfunction	Orange blinking
Vehicle speed signal malfunction	Orange blinking