



12.Rear Washer

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trim panel - rear gate UPR.
 - (1) Remove the claws on the trim edge.
 - (2) Release the claws in the center of trim, and remove the trim panel - rear gate UPR.

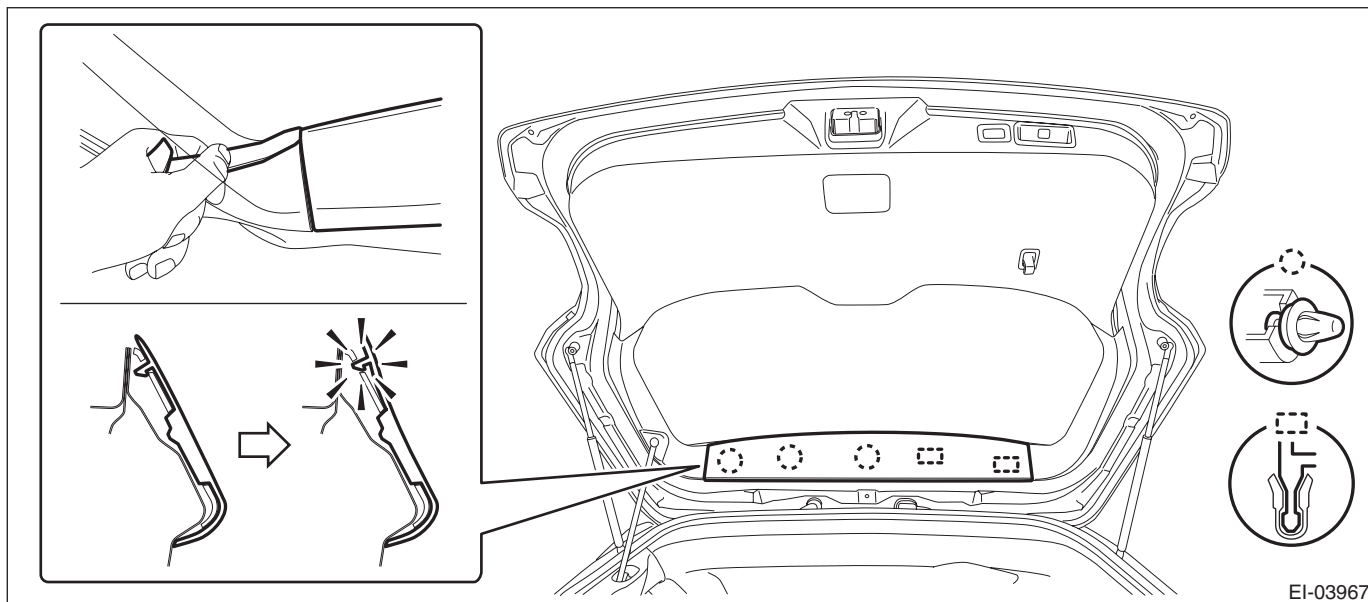

- 3) Remove the light assembly - high-mounted. (Model without roof spoiler)
 - (1) Remove the nut.
 - (2) Disconnect the connector and remove the light assembly - high-mounted.

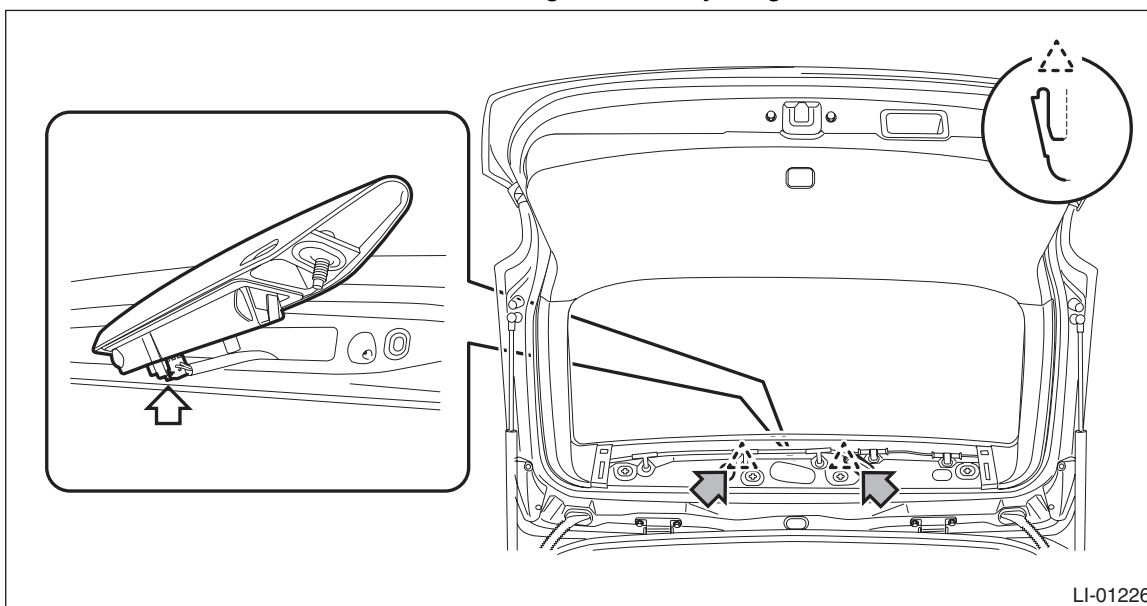

- 4) Remove the roof spoiler. (Model with roof spoiler) <Ref. to EI-49, REMOVAL, Roof Spoiler.>

Rear Washer


WIPER AND WASHER SYSTEMS

5) Remove the nozzle - rear washer.

CAUTION:

Before removing, apply protective tape to the body panel and used tools not to damage the panel - rear gate.

- (1) Push the claw using a flat tip screwdriver, etc.
- (2) When the nozzle - rear washer lifts up, pull out the nozzle - rear washer using a clip remover, etc.
- (3) Disconnect the hose assembly - rear washer, and remove the nozzle - rear washer.

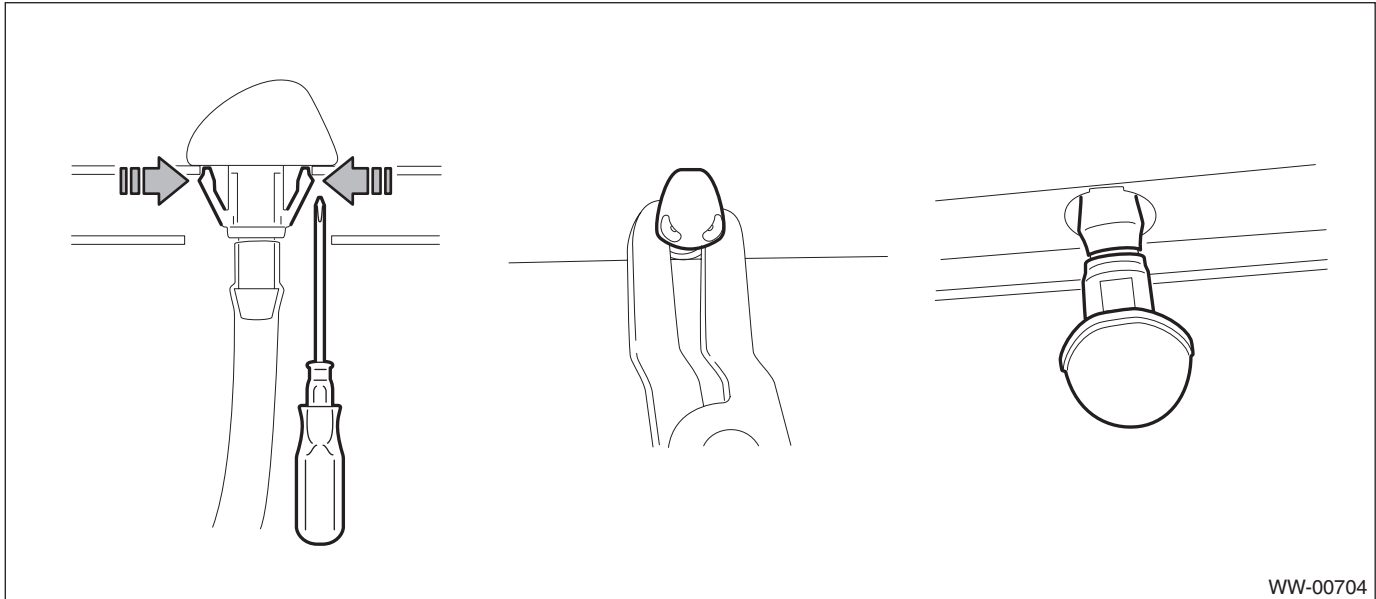

B: INSTALLATION

1) Install each part in the reverse order of removal.

Tightening torque:

Light assembly - high-mounted (model without roof spoiler): 4.5 N·m (0.46 kgf-m, 3.3 ft-lb)

Spoiler assembly - roof (model with roof spoiler): 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

2) Check the nozzle - rear washer position. <Ref. to WW-47, VISUAL INSPECTION, INSPECTION, Rear Washer.>


C: INSPECTION**1. VISUAL INSPECTION**

Check for the following items, and if any malfunction is found, replace the corresponding part.

- Make sure the nozzle - rear washer and the hose - rear washer are not clogged.
- Make sure the hose - rear washer is not bent.

2. INSPECTING THE SPRAY POSITION

- 1) Turn the wiper switch to OFF position.
- 2) While the vehicle is stopped, check that the washer spray position is as shown in the figure.
- 3) After inspection, if the spray position is significantly out of the specified range, replace the nozzle - rear washer with a new part.

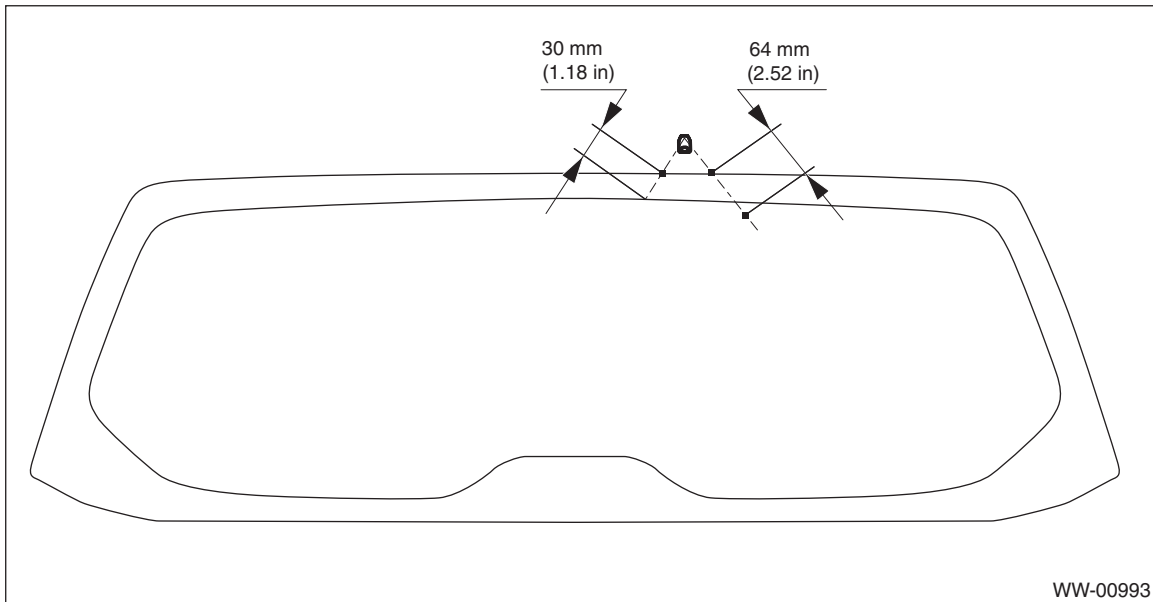

Rear Washer

WIPER AND WASHER SYSTEMS

	Page
1. General Description	2
2. Relay and Fuse	3
3. Audio System	4
4. Navigation System	5
5. Audio	8
6. Front Speaker	10
7. Rear Speaker	12
8. Power Amplifier	14
9. Antenna	15
10. Steering Satellite Switch	17
11. Microphone	22
12. Navigation Body	23
13. GPS Antenna	25
14. Rearview Camera System	28
15. Front Accessory Power Supply Socket	32
16. Rear Accessory Power Supply Socket	33
17. AUX Input Terminal	34