


7. Front Wiper Arm


A: REMOVAL

- 1) Open the hood COMPL - front.
- 2) Remove the arm assembly - windshield wiper.
 - (1) Remove the cover - windshield wiper arm.
 - (2) Remove the nuts, and remove the arm assembly - windshield wiper.

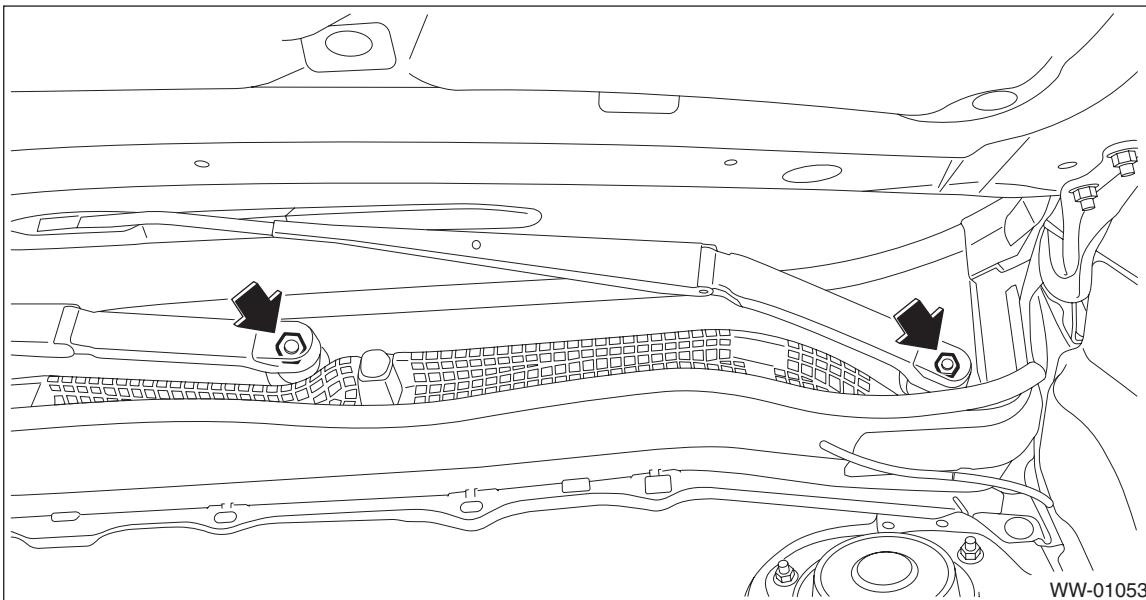

B: INSTALLATION

- 1) Install the arm assembly - windshield wiper.
 - (1) Assemble the arm assembly - windshield wiper so that the blade assembly - windshield wiper is aligned to the ceramic print point mark of the windshield glass.

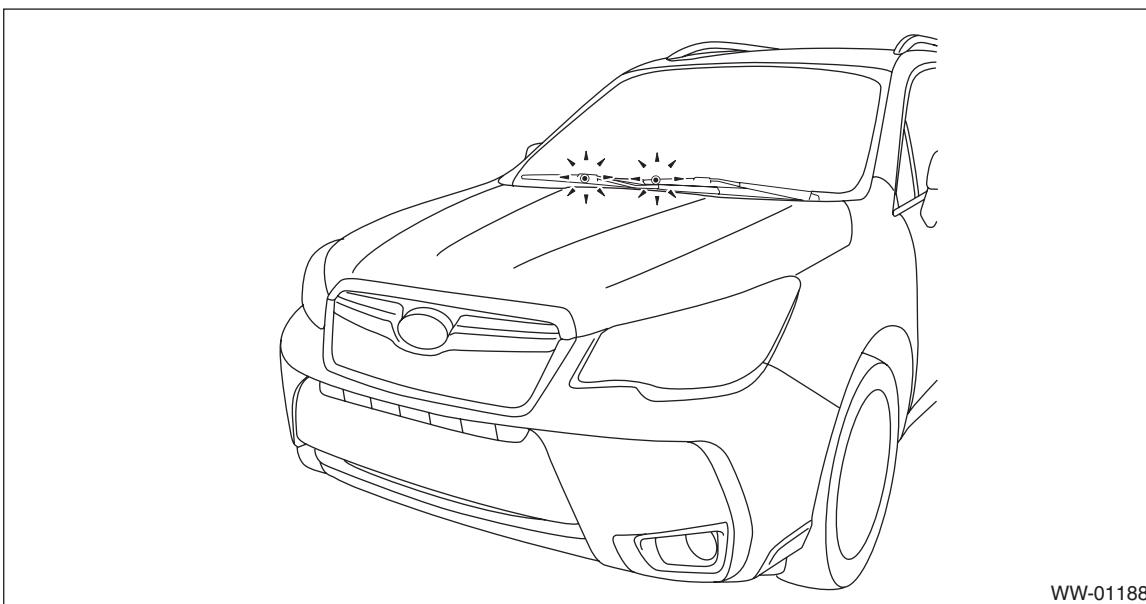


Front Wiper Arm

WIPER AND WASHER SYSTEMS

(2) Tighten the arm assembly - windshield wiper to specified torque and install the cap.

Tightening torque:


26 N·m (2.65 kgf·m, 19.2 ft-lb)

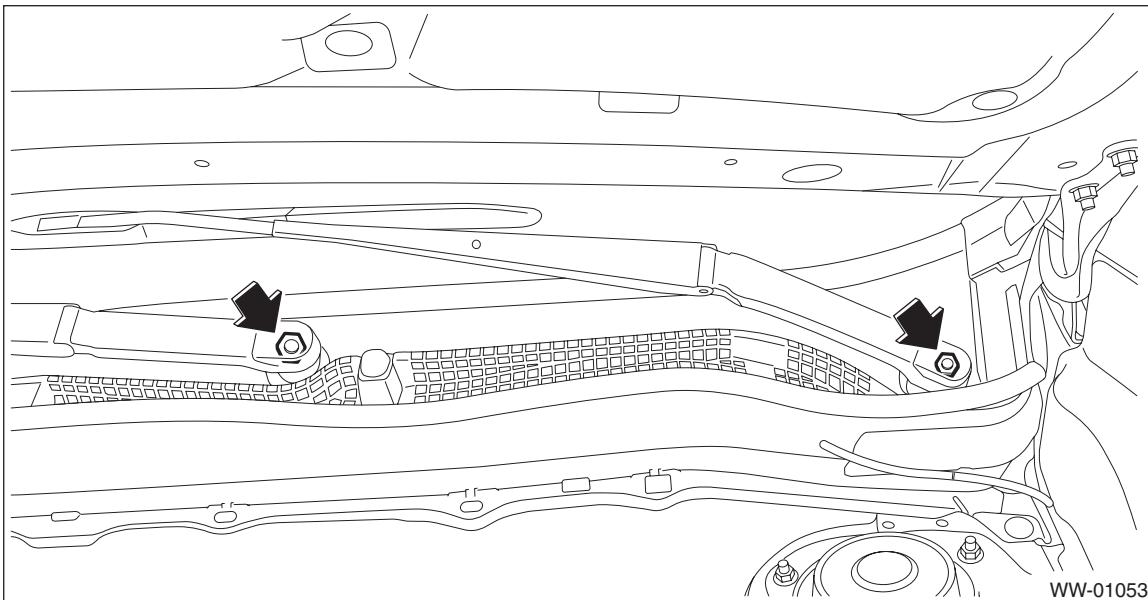

2) Check the position of windshield wiper.<Ref. to WW-28, ADJUSTMENT, Front Wiper Arm.>

C: ADJUSTMENT

- 1) Operate the windshield wiper once.
- 2) Check that the wiper blade is aligned with the point mark.

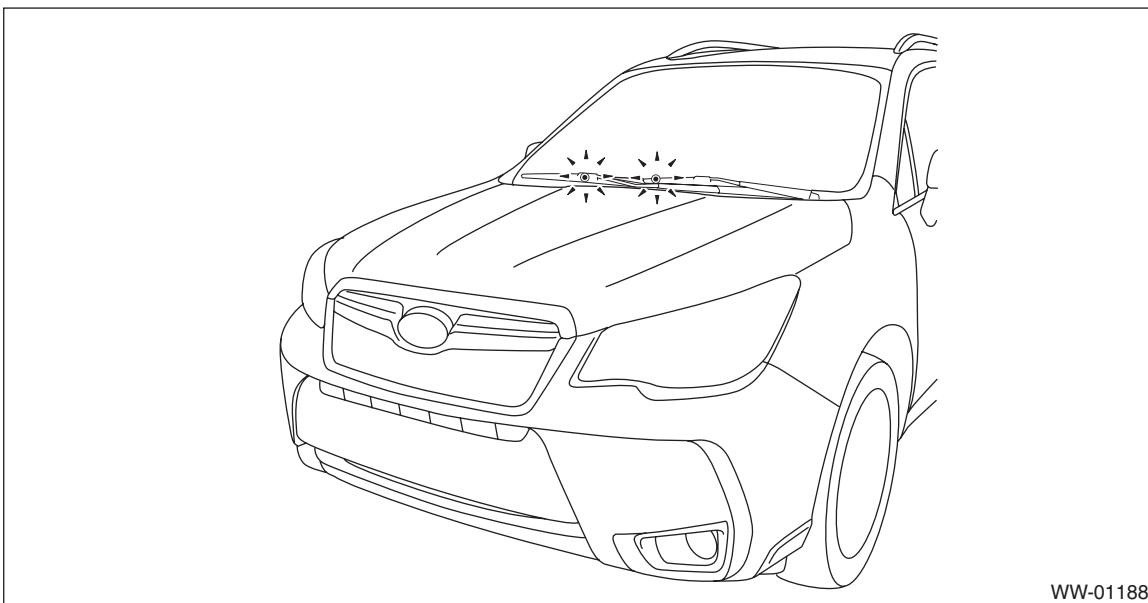

3) If the wiper blade is not aligned with the point mark, perform the removal and installation of the windshield wiper.<Ref. to WW-27, REMOVAL, Front Wiper Arm.>