


## 2. Front Brake Pad

### A: REMOVAL


- 1) Lift up the vehicle, and then remove the front wheels.
- 2) Remove the front brake pad.
  - (1) Remove the caliper bolt on the lower side.
  - (2) Raise the caliper body assembly and support it.

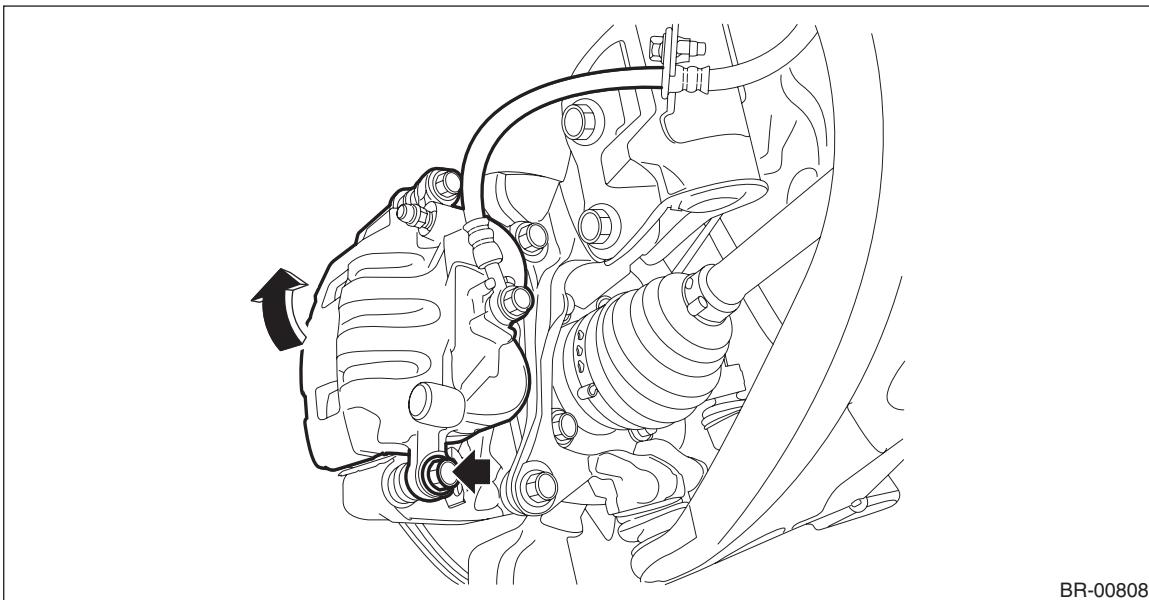

**NOTE:**

Do not disconnect the brake hose from the caliper body assembly.

- (3) Remove the brake pad from support - front disc brake.

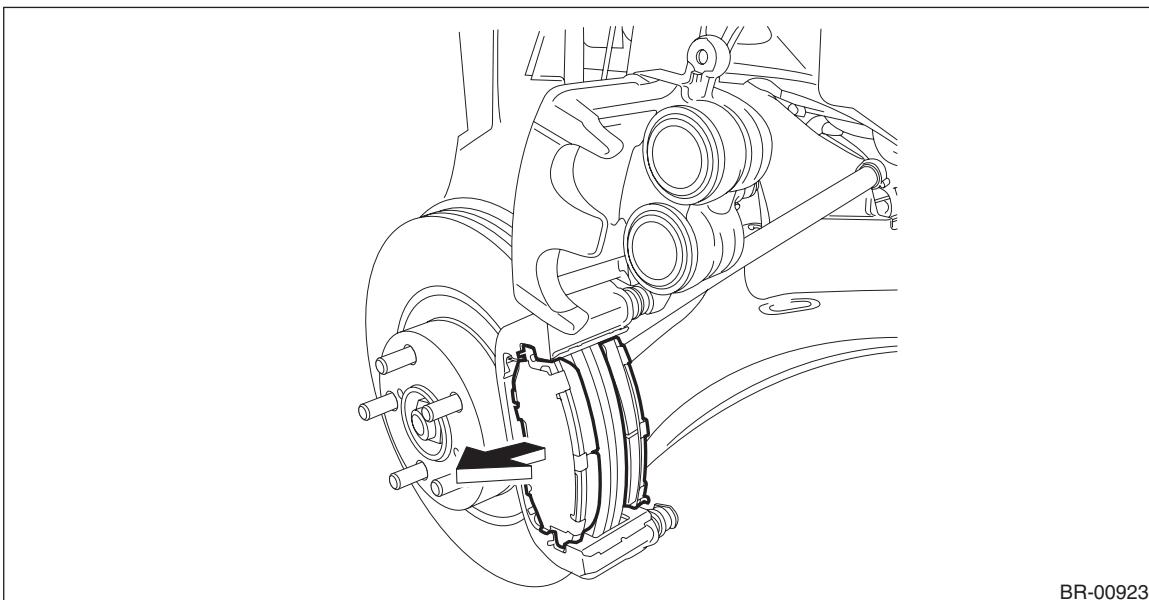

## B: INSTALLATION

**NOTE:**

Before installation, remove mud and foreign matter from the caliper body assembly and support - front disc brake.

- 1) Check the brake pad.<Ref. to BR-18, INSPECTION, Front Brake Pad.>
- 2) Apply a thin coat of grease to the pad clip. (A)

**Grease:**


***Grease contained in the pad kit or equivalent***

- 3) Apply a thin coat of grease to the pad and both sides of the shim - disc brake front inner (a). (B)


**Grease:**

***Molykote AS880N or an item contained in the pad kit***

(A)

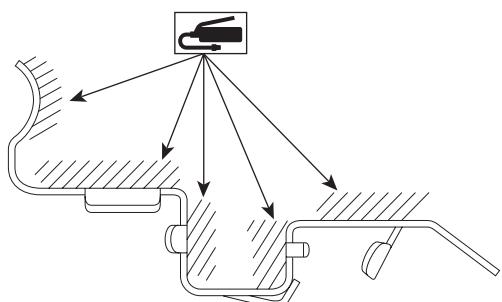

(B)

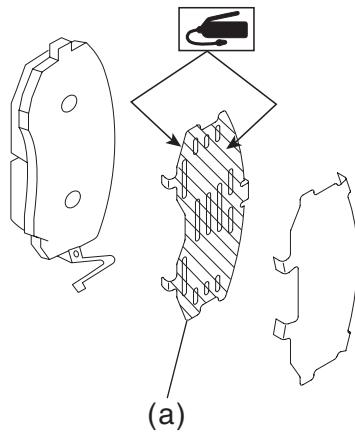


BR-00929

4) Install the brake pad to the support - front disc brake.

**CAUTION:**

- Be sure to install so that the pad return spring faces the input side of the direction of brake rotor rotation, as shown in the figure.
- Correctly install the pad return spring to the supporting surface of the pad clip as shown in the figure.
- If the pad return spring is deformed or damaged, replace the brake pad with a new part.

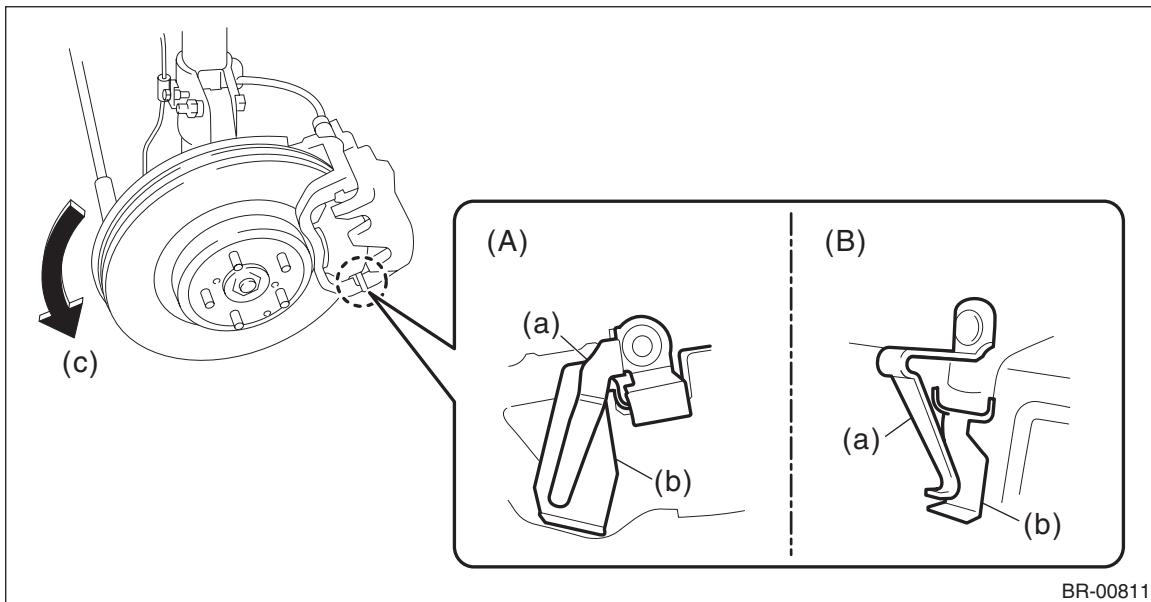

(A) 16-inch

(B) 17-inch


(a) Pad return spring

(b) Supporting surface of pad clip

(c) Direction of brake rotor rotation

**NOTE:**

Install the brake pad indicator in proper direction.

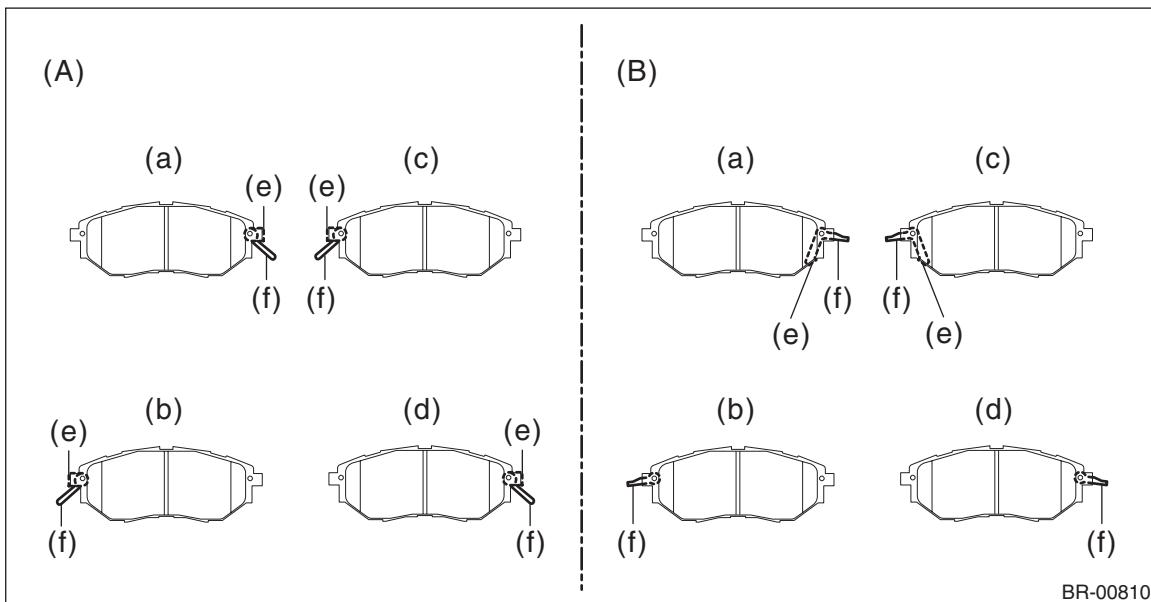

(A) 16-inch

(B) 17-inch

(a) LH — IN

(c) RH — IN

(e) Pad indicator

(b) LH — OUT

(d) RH — OUT

(f) Pad return spring

# Front Brake Pad

## BRAKE

5) Install the caliper body assembly to the support - front disc brake.

### ***Tightening torque:***

***Caliper bolt: 27 N·m (2.75 kgf-m, 19.9 ft-lb)***

6) Install the front wheels.

### ***Tightening torque:***


***120 N·m (12.24 kgf-m, 88.5 ft-lb)***

## **C: INSPECTION**

1) Check the pad thickness (A).

### NOTE:

- Always replace the pads of both wheels and both sides as a set.
- Replace pad clips if they are twisted or worn.
- Replace the pad if there is oil or grease on it.

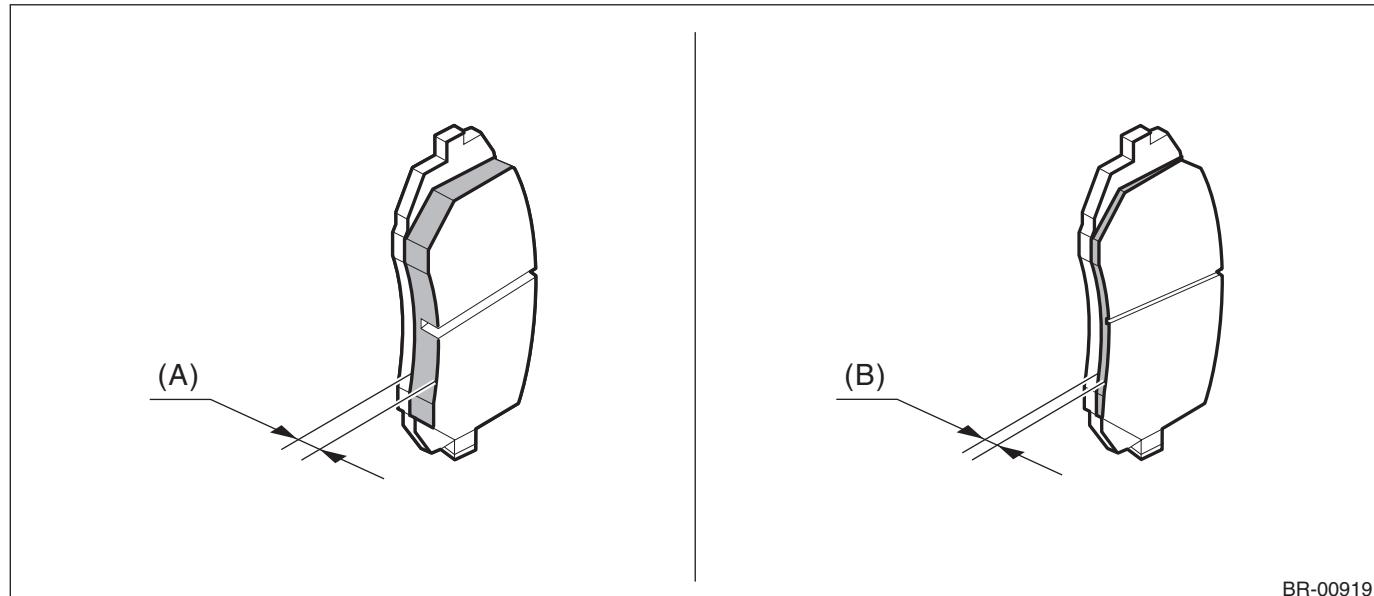

	Standard (A)	Wear limit (B)
Pad thickness	11 mm (0.43 in)	1.5 mm (0.059 in)

### NOTE:

- Always replace the pads of both wheels and both sides as a set.

- Replace pad clips if they are twisted or worn.

- Wear indicators are installed on the inner and outer disc brake pads.

If the pad is worn to the limit, the end of wear indicator contacts disc rotor, and a squeaking sound is heard as the wheel rotates. If the sound is heard, replace the pad.

- Replace the pad if there is oil or grease on it.

2) If the wear limit is exceeded in the inspection, replace the brake pad.