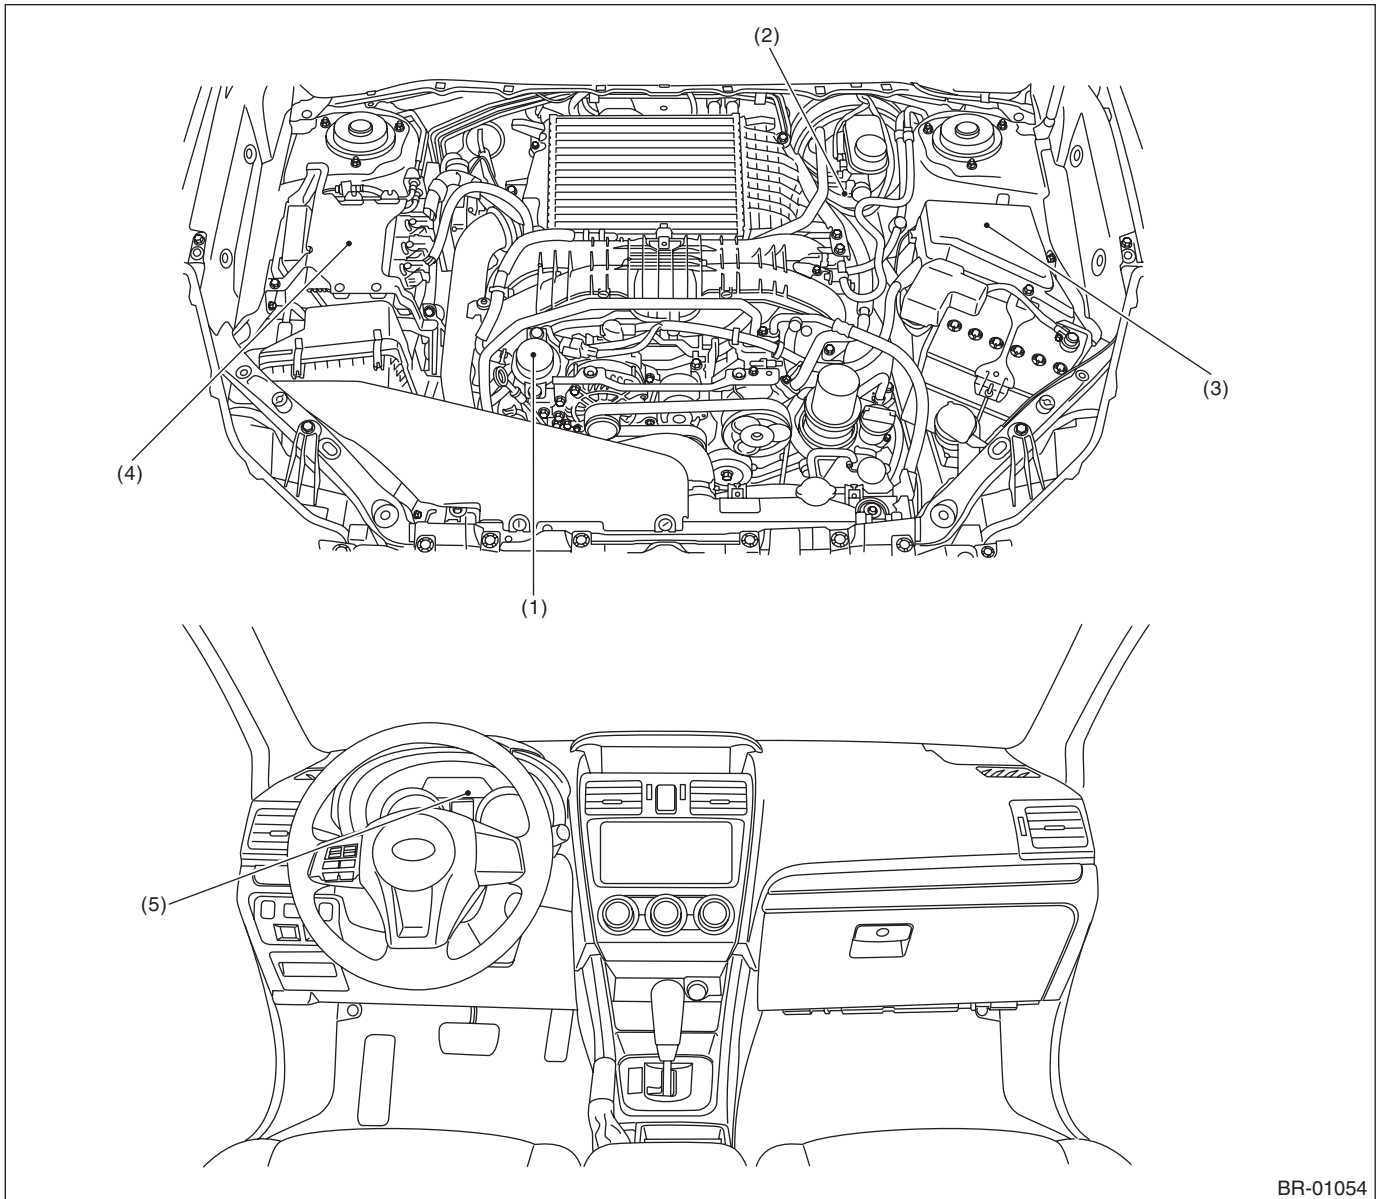


# Electrical Component Location

## BRAKE VACUUM CONTROL (BVC) (DIAGNOSTICS)

### 4. Electrical Component Location

#### A: LOCATION

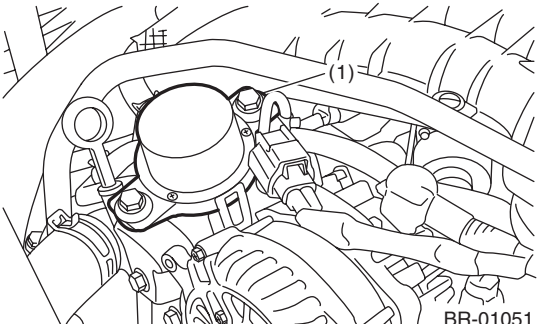
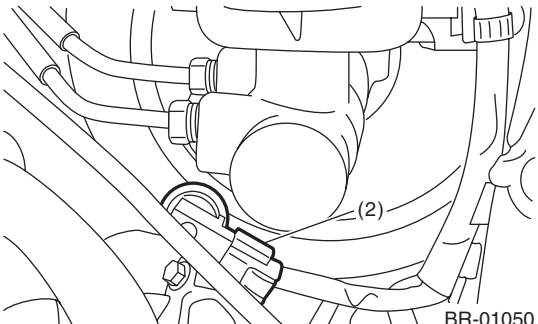
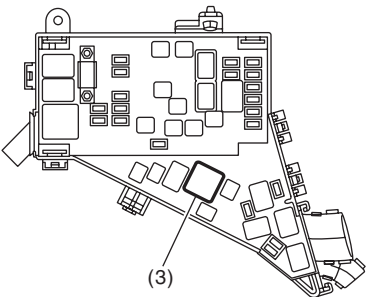
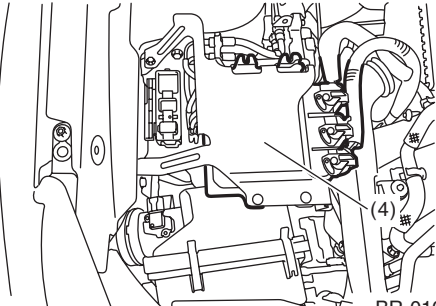
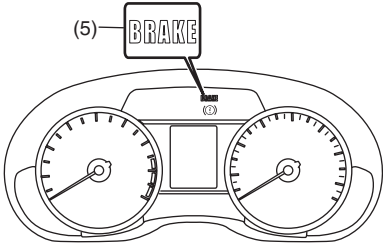


BR-01054

- |                                   |                                 |                                     |
|-----------------------------------|---------------------------------|-------------------------------------|
| (1) Brake vacuum pump             | (3) Brake vacuum pump relay     | (5) Brake vacuum pump warning light |
| (2) Brake booster pressure sensor | (4) Engine control module (ECM) |                                     |

Electrical Component Location

BRAKE VACUUM CONTROL (BVC) (DIAGNOSTICS)

 <p>BR-01051</p>	 <p>BR-01050</p>
 <p>BR-01052</p>	 <p>BR-01072</p>
 <p>BR-01090</p>	