

Clear Memory Mode

BRAKE VACUUM CONTROL (BVC) (DIAGNOSTICS)

9. Clear Memory Mode

A: OPERATION

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.