

## DIFFERENTIALS

### 7. Rear Differential Side Oil Seal


#### A: INSPECTION

Check that there is no oil leakage from the side oil seal. If there is any leakage, replace the oil seal.

#### B: REPLACEMENT

- 1) Remove the rear differential. <Ref. to DI-22, REMOVAL, Rear Differential (T-type).> <Ref. to DI-41, REMOVAL, Rear Differential (VA-type).>
- 2) Remove the rear differential side oil seal using a ST or screwdriver wrapped with vinyl tape to prevent the side retainer from scratching.

ST 398527700 PULLER ASSY

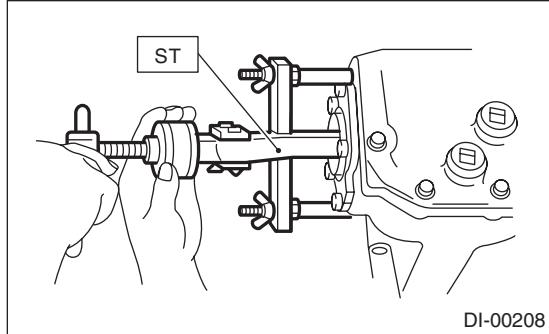

- 3) Using the ST, install the oil seal.


#### CAUTION:

**Pay attention to the left and right of the oil seal.**


#### NOTE:

- Use a new oil seal.
- Apply differential gear oil to the oil seal lips.
- T-type

ST 398437700 DRIFT

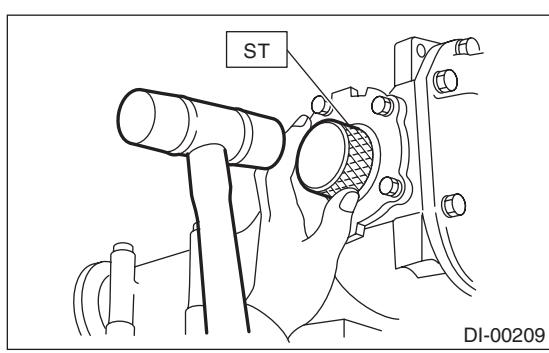

- VA1-type  
ST 498447100 INSTALLER

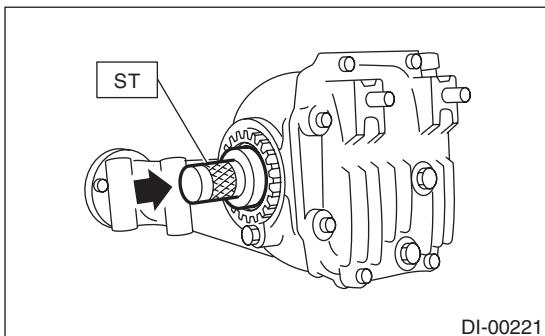

- 4) Install the rear differential. <Ref. to DI-24, INSTALLATION, Rear Differential (T-type).> <Ref. to DI-41, INSTALLATION, Rear Differential (VA-type).>