


## 4. Front Crossmember Support Plate


### A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the bolts and clips, and remove the under cover - front.

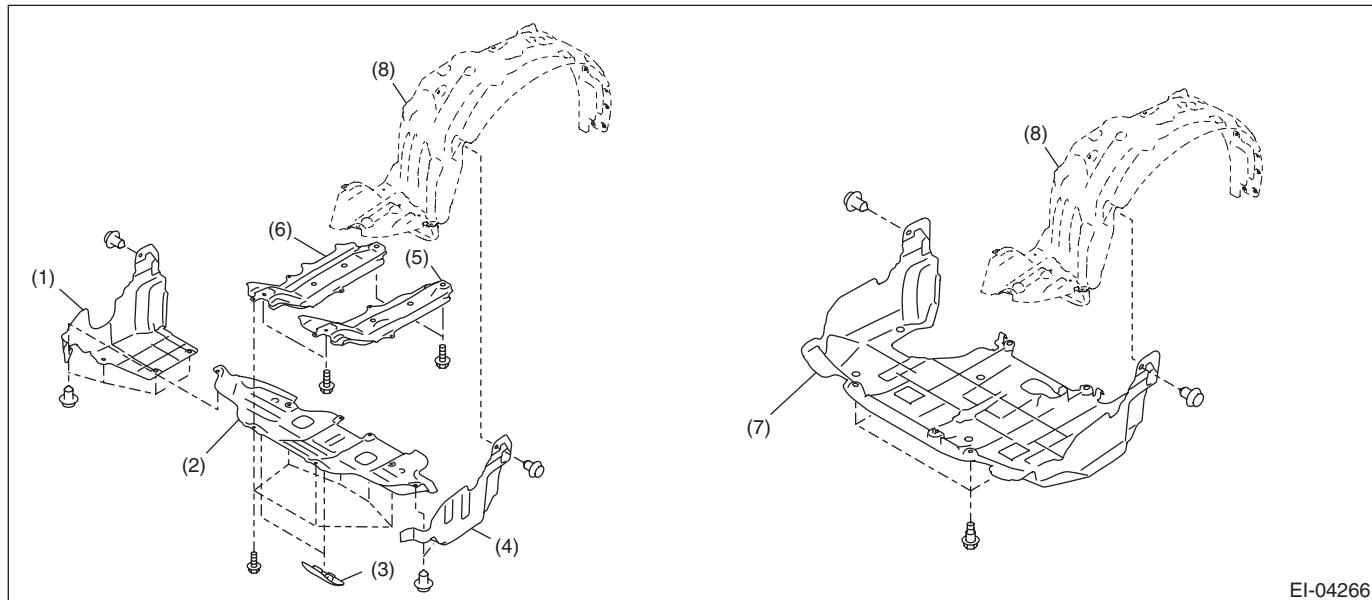

(1) Under cover COMPL - front RH (turbo model)	(4) Under cover COMPL - front LH (turbo model)	(7) Under cover - front (non-turbo model)
(2) Plate CTR - aluminum (turbo model)	(5) Under cover - front guard LH (turbo model)	(8) Mud guard - front
(3) Cover - plate (turbo model)	(6) Under cover - front guard RH (turbo model)	

- 3) Remove the bolt, and remove the front crossmember support.

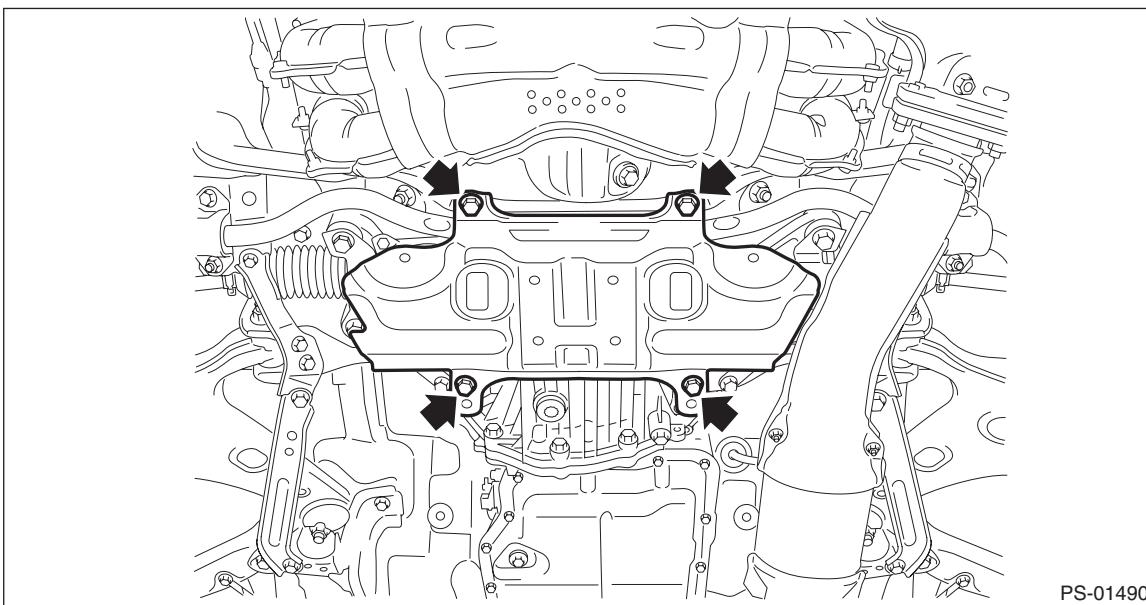

# Front Crossmember Support Plate

## FRONT SUSPENSION

---

### B: INSTALLATION

Install each part in the reverse order of removal.

#### *Tightening torque:*

*Front crossmember support — front crossmember assembly: 60 N·m (6.12 kgf-m, 44.3 ft-lb)*

*Under cover - front:<Ref. to EI-2, FRONT UNDER COVER, COMPONENT, General Description.>*