

Read Diagnostic Trouble Code (DTC)

POWER ASSISTED SYSTEM (POWER STEERING) (DIAGNOSTICS)

7. Read Diagnostic Trouble Code (DTC)

A: OPERATION

- For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.
- For details concerning DTC, refer to “List of Diagnostic Trouble Code (DTC)”. <Ref. to PS(diag)-21, List of Diagnostic Trouble Code (DTC).>