

Basic Diagnostic Procedure

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

CAUTION:

Remove foreign matter (dust, water, oil, etc.) from the TPMS & keyless entry CM connector or TPMS CM connector during removal and installation.

NOTE:

To check harness for open or short circuits, shake the suspected trouble spot or connector.

| Step | Check | Yes | No |
|--|---|-----------------------|---|
| 1 CHECK PRE-INSPECTION. 1) Check with the user regarding when the warning light lit or started blinking. 2) Before performing diagnostics, check all components which may adversely affect the tire pressure monitor system.<Ref. to TPM(diag)-4, INSPECTION, General Description.> | Is the component that might affect the tire pressure monitor system normal? | Go to step 2. | Repair or replace each component. |
| 2 CHECK DIAGNOSTIC TROUBLE CODE (DTC). 1) Turn the ignition switch to OFF. 2) Connect the Subaru Select Monitor to data link connector. 3) Turn the ignition switch to ON and run the Subaru Select Monitor. NOTE: If the communication function of the Subaru Select Monitor cannot be executed normally, check the communication circuit.<Ref. to TPM(diag)-8, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, INSPECTION, Subaru Select Monitor.> 4) Read the DTC.<Ref. to TPM(diag)-11, OPERATION, Read Diagnostic Trouble Code (DTC).> | Is DTC displayed? | Go to step 4. | Go to step 3. |
| 3 PERFORM GENERAL DIAGNOSTICS. 1) Perform the inspection by referring to "General Diagnostic Table".<Ref. to TPM(diag)-34, General Diagnostic Table.> 2) Perform the Clear Memory Mode.<Ref. to TPM(diag)-12, OPERATION, Clear Memory Mode.> 3) Perform the Inspection Mode.<Ref. to TPM(diag)-16, Inspection Mode.> 4) Read the DTC.<Ref. to TPM(diag)-11, OPERATION, Read Diagnostic Trouble Code (DTC).> Check the DTC is not displayed. | Does the tire pressure warning light illuminates for about 2 seconds and then goes off after turning on the ignition switch, and then goes out? | Finish the diagnosis. | Check the tire inflation pressure warning light.<Ref. to TPM(diag)-17, Tire Pressure Warning Light / Trouble Indicator Light Illumination Pattern.> |

Basic Diagnostic Procedure

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

| Step | Check | Yes | No |
|---|--------------------------------------|---|--|
| 4 REPRODUCTION OF FAILURE. 1) Perform the drive test. Drive the vehicle at 40 km/h (25 MPH) or faster for at least 10 minutes. 2) Read the DTC.<Ref. to TPM(diag)-11, OPERATION, Read Diagnostic Trouble Code (DTC).> | Is DTC displayed as "Present fault"? | Go to step 5. | When DTC is displayed as "Past faults", the system has returned to a normal condition at this time. Reproduce the failure, and then perform the diagnosis again. NOTE: In this case, there may be temporary poor communication due to radio wave environment inside/outside the vehicle. |
| 5 PERFORM DIAGNOSIS. 1) Refer to "List of Diagnostic Trouble Code (DTC)". 2) Correct the cause of trouble. 3) Perform the Clear Memory Mode.<Ref. to TPM(diag)-12, OPERATION, Clear Memory Mode.> 4) Perform the drive test. Drive the vehicle at 40 km/h (25 MPH) or faster for at least 10 minutes. 5) Read the DTC.<Ref. to TPM(diag)-11, OPERATION, Read Diagnostic Trouble Code (DTC).> | Is DTC displayed? | Repeat steps 1 to 4 until DTC is not shown. | Finish the diagnosis. |