

General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

15.General Diagnostic Table

A: INSPECTION

Symptoms		Faulty parts
Tire pressure warning light illuminates.	Tire pressure is reduced.	• Improper tire pressure adjustment • Punctured tire
Tire pressure warning light blinks 25 times and then illuminates.	Tire pressure monitoring system has malfunction.	• Air pressure sensor malfunction • Air pressure sensor is out of battery. • Defective TPMS CM or TPMS & keyless entry CM • Defective vehicle harness • Defective combination meter
Tire pressure is dropping but the warning light does not illuminate.	Tire pressure warning light does not illuminate.	• Air pressure sensor malfunction • Defective TPMS CM or TPMS & keyless entry CM • Defective combination meter

DIFFERENTIALS

DI

	Page
1. General Description	2
2. Differential Gear Oil	19
3. Front Differential Assembly	21
4. Rear Differential (T-type)	22
5. Rear Differential (VA-type)	41
6. Rear Differential Front Oil Seal	56
7. Rear Differential Side Oil Seal	58
8. Rear Differential Front Member	59
9. Rear Differential Mount Bushing	60
10. Rear Differential Inspection Mode	64
11. General Diagnostic Table	66