

## 5. Oil Seal

### A: NOTE

For removal, installation and inspection, refer to “CVT (TR580)”, “CVT (TR690)” or “6MT” section.

CVT (TR580) model:

<Ref. to CVT(TR580)-83, Extension Case Oil Seal.>

CVT (TR690) model:

<Ref. to CVT(TR690)-87, Extension Case Oil Seal.>

6MT model:

<Ref. to 6MT-36, Oil Seal.>