


## 11. Reservoir Tank

### A: REMOVAL

- 1) Disconnect the over flow hose (A) connected to the radiator filler neck from the reservoir tank.
- 2) Pull out the reservoir tank to the arrow direction while pushing the claw (B).

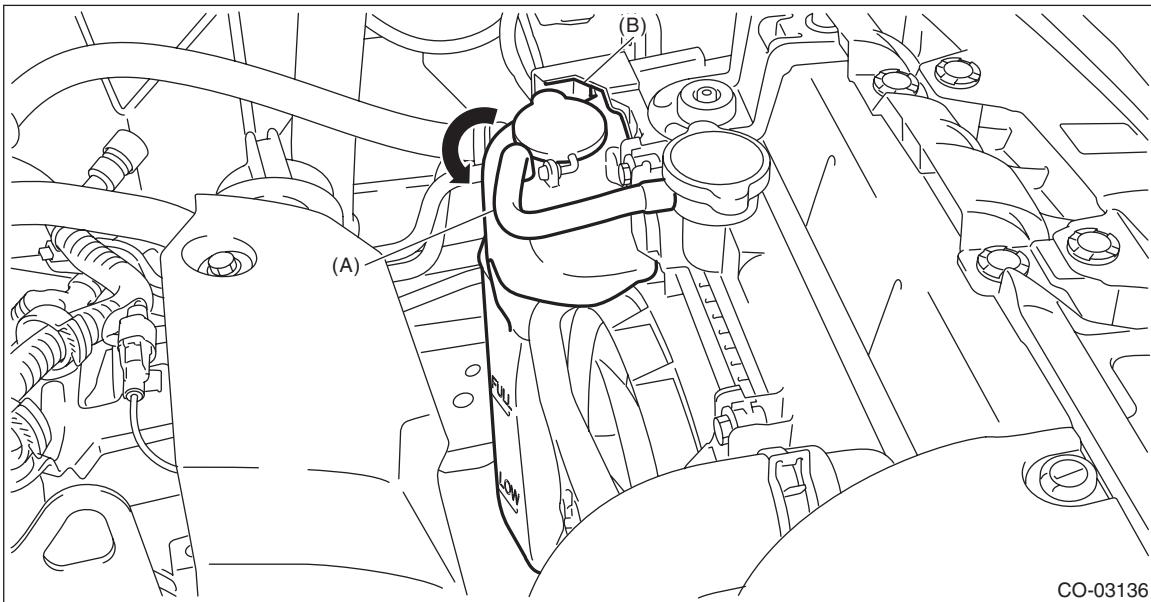

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Check that the reservoir tank does not have deformation, cracks or damage.
- 2) Make sure the over flow hoses are not cracked, damaged or loose.
- 3) Make sure the engine coolant level is between "FULL" and "LOW".

