


EGR Control Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


6. EGR Control Valve

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the clip (A) from the air intake boot.
- 3) Loosen the clamp (B) securing the air cleaner case (rear) to the air intake boot.
- 4) Loosen the clamp (C) which secures the throttle body to the air intake boot.

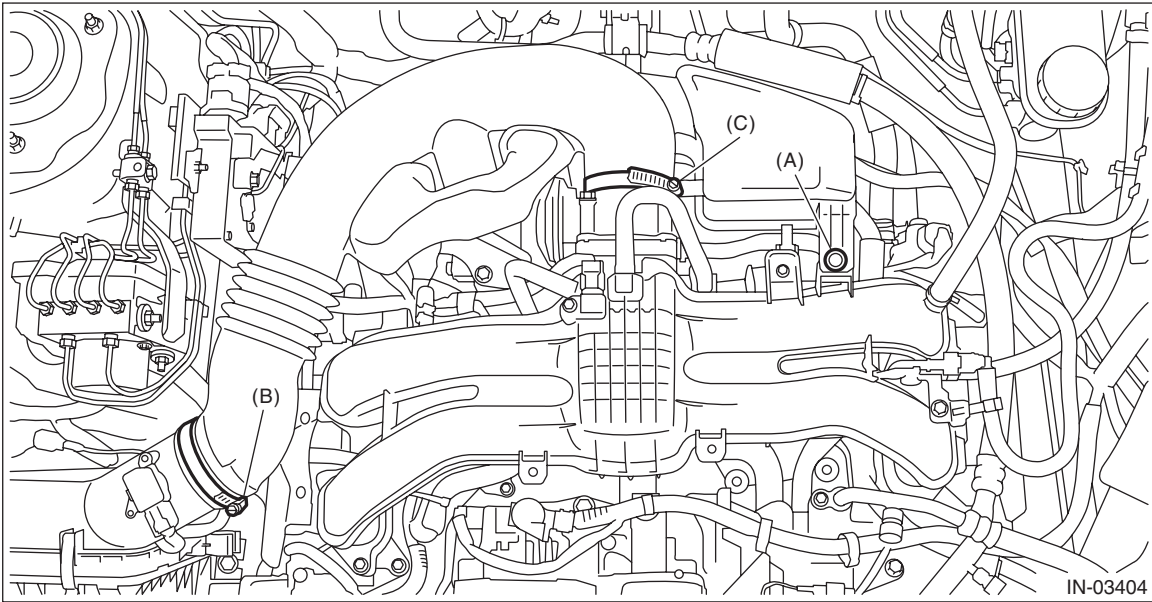


- 5) Remove the air intake boot from the throttle body, and move it to the left side wheel apron.

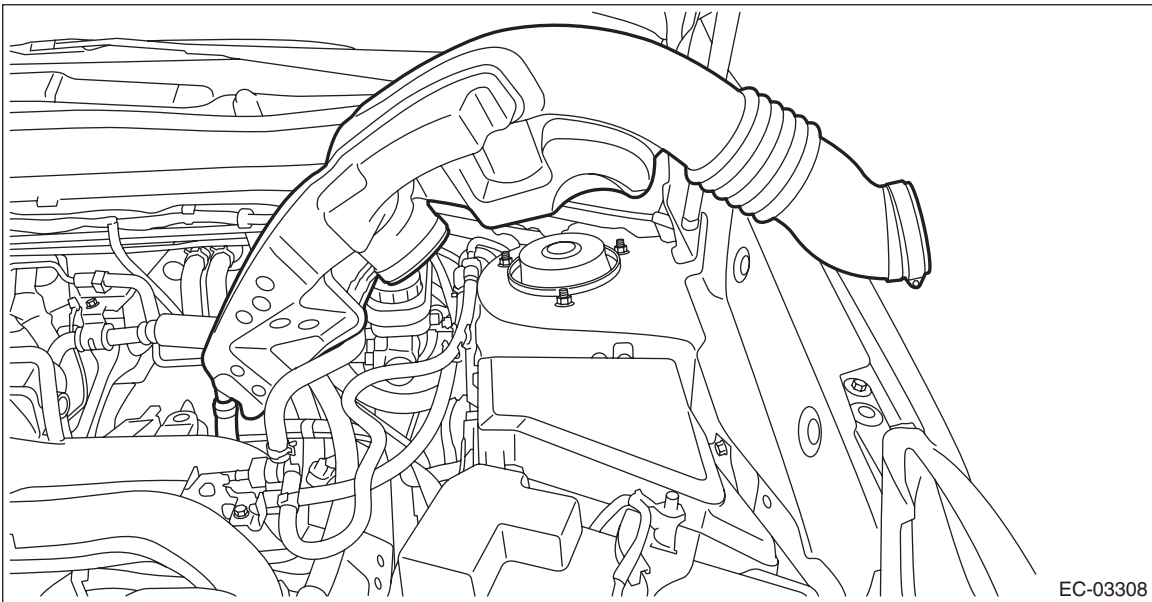


EGR Control Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

6) Disconnect the connector from the EGR control valve.

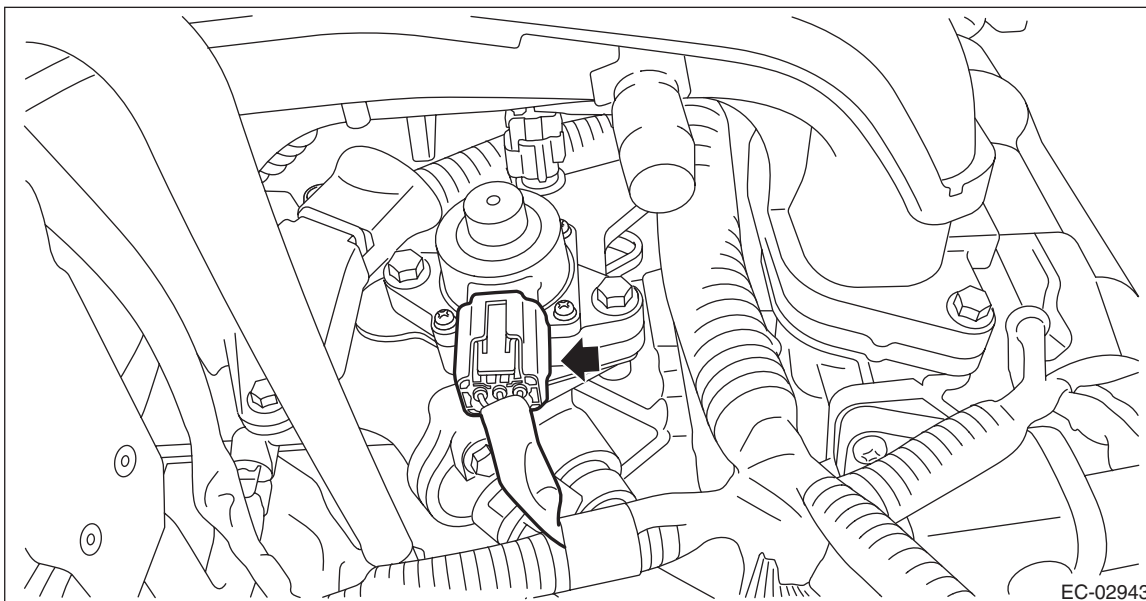

7) Remove the EGR control valve from the water pipe assembly.

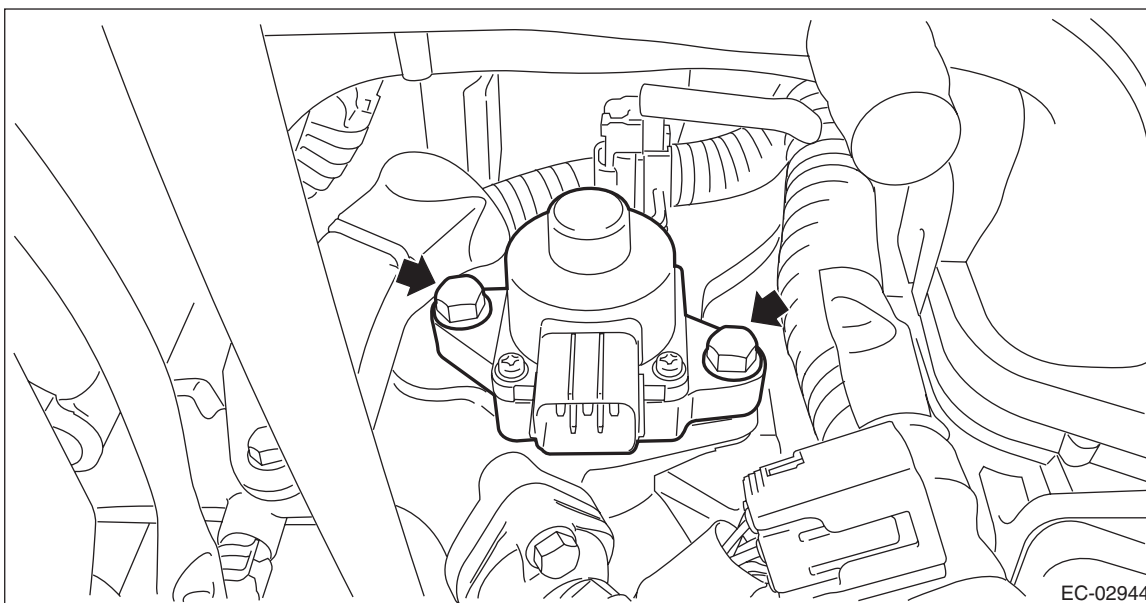

EGR Control Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

Use new O-rings and gaskets.


Tightening torque:

22 N·m (2.2 kgf-m, 16.2 ft-lb)

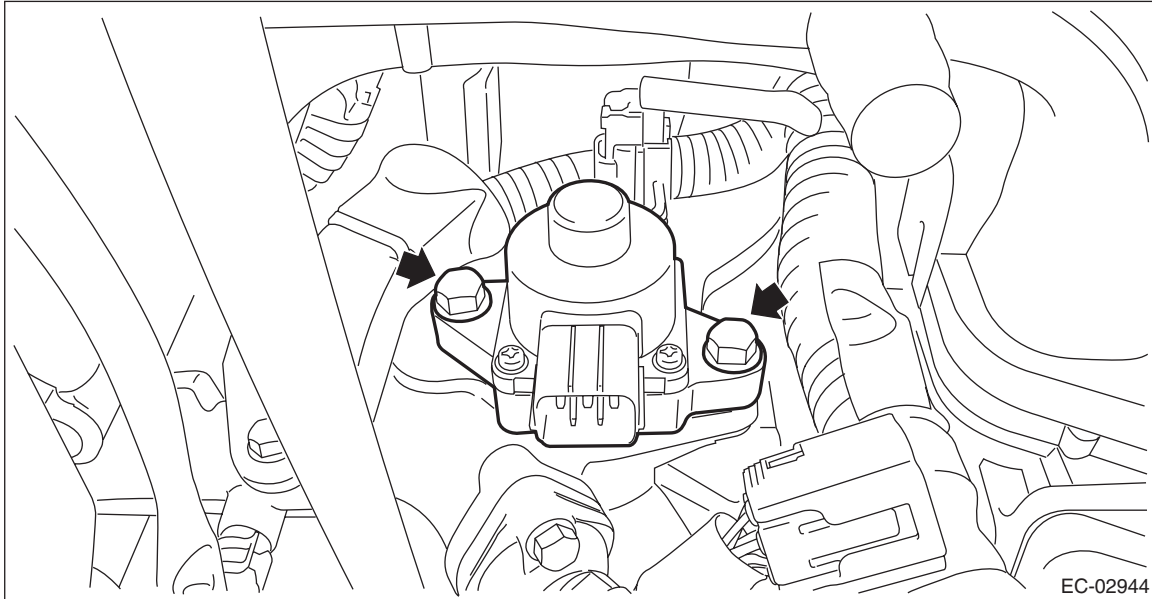

Tightening torque:

3 N·m (0.3 kgf-m, 2.2 ft-lb)

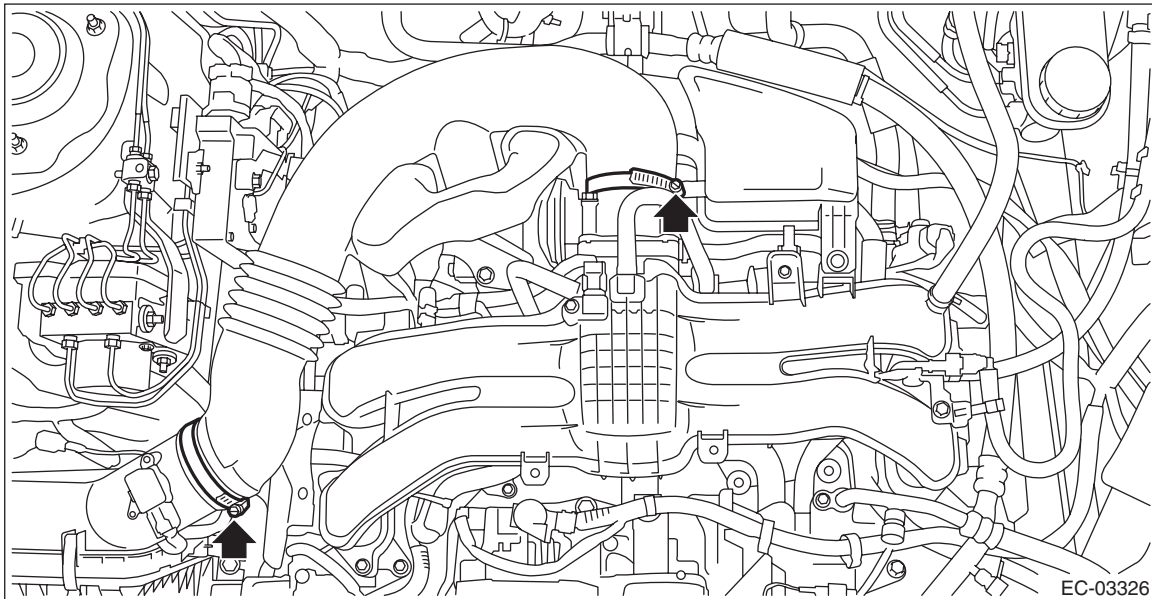


EGR Control Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

C: INSPECTION

- 1) Check that the EGR control valve has no deformation, cracks or other damages.
- 2) Measure the resistance between EGR control valve terminals.

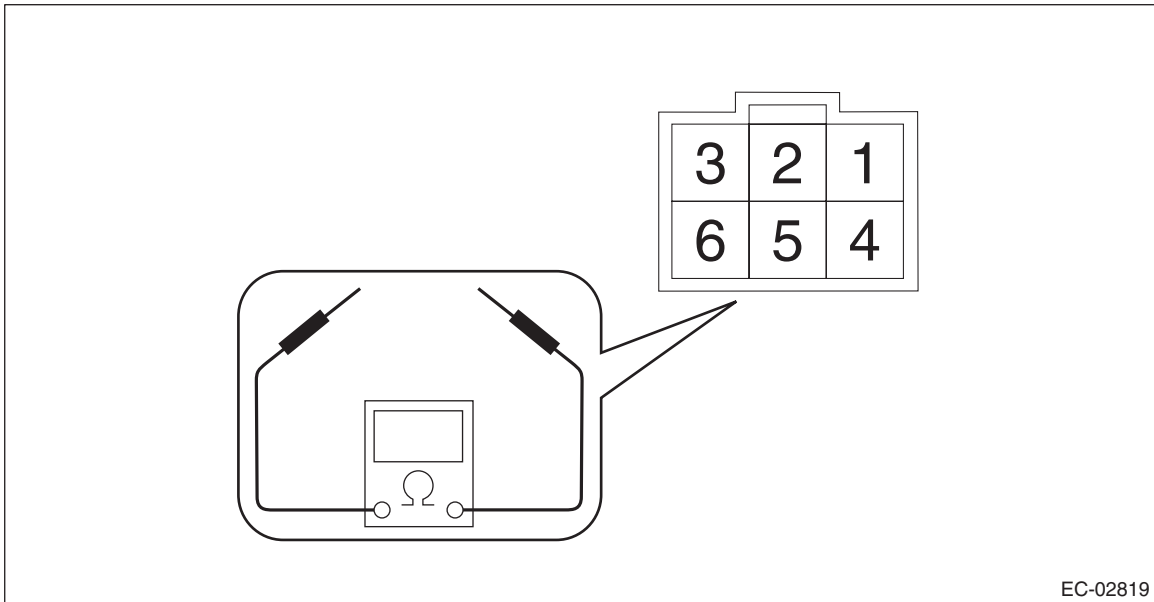

Terminal No.	Standard
2 and 1	22±2 Ω
2 and 3	22±2 Ω
5 and 4	22±2 Ω
5 and 6	22±2 Ω