

14. System Operation Check Mode

A: OPERATION

CAUTION:

After executing the system operation check mode, execute the Clear Memory Mode <Ref. to EN(H4DO)(diag)-58, OPERATION, Clear Memory Mode.>.

1. ENGINE

NOTE:

For detailed operation procedures, refer to "PC application help for Subaru Select Monitor".

Item	SSM display		Execution condition	
Activating the actuator ON/OFF	Activating the fuel pump ON/OFF	Fuel Pump	ON \longleftrightarrow OFF	
	Activating the purge control solenoid valve ON/OFF	CPC Solenoid Valve	ON \longleftrightarrow OFF	
	Activating the radiator fan relay ON/OFF	Radiator Fan Relay	ON \longleftrightarrow OFF	
	Activating the A/C relay ON/OFF	A/C Relay	ON \longleftrightarrow OFF	
	Activating the ELCM switching valve	ELCM switching valve	ON \longleftrightarrow OFF	
	Activating the ELCM vacuum pump	ELCM pump	ON \longleftrightarrow OFF	
Fuel pump control	Fuel pump OFF operation	OFF drive	OFF	At idling
Fixing the timing of idle ignition		Fixed Idle Ignition Timing	16.0°	At idling
Idle speed control		Idle Speed Control	500 — 2000 rpm	At idling
Injector control	Stopping fuel injection (Cylinder selection)	Injection Stop Mode	Injector 1 Injector 2 Injector 3 Injector 4	At idling
	Fuel injection amount control (All cylinders)	Injection Quantity Control	0 — 20%	At idling
EGR control valve control		EGR Valve Control	0 — 255 STEP	At idling
Alternator control		Alternator control	Low mode Middle mode High mode ExHigh mode	At idling