



15. Fuel Injector

A: REMOVAL

- 1) Release the fuel pressure.<Ref. to FU(H4DO)-103, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 2) Disconnect the ground cable from battery.
- 3) Open the fuel filler lid and remove the fuel filler cap.
- 4) Remove the clip (A) from the air intake boot. (RH side only)
- 5) Loosen the clamp (B) securing the air cleaner case (rear) to the air intake boot. (RH side only)
- 6) Loosen the clamp (C) which secures the throttle body to the air intake boot. (RH side only)

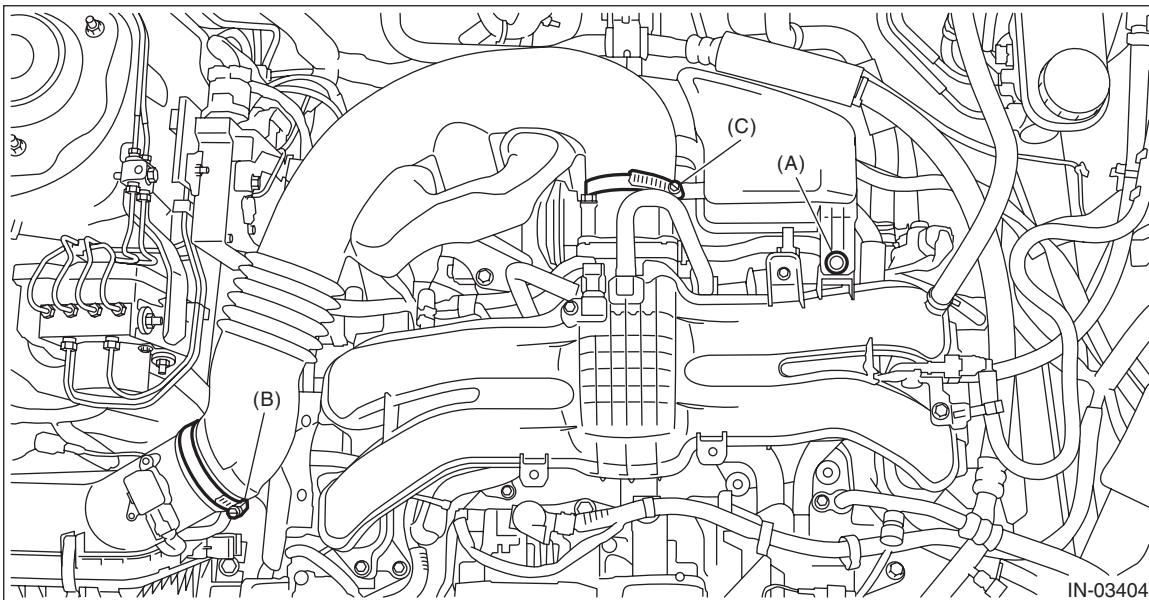


- 7) Remove the air intake boot from the throttle body, and move it to the left side wheel apron. (RH side only)

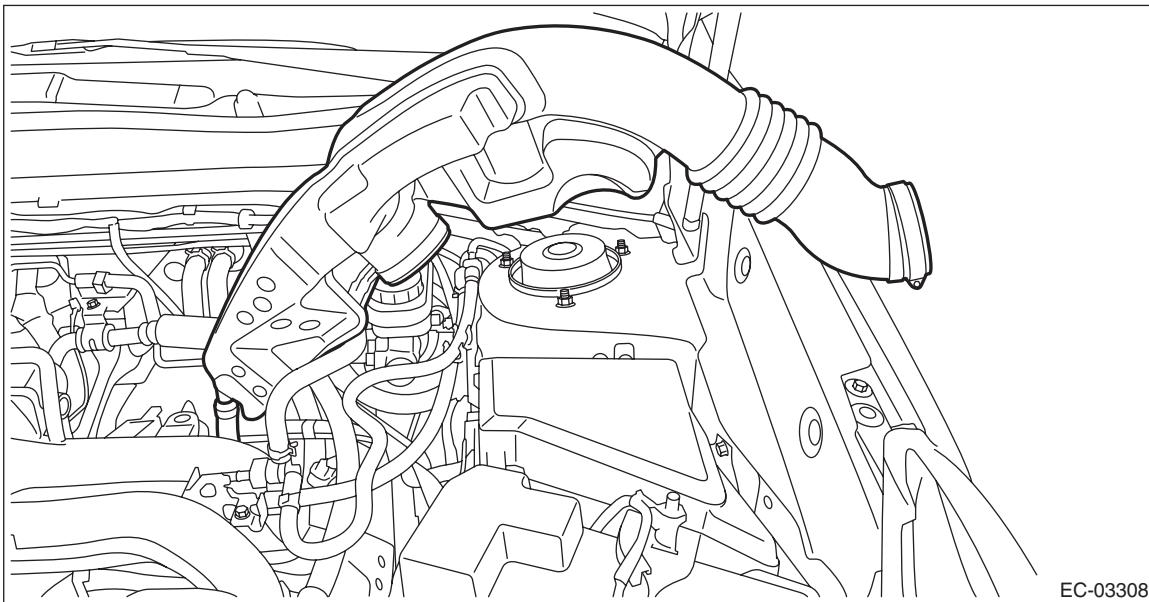


Fuel Injector

FUEL INJECTION (FUEL SYSTEMS)

8) Disconnect the connector (A) from the mass air flow and intake air temperature sensor, and remove the clip (B) which holds the mass air flow and intake air temperature sensor harness. (RH side only)

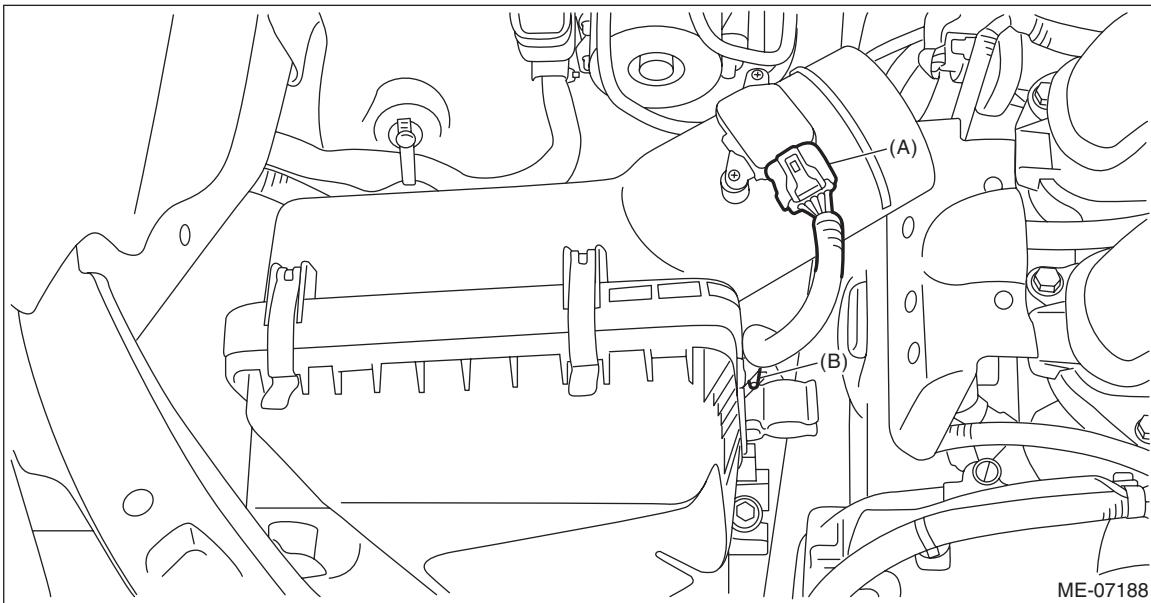

9) Remove the air cleaner case (rear). (RH side only)

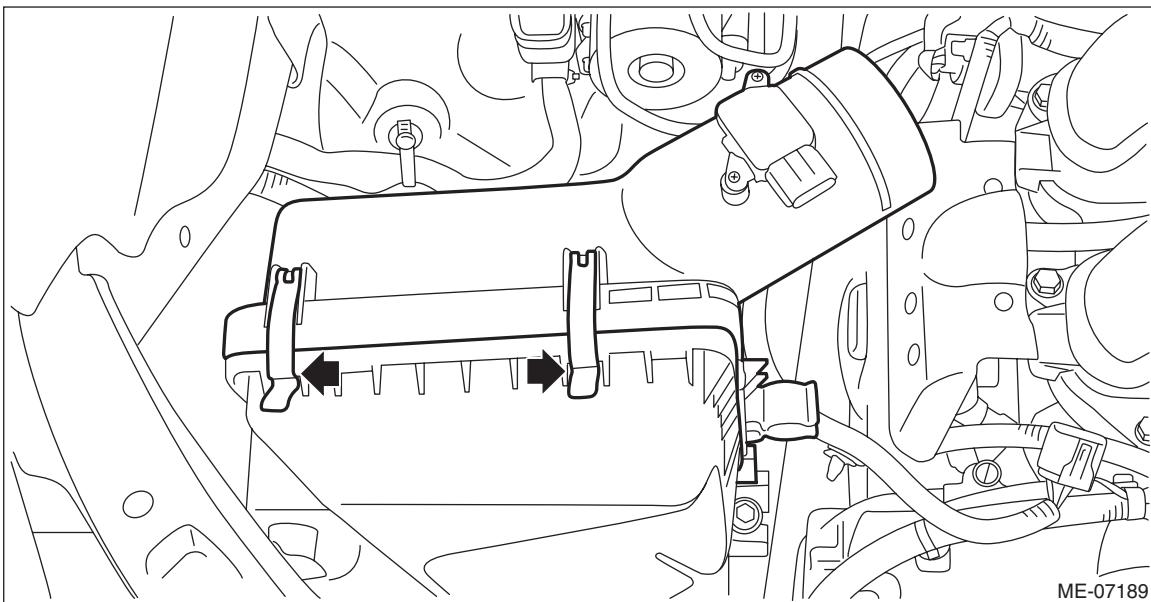


Fuel Injector


FUEL INJECTION (FUEL SYSTEMS)

10) Remove the intake manifold protector.

- RH side

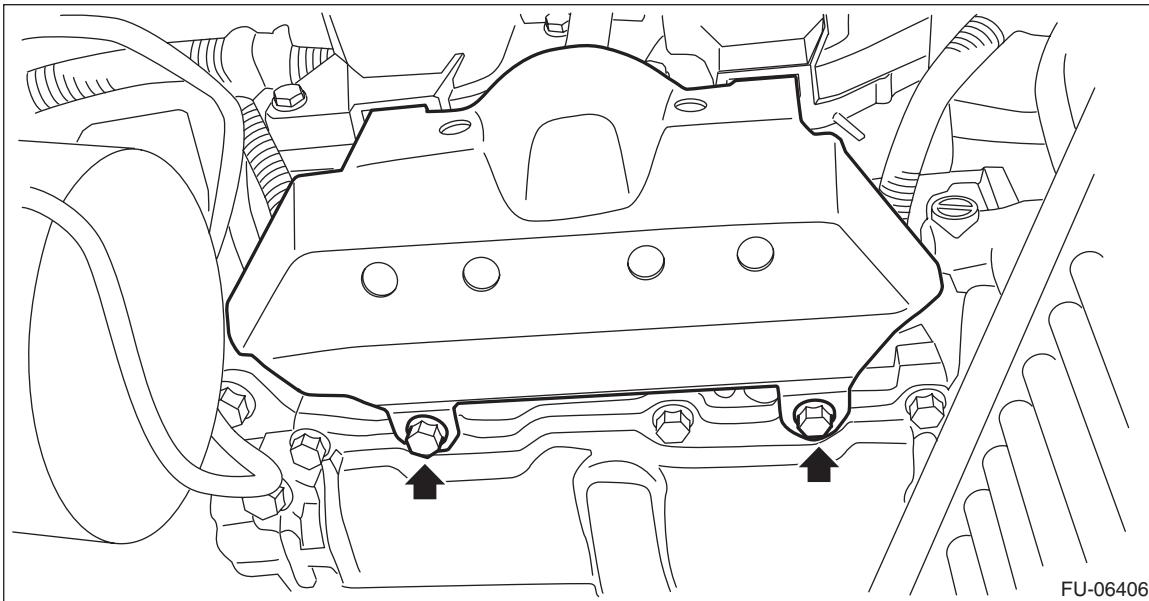


- LH side

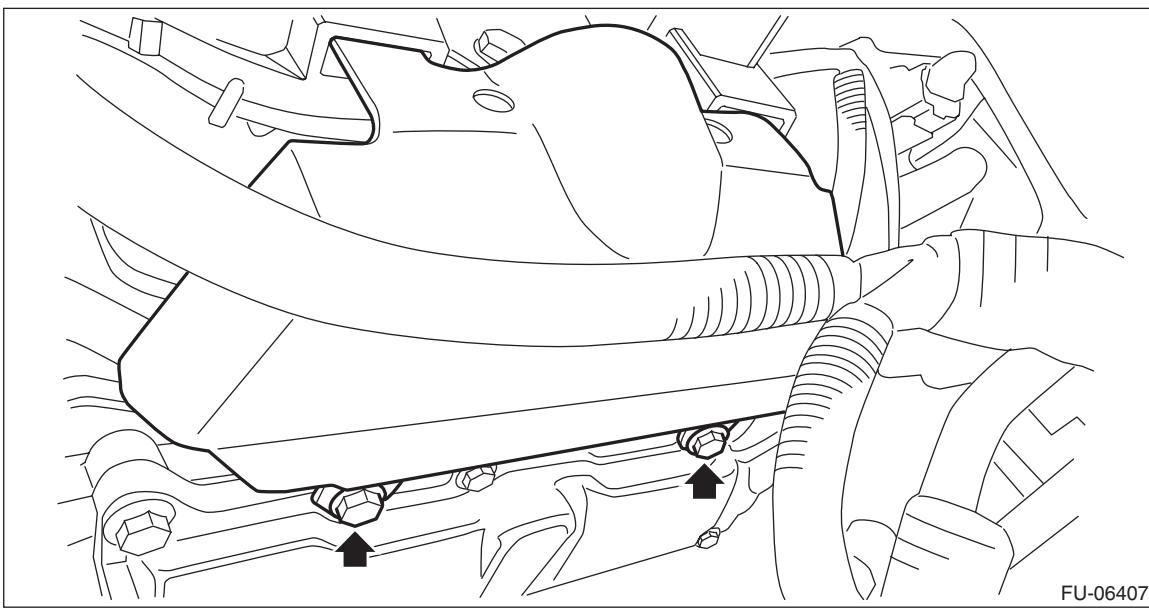

Fuel Injector

FUEL INJECTION (FUEL SYSTEMS)

- 11) Disconnect the connectors (A) from fuel injector.
- 12) Remove the bolts which hold fuel pipe onto the cam carrier.

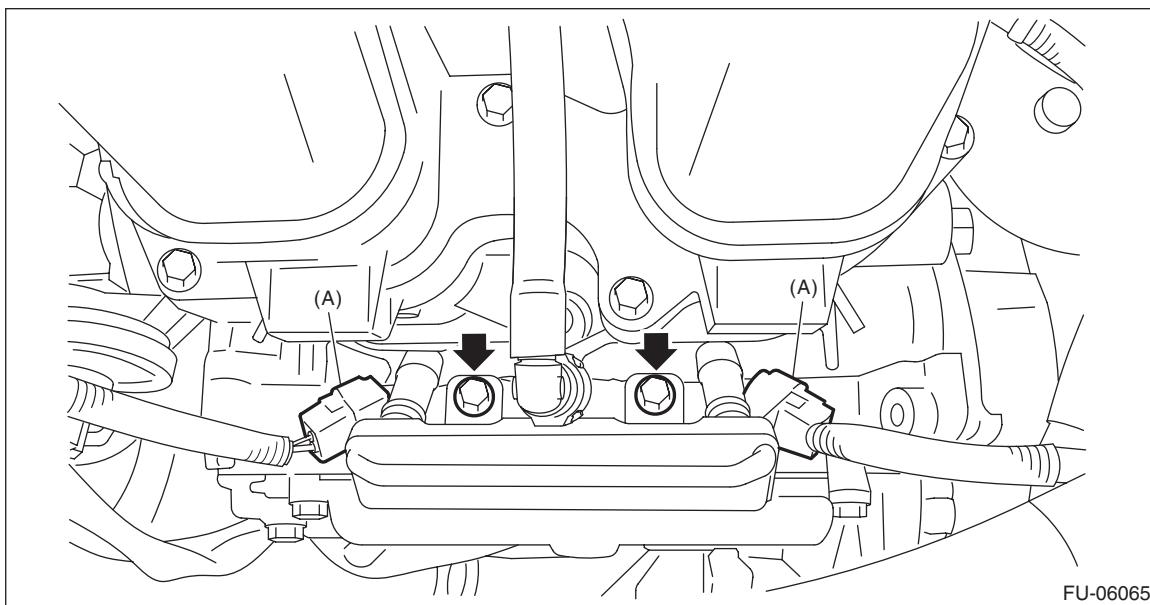


- 13) Disconnect the quick connector (B) of the fuel delivery pipe from the fuel pipe.

CAUTION:

- Be careful not to spill fuel.
- Catch the fuel from the pipes using a container or cloth.

NOTE:


Disconnect the quick connector as shown in the figure.

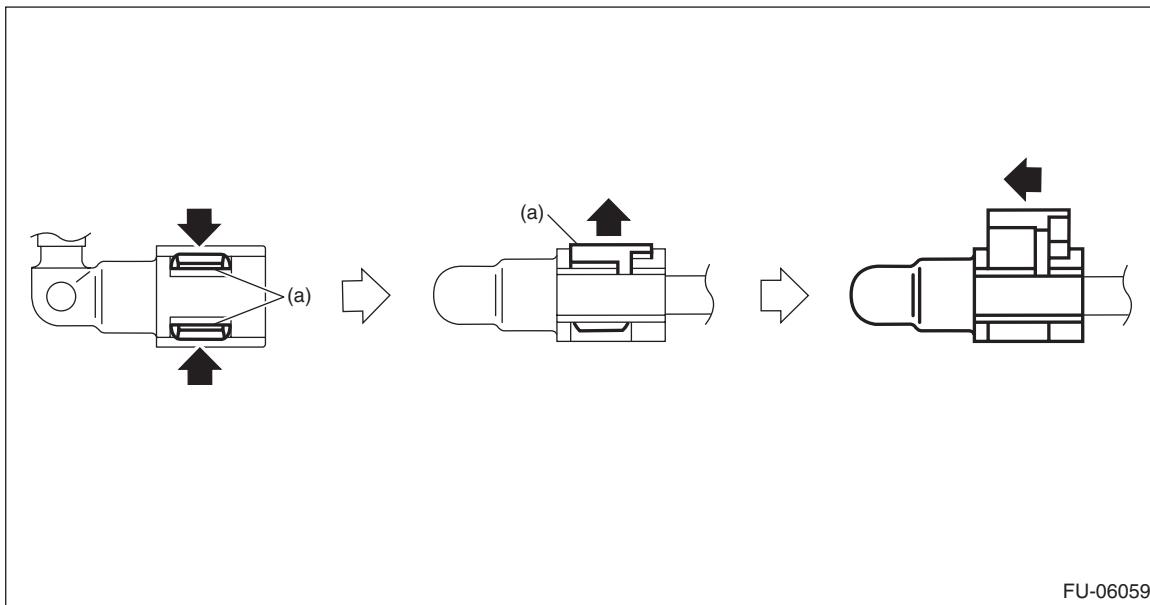

(a) Slider

Fuel Injector

FUEL INJECTION (FUEL SYSTEMS)

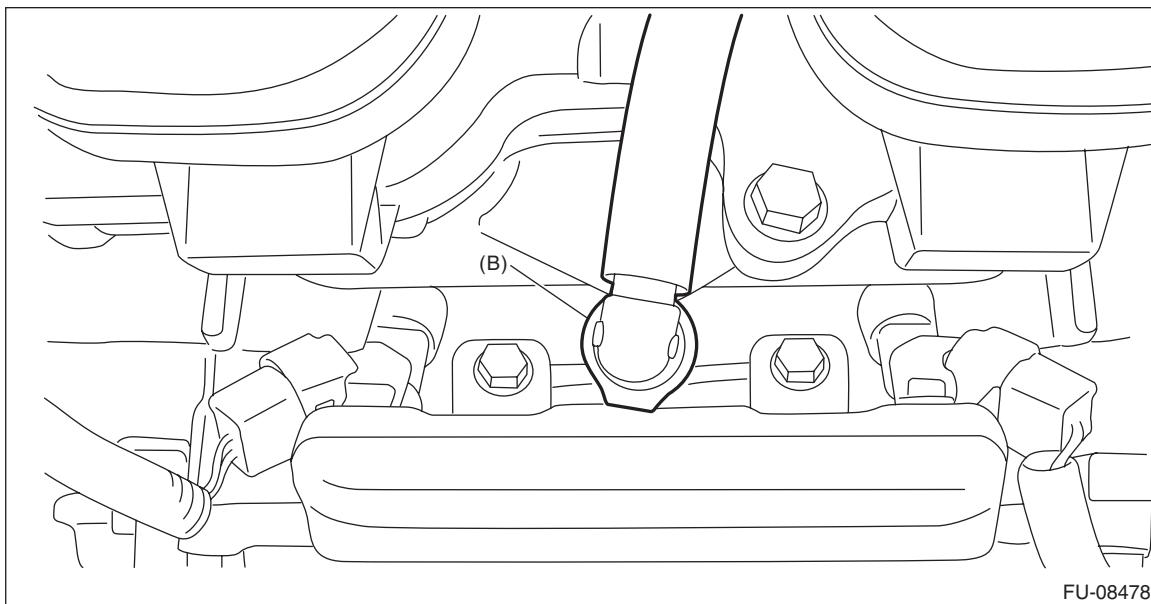


14) Remove the fuel pipe together with the fuel injector.

15) Remove the fuel injector from the fuel pipe.

(1) Remove the fuel injector holder from one side of flange section (A) of the fuel pipe.

(2) While holding one side of fuel injector holder (B) you removed in step (1) by finger, remove the other side of fuel injector holder from the flange section (C) of the fuel pipe.

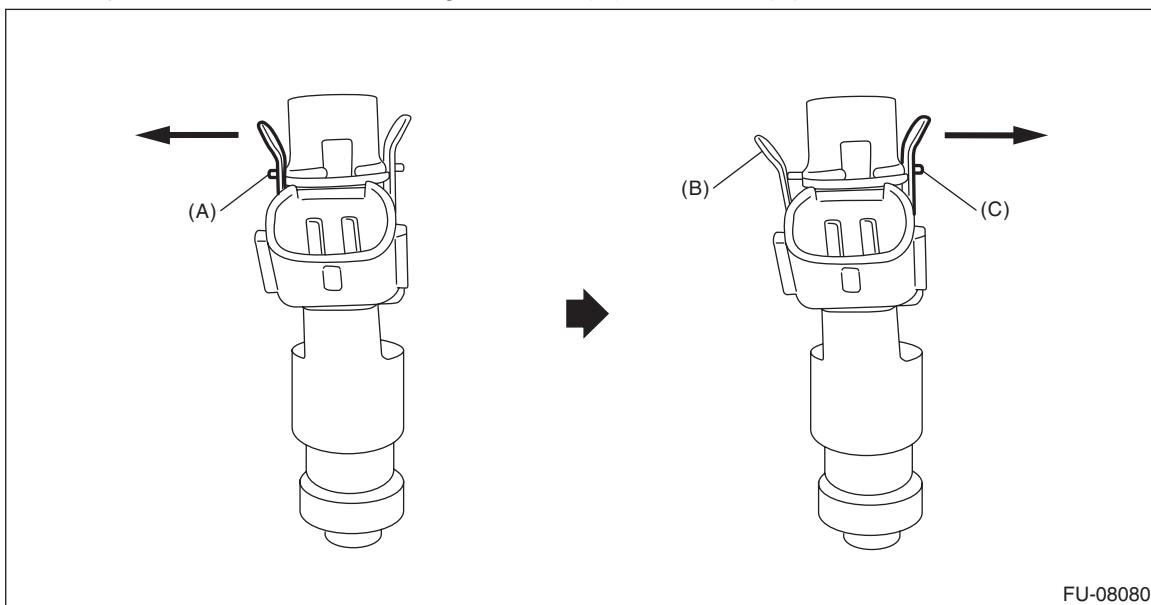

(3) Remove the fuel injector holder from the fuel pipe and fuel injector, and remove the fuel injector from the fuel pipe.

(4) Remove the fuel injector on the LH side in the same manner.

Fuel Injector


FUEL INJECTION (FUEL SYSTEMS)

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

- Use new fuel injector holder, O-rings, rubbers and seal rings.
- Install the fuel injector so that the connector joint faces the connector rotation stopper side of the fuel pipe.
- Securely put the flange section of fuel pipe into the groove of fuel injector holder.

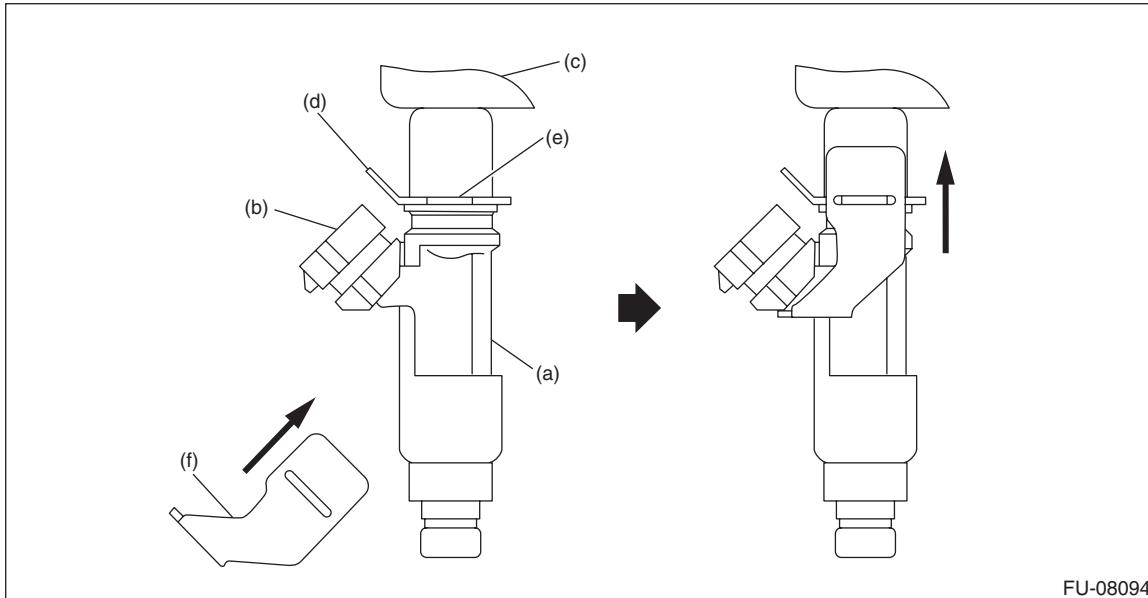

(a) Fuel injector (b) Connector joint (c) Fuel pipe


(d) Connector rotation stopper (e) Flange section

(c) Fuel pipe

(f) Fuel injector holder

Tightening torque:

C: INSPECTION

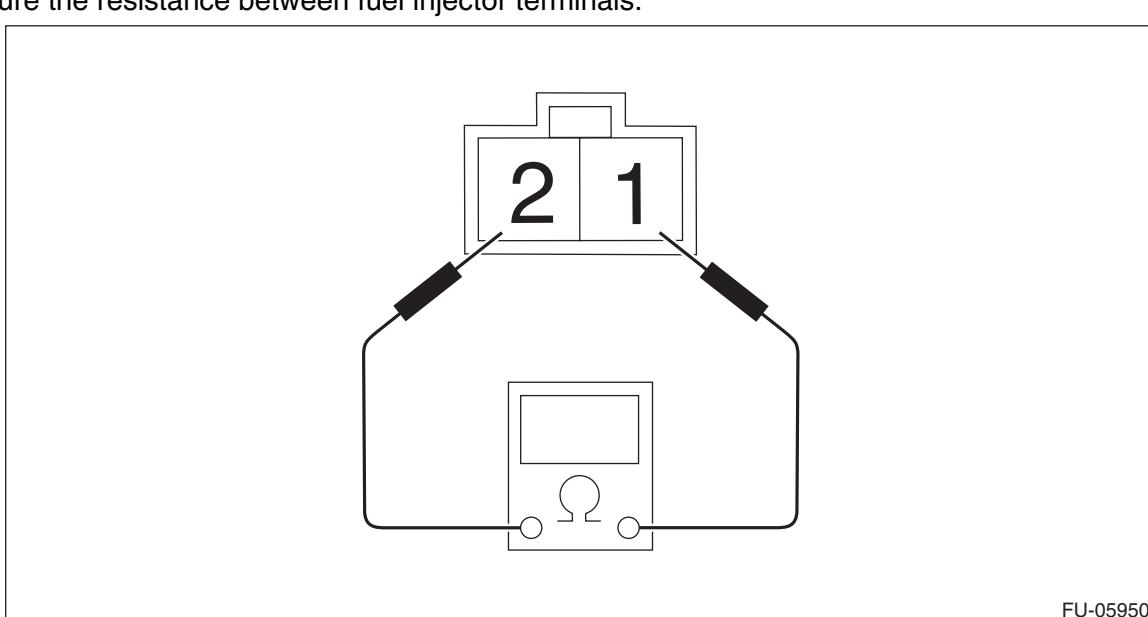

FU-05950

Terminal No.	Standard
1 and 2	Approx. 12.0 Ω (when 20°C (68°F))