


## Front Oxygen (A/F) Sensor

FUEL INJECTION (FUEL SYSTEMS)

### 18. Front Oxygen (A/F) Sensor

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the radiator sub fan and fan motor assembly. <Ref. to CO(H4DO)-67, REMOVAL, Radiator Sub Fan and Fan Motor.>
- 3) Lift up the vehicle.
- 4) Remove the under cover. <Ref. to EI-23, REMOVAL, Front Under Cover.>
- 5) Disconnect the front oxygen (A/F) sensor connector, and remove the clip holding the front oxygen (A/F) sensor harness.

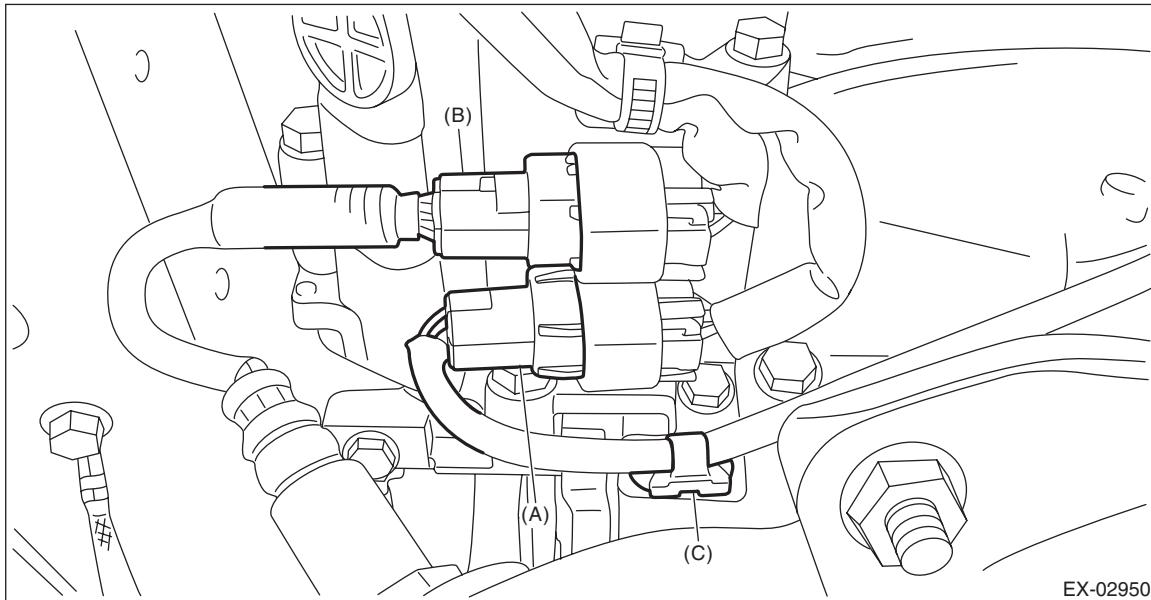

(A) Front oxygen (A/F) sensor connector

(B) Rear oxygen sensor connector

(C) Clip

6) Lower the vehicle.

7) Apply spray-type lubricant to the threaded portion of front oxygen (A/F) sensor, and leave it for one minute or more.


## Front Oxygen (A/F) Sensor

FUEL INJECTION (FUEL SYSTEMS)

- 8) Remove the front oxygen (A/F) sensor.

**CAUTION:**

When removing the front oxygen (A/F) sensor, wait until exhaust pipe cools, otherwise it will damage the exhaust pipe.

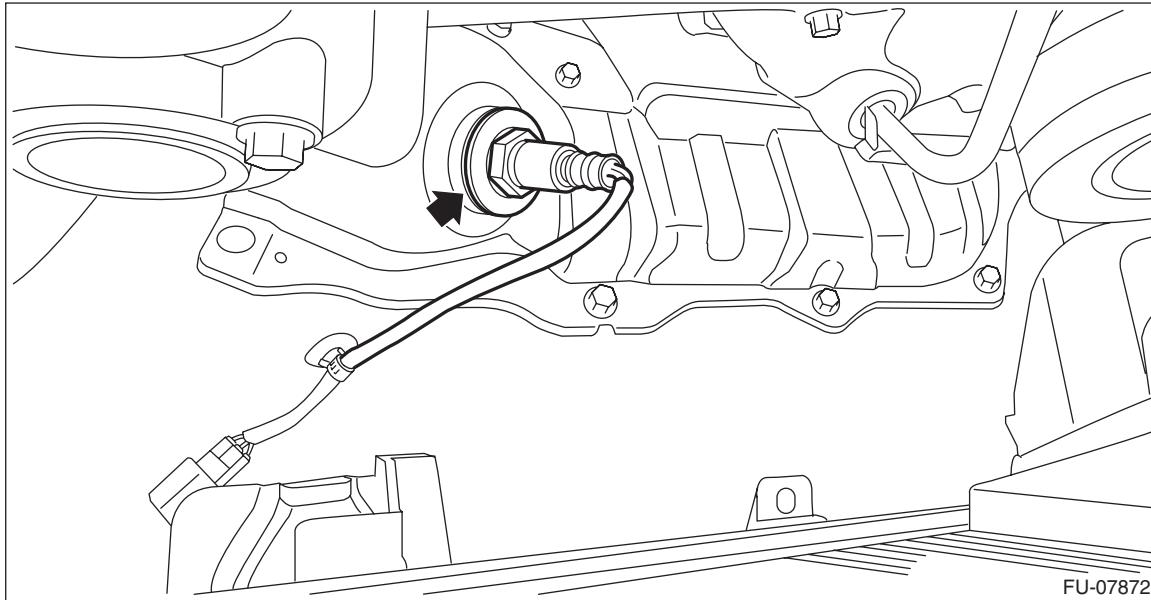

# Front Oxygen (A/F) Sensor

FUEL INJECTION (FUEL SYSTEMS)

## B: INSTALLATION

### CAUTION:

If lubricant is spilt over the exhaust pipe, wipe it off with cloth to avoid emission of smoke or causing a fire.

1) Before installing front oxygen (A/F) sensor, apply anti-seize compound only to the threaded portion of front oxygen (A/F) sensor to make the next removal easier.

### CAUTION:

Never apply anti-seize compound to the protector of front oxygen (A/F) sensor.


### Anti-seize compound:

**NEVER-SEEZ NSN, JET LUBE SS-30 or equivalent**

2) Install the front oxygen (A/F) sensor.

### Tightening torque:

**21 N·m (2.1 kgf·m, 15.5 ft-lb)**

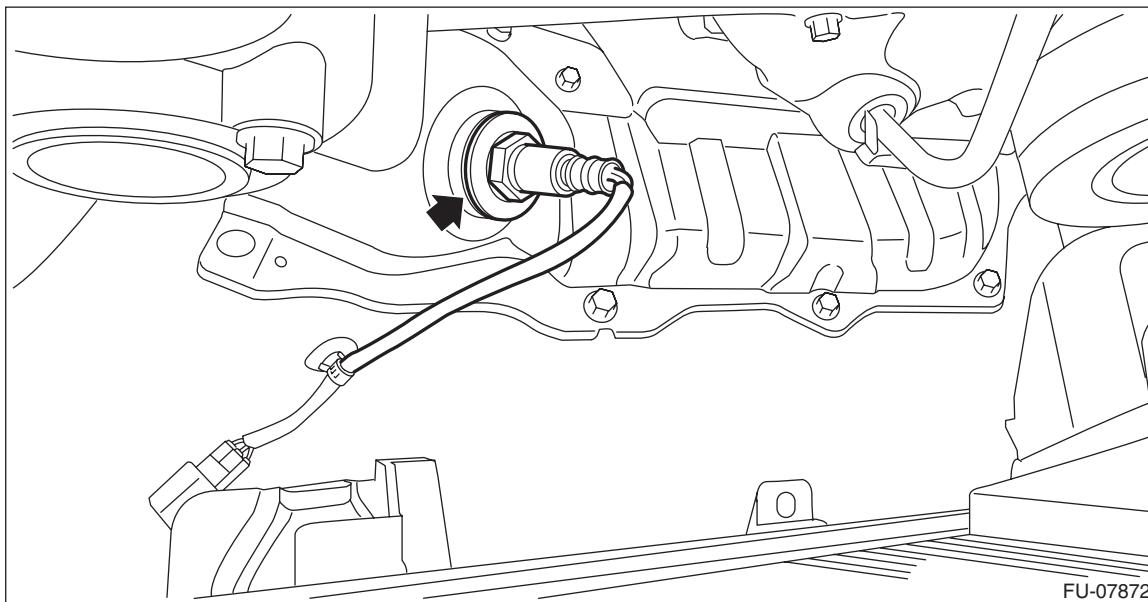


3) Lift up the vehicle.

# Front Oxygen (A/F) Sensor

## FUEL INJECTION (FUEL SYSTEMS)

4) Connect the front oxygen (A/F) sensor connector, and secure the front oxygen (A/F) sensor harness by using the clip.

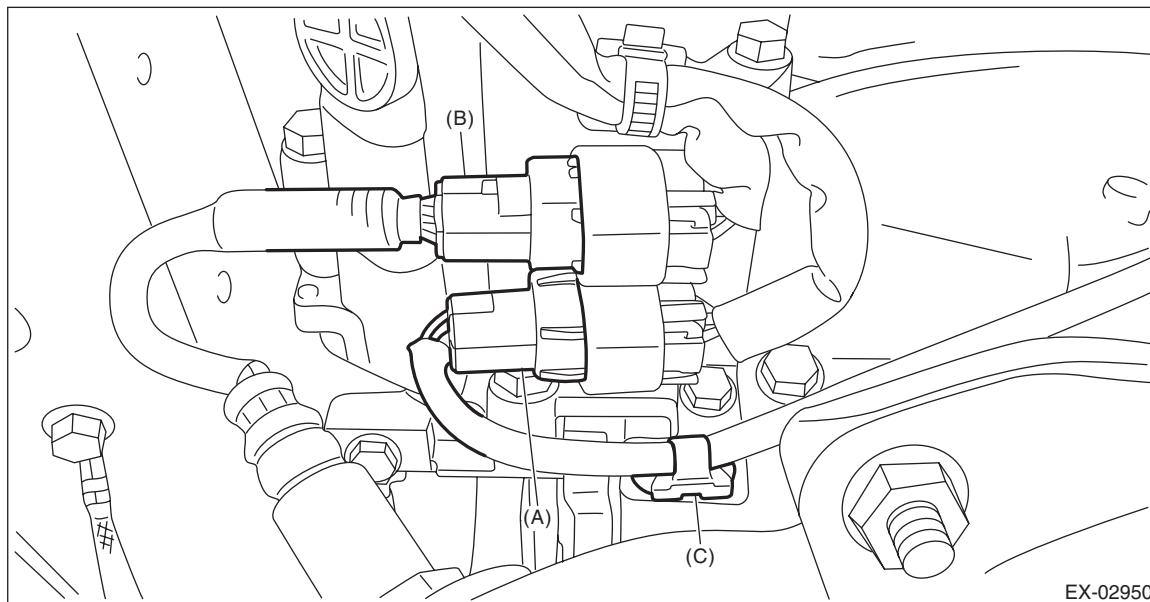


(A) Front oxygen (A/F) sensor connector      (B) Rear oxygen sensor connector      (C) Clip

5) Install the under cover. <Ref. to EI-23, INSTALLATION, Front Under Cover.>  
6) Lower the vehicle.  
7) Install the radiator sub fan and fan motor assembly. <Ref. to CO(H4DO)-67, INSTALLATION, Radiator Sub Fan and Fan Motor.>  
8) Connect the battery ground terminal.

## C: INSPECTION

1) Check that the front oxygen (A/F) sensor has no deformation, cracks or other damages.  
2) Measure the resistance between front oxygen (A/F) sensor terminals.

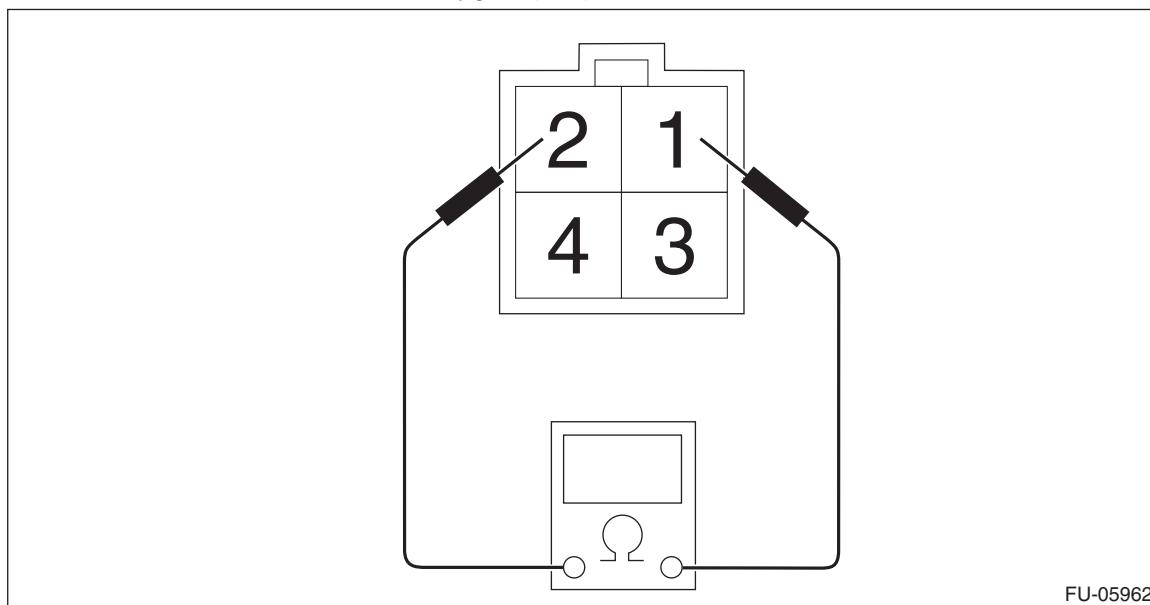

Terminal No.	Standard
1 and 2	$2.2^{+0.45}_{-0.22} \Omega$ (when 20°C (68°F))