


22.IG Relay

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-61, REMOVAL, Glove Box.>
- 3) Remove the IG relay from the relay block.

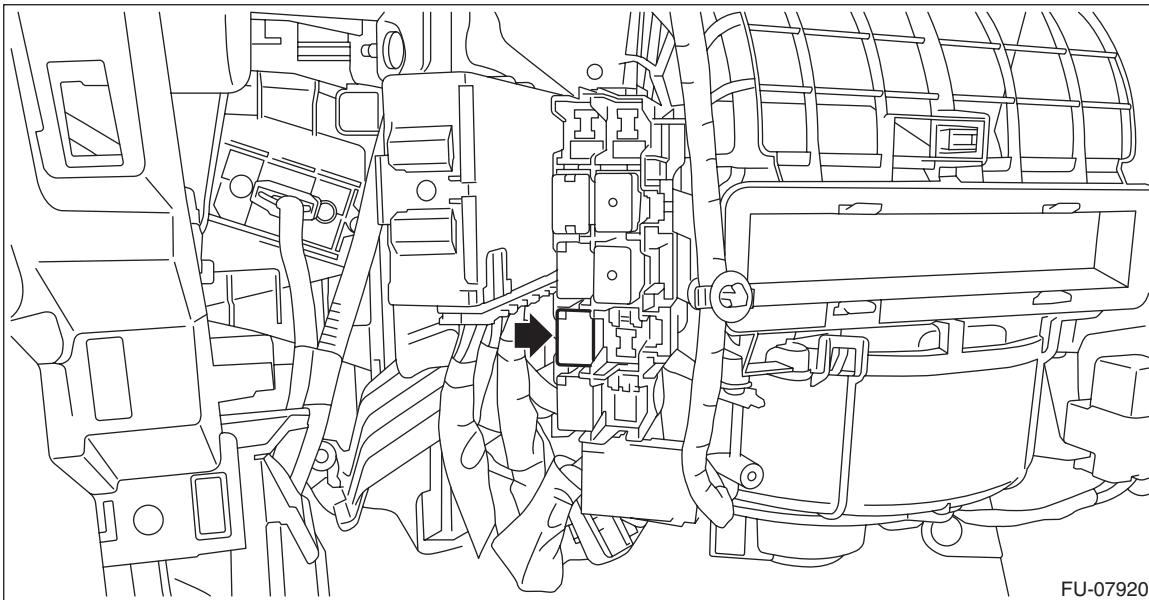

B: INSTALLATION


Install in the reverse order of removal.

IG Relay

FUEL INJECTION (FUEL SYSTEMS)


C: INSPECTION

- 1) Check that the IG relay has no deformation, cracks or other damages.
- 2) Measure the resistance between the IG relay terminals.

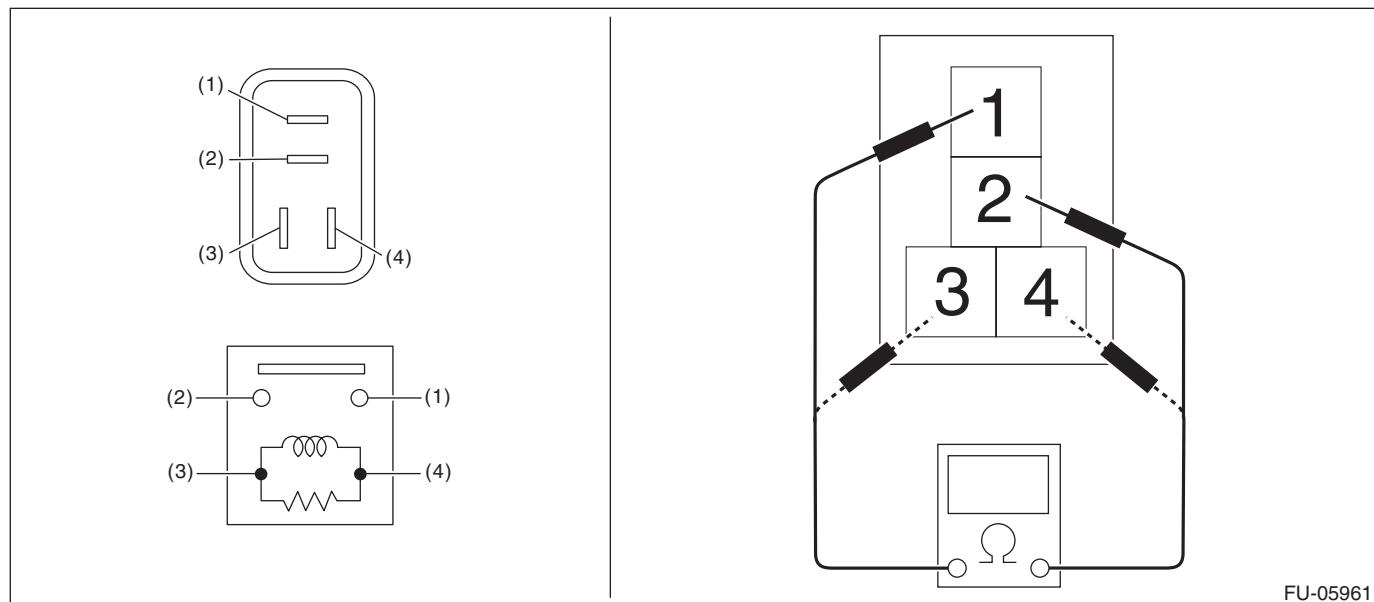

| Terminal No. | Standard |
|--------------|------------------------------------|
| 1 and 2 | 1 MΩ or more |
| 3 and 4 | 130.4 — 230.8 Ω (when 20°C (68°F)) |

- 3) Connect battery positive terminal to terminal No. 3 and battery ground terminal to terminal No. 4, and measure the resistance between IG relay terminals.

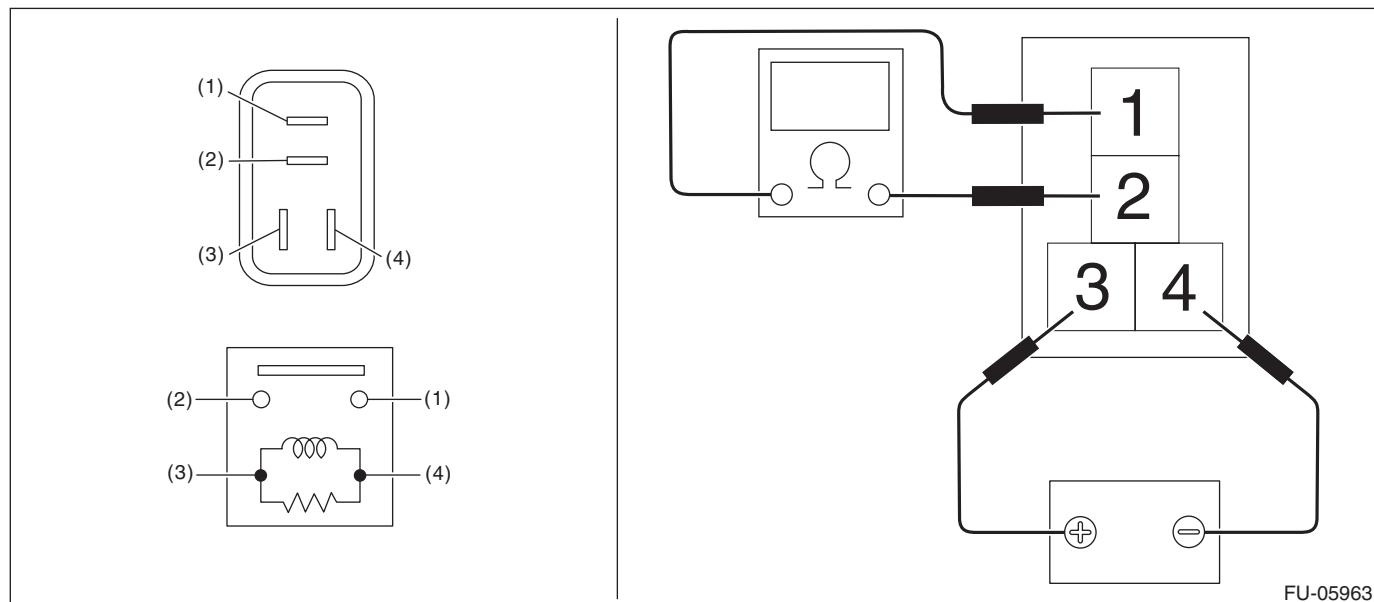

| Terminal No. | Standard |
|--------------|---------------|
| 1 and 2 | Less than 1 Ω |